


MOTORCYCLE H4 WIRE HARNESS

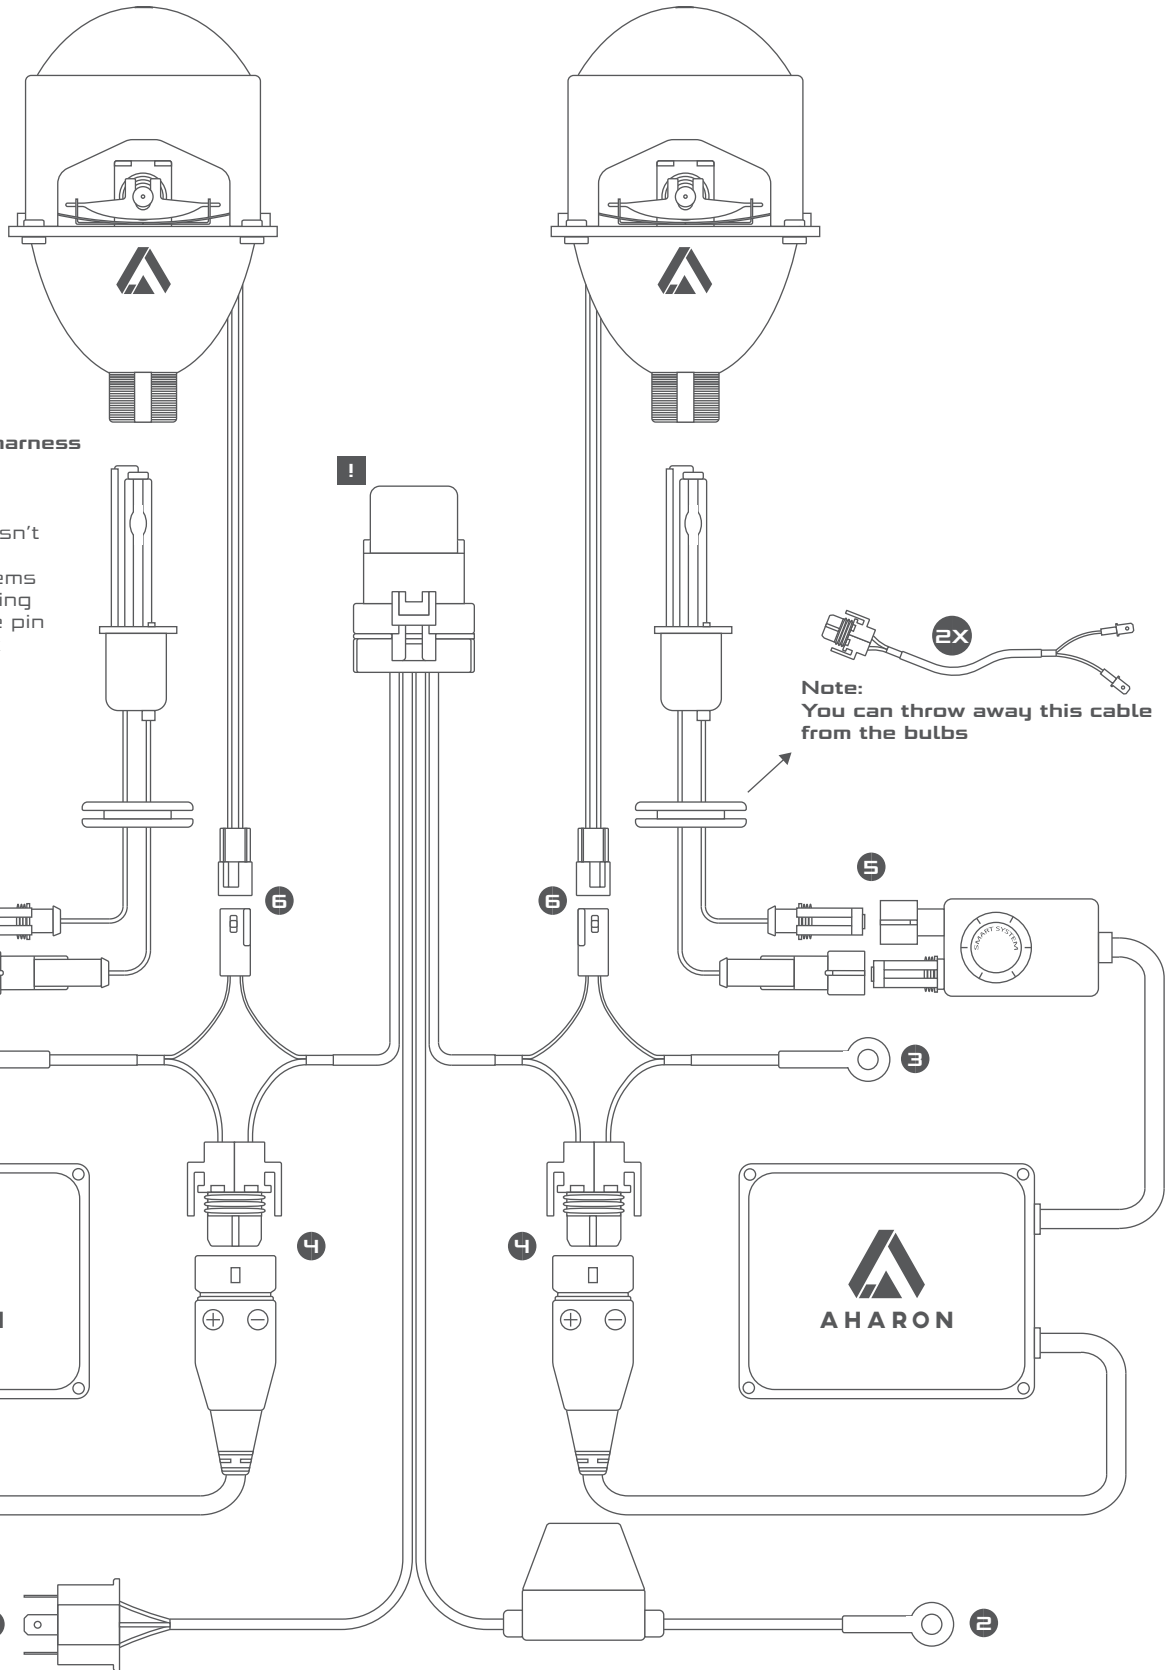

! When using this H4 wireharness with a time delay relay: In some motorcycles, the combination of the H4 wiring and the time delay relay doesn't work properly. When you are experiencing electrical problems like the motorcycle not shutting off, please remove the middle pin from the relay, this should fix the problem.

Note: You can throw away this cable from the bulbs

- 1. CONNECT TO H4 FEED FROM MOTORCYCLE
- 2. CONNECT TO + OF BATTERY
- 3. CONNECT TO - OF BATTERY / CHASSIS

- 4. CONNECT TO BALLAST
- 5. CONNECT BALLAST TO ROUND BULB CONNECTORS
- 6. CONNECT SOLENOID CABLE TO HIGH BEAM CONNECTOR