
Instructions

PLUG & PLAY HID/XENON KIT



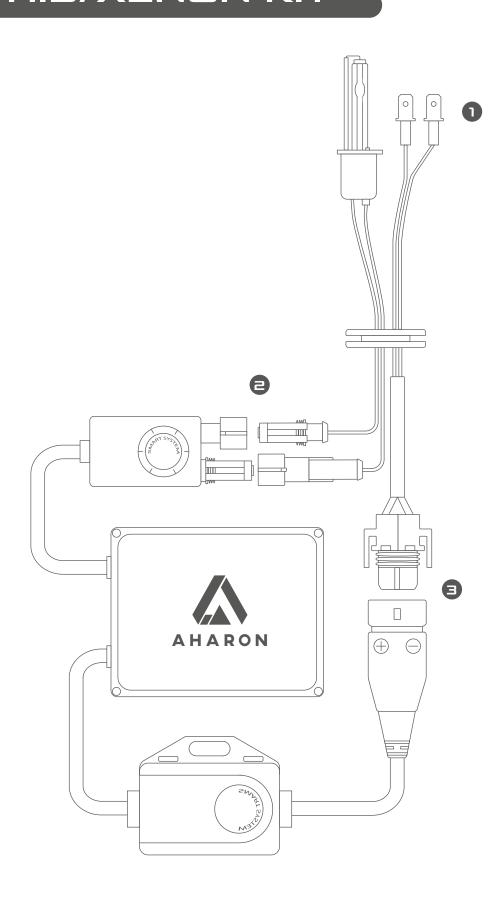

- 1. CONNECT TO THE CONNECTOR OF THE LOW BEAM
- 2. CONNECT TO THE ROUND (AMP) CONNECTORS OF THE BALLAST
- 3. CONNECT TO THE OVAL (9006) CONNECTOR OF THE BALLAST