

INSTALLATION INSTRUCTIONS

Porsche 911 / 996.1 / 986.1 boxster - Bi-LED kit



Instructions

The LED kit comes with all the necessary parts, so you don't need anything else. Please note that we do not have a separate installation video for the LED projector, but all the steps are almost the same as for the xenon kit. Scan the QR code below or click on the YouTube logo:

Porsche 996.1 - part 1:





Porsche 996.1 - part 2:



A few steps are different:

- (0:00 min to 26:00 min) these steps are exactly the same.
- (26:00 min to 30:00 min) mounting the brackets to the projectors is a little different than on the video, see the images below:

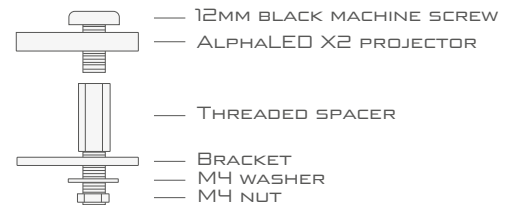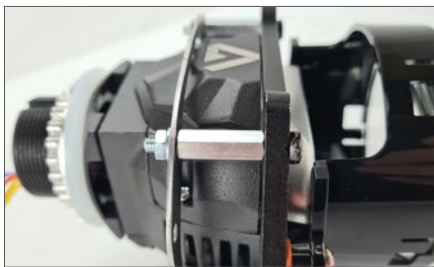

The rest of the video can be used to install the shroud and connect the wiring for the shroud. The wiring for the LED projector is a little different. This kit includes what is called an H7-9006 adapter cable (#2) that can be used to connect the low beam connector to the new Bi-LED projector.



- #1 Connect to the oval connector from the Bi-LED projector. These wires are blue and red.
- #2 Connect to the low beam light connector. These wires are brown and white and are located on the inside of the headlights.

Follow the instructions below to connect the high beam function:



- #1 Connect to the connector for high beam. These wires are brown and yellow and are located on the inside of the headlights.
- #2 Connect to the high beam cable attached to the Bi-LED projector. These cables are yellow.

! Important ! (39:00 min) Please note that you do not need to drill a hole in the plastic cover. All parts of this Retrofit kit can be placed on the inside of the headlight.