

# INSTALLATION INSTRUCTIONS

Porsche 911 / 996.2 / 986.2 FL - BiLED kit



## Instructions



The LED kit comes with all the necessary parts, so you don't need anything else. Please note that we do not have a separate installation video for the LED projector, but all the steps are almost the same as for the xenon kit. Scan the QR code below or click on the YouTube logo:

Porsche 996.2:



### A few steps are different:

- Porsche (0:00 min until 10:36 min) these steps are exactly the same.
- (10:36 min until 13:03 min) mounting the brackets to the projectors is a bit different than on the video, please see the pictures below:

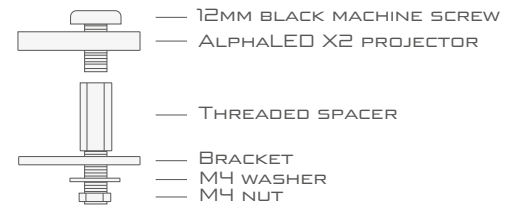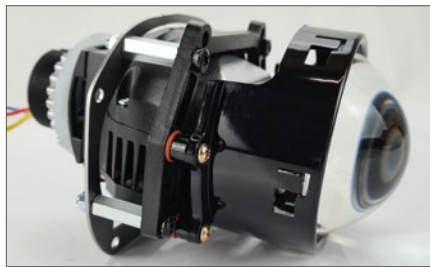

The video from 25:30 min can be skipped, use the instructions below instead:


This kit includes a so called H7-9006 adapter cable (#2) which can be used to connect the low beam connector to the new Bi-LED projector.



- #1 Connect to the oval connector from the Bi-LED projector. These wires are blue and red.
- #3 Connect to the low beam connector. These wires are brown and yellow and are positioned on the inside of the headlights.

### Follow the instructions below to connect the high beam function:

Starts at (18:00 min) in the installation video

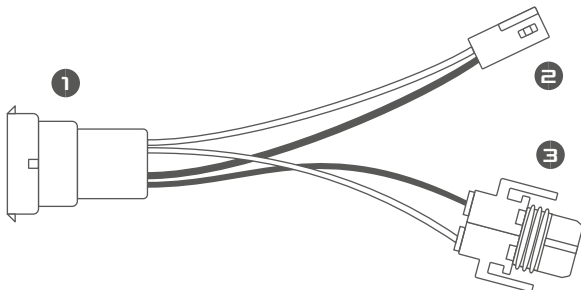

- #1 Connect to the high beam connector. These wires are brown and white and are positioned on the inside of the headlights.
- #2 Connect to the high beam cable that is attached to the Bi-LED projector. These cables are yellow.
- #3 Connect to the halogen high beam bulb.