


# JD-2 NOTCHMASTER REACH AROUND ARM INSTALLATION INSTRUCTIONS



Install the new arm in the factory hole with the degree indicator at zero degrees. Using the new hole to the left on the Reach Around Arm as a template, mark the location of the ½" diameter hole to be drilled in the tube notcher. Then install the new arm with the provided fasteners. It is that easy.

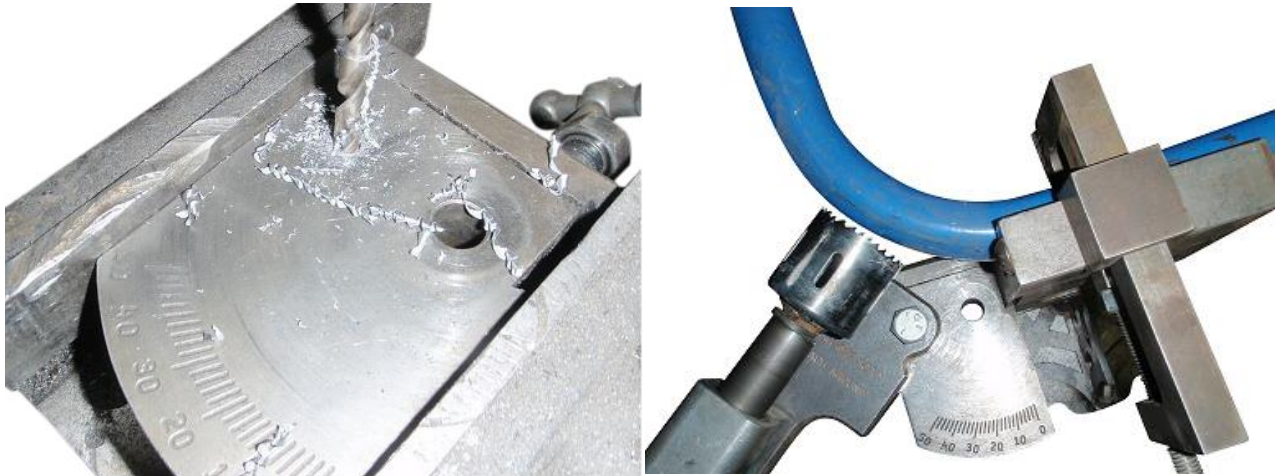

Thank you for the order and visit Swag Off Road on [Facebook](#) & [Instagram](#).

A promotional banner for SWAG OFFROAD.COM. At the top, it reads "INNOVATIVE FABRICATION TOOLS & OFFROAD EQUIPMENT". Below this, there are five images of products: a Porta-band Stand, a Drop Down Tailgate, a DIY Press Brake, HF Tubing Rollers, and a Baja Bin. At the bottom, there is a large SWAG OFFROAD.COM logo, the phone number 541-915-2775, a Facebook icon with the text "JOIN US ON facebook", and the website URL WWW.SWAGOFFROAD.COM.

INNOVATIVE FABRICATION TOOLS & OFFROAD EQUIPMENT

Porta-band Stand Drop Down Tailgate DIY Press Brake HF Tubing Rollers Baja Bin

541-915-2775

JOIN US ON facebook WWW.SWAGOFFROAD.COM

**SWAG**  
OFFROAD.COM

[WWW.SWAGOFFROAD.COM](http://WWW.SWAGOFFROAD.COM)

“DOING ORDINARY EXTRAORDINARY”