

Custom Camera Building



www.customcamerabuilding.com

35mm to 120 film adapter

Used to adapt 35mm film in canisters for use in medium format cameras.
Made from ABS for maximum strength and durability.



Shown in CCB pinhole camera and Hasselblad back:

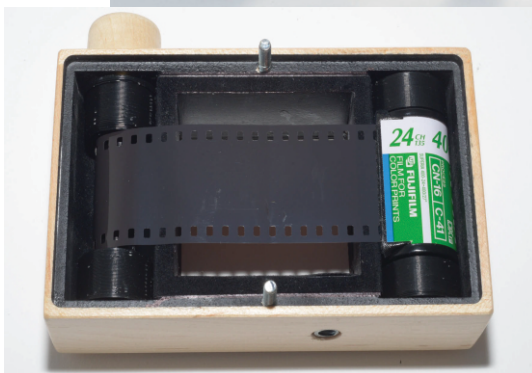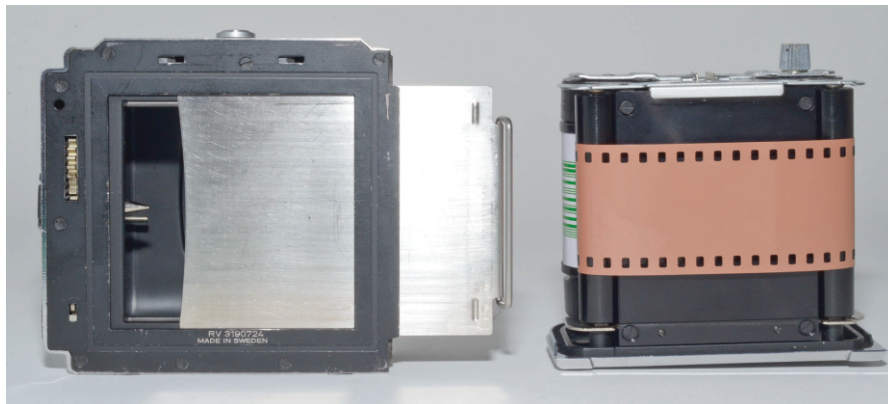

Film not included in the set. To use, insert top and bottom adapter into film canister. Full set shown in the first picture. Set with top and bottom adapter only is used with standard 120 spool as take-up spool. Film needs to be loaded carefully or taped to the spool. Not compatible with plastic bulk load spools.

Please contact at info@customcamerabuilding.com for support or general questions.

How to make a film leader for 35mm to 120 film adapter
Any paper could be used

Draw these lines to match 35mm film width.
Cut along these lines and discard outside pieces.
There should be 35mm strip left.
Load the same as 120 film in automatic backs.

Start measuring 4-5cm beyond film canister

Green tape is shown for illustration purposes only.
It's the best practice to use thin tape to attach film.
Regular thin clear tape is good choice.
Attach tape on both sides and wind paper in as much as needed.

canister

19cm from start arrow to film start

UNEXPOSED

Arrows and lines show where film starts.

Alignment mark for loading in automatic backs.
It could look different with different brand of film.

This piece between two vertical lines needs to be cut out.

Shown for illustration purposes only.

19 cm should be the distance between point marked on the left side (4-5cm left of can.) and alignment mark.

Backing paper shown here is from Ilford HP5 120 film roll

