## LUXRITE.

# 2" RECESSED GIMBAL - 5 CCT SELECTABLE LR23236, LR23242

**IMPORTANT:** READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE.

**SAFETY:** FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE TO LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICIAN.

**WARNING:** MAKE CERTAIN POWER IS OFF FROM THE ELECTRICAL PANEL BEFORE STARTING INSTALLATION OR ATTEMPTING ANY MAINTENANCE. INDOOR INSTALLATION ONLY.

**TOOLS REQUIRED:** SAW, MEASURING TAPE, ELECTRICAL WIRING (USE TAPE AND GAUGE SUITABLE FOR APPLICATION TO CONNECT THE FIXTURES.

#### PRE-INSTALLATION:

- 1. Turn power OFF from the electrical panel before starting installation.
- 2. Locate a suitable position to place the fixture and open in accordance to the cut-hole dimensions (refer to Hole Cut Table for appropriate size)
- 3. Run electrical wire from the switch (power supply) through the mounting hole -use NMD90 Romex or BX cable.

#### **DRIVER WIRING:**


- 1. Open the hardwire box swing cover and remove the appropriate knockout(s). (Fig.1)
- 2. Insert the electrical supply cable through the knockout and secure with a cable connector (sold sepparately). **(Fig.1)**
- 3. Using wire nuts, connect green ground wire of cable to green wire on box. Connect black wire of cable to black wire of box. (Fig.1)
- 4. Place all wiring and connections back into the box and close the cover. (Fig.2)
- 5. Connect Gimbal to Driver. (Fig.3)
- 5. Use switch to select Color Temperature (Fig.4)
- 6. Insert hardwire box through the mounting hole. (Fig.5)


**NEW CONSTRUCTION APPLICATIONS:** Hardwire box shall be firmly secured to studs, joists, or similar fixed structura units.


**REMODEL APPLICATIONS:** Do not require the hardwire box to be firmly secured after the mounting plates, studs, joists, or structural units have been concealed.


### FIXTURE INSTALLATION:


- 1. Connect the fixture to the hardwire box by inserting and twisting the male/female connectors
- 2. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling.
- 3. Once assembly is complete, turn on power to confirm fixture is working properly.

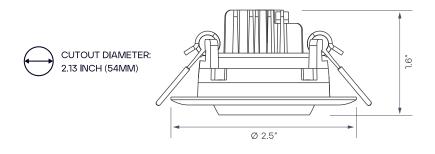


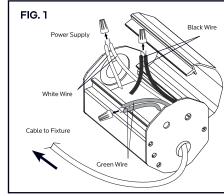

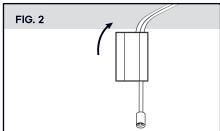

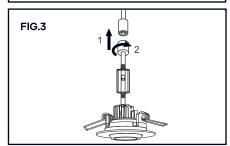

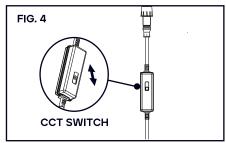



732-882-1500 **♦** luxrite.com