

2" MODULE INTERCHANGEABLE TRIM - 5CCT SELECT LR25020,LR25021

IMPORTANT:

READ ALL INSTRUCTIONS BEFORE INSTALLING FIXTURES. KEEP FOR FUTURE REFERENCE. SAFETY: FOR YOUR SAFETY, THIS FIXTURE MUST BE WIRED IN ACCORDANCE TO LOCAL ELECTRICAL CODES AND ORDINANCES. ALL WORK SHOULD BE DONE BY A QUALIFIED ELECTRICAN

WARNING: MAKE SURE POWER IS OFF FROM THE ELECTRICAL PANEL BEFORE STARTING INSTALLATION OR ATTEMPTING ANY MAINTENANCE. INDOOR INSTALLATION ONLY.

TOOLS REQUIRED: SAW, MEASURING TAPE, ELECTRICAL WIRING (USE TAPE AND GAUGE SUITABLE FOR APPLICATION TO CONNECT THE FIXTURES.

PRE-INSTALLATION:

- 1. Turn power OFF from the electrical panel before starting installation.
- 2. Locate a suitable position to place the fixture and open in accordance to the cut-hole dimensions (refer to Hole Cut Table for appropriate size)
- 3. Run electrical wire from the switch (power supply) through the mounting hole -use NMD90 Romex or BX cable.

DRIVER WIRING:

- 1. Open the hardwire box swing cover and remove the appropriate knockout(s).
- 2. Insert the electrical supply cable through the knockout and secure with a cable connector (sold sepparately).
- 3. Using wire nuts, connect green ground wire of cable to green wire on box. Connect black wire of cable to black wire of box. (Fig. 1)
- 4. Place all wiring and connections back into the box and close the cover.
- 5. Insert hardwire box through the mounting hole. (Fig. 2)


NEW CONSTRUCTION APPLICATIONS: Hardwire box shall be firmly secured to studs, joists, or similar fixed structura units.


REMODEL APPLICATIONS: Do not require the hardwire box to be firmly secured after the mounting plates, studs, joists, or structural units have been concealed.

FIXTURE INSTALLATION:

- 1. Select Trim and push onto module (Fig. 3)
- 2. Connect the fixture to the hardwire box by inserting and twisting the male/female connectors and use switch to select Color Temperature. (Fig. 4)
- 2. Push spring loaded clips on the fixture upwards and insert fixture base into the mounting hole. Release the clips and fixture will be pulled flush to the ceiling. (Fig. 5)
- 3. Once assembly is complete, turn on power to confirm fixture is working properly.



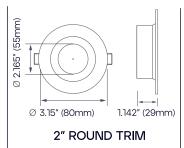



2" SQUARE TRIM

2" MODULE-CUTOUT: Ø2.83" (72mm)

