

4' T8 RETROFIT TUBE - 5 CCT & 3 WATTAGE SELECTABLE LR34238


Please keep this installation guide for future reference. Modifications to the product void the warranty. Suitable to replace fluorescent lamps as specified on the product label.

WARNING:

- RISK OF FIRE OR ELECTRIC SHOCK** - LED Retrofit Kit Installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.
- RISK OF FIRE OR ELECTRIC SHOCK** - Install this kit only in the luminaires that have the construction features and dimensions shown in the photographs and/or drawings and where the input rating of the retrofit kit does not exceed the input rating of the luminaire.
- DO NOT make or alter any open holes in an enclosure of wiring or electrical components during kit installation.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.
- Installers should not disconnect existing wires from lampholder terminals to make new connections at lampholder terminals. Instead installers should cut existing lampholder leads away from the lampholder and make new electrical connections to lampholder lead wires by employing applicable connectors.
- For a linear tubular LED lamp conversion, there shall be text of a diagram showing how the supply connections were made to the lampholders so the correct connections will be made to the lamp when the lamp is installed or replaced.
- This retrofit kit is accepted as a component of a luminaire where the suitability of the combination shall be determined by authorities having jurisdiction.
- If the tube is installed as Type B, the luminaire, once modified as retrofit fixture, will no longer operate fluorescent lamps.

TYPE B - INSTALLATION GUIDE

1. DISCONNECT POWER TO LUMINAIRE

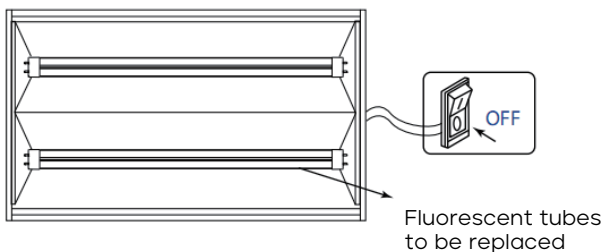


Disconnect power to luminaire or circuit (if possible). Ensure all power is OFF by using a voltmeter or other approved method to confirm.

Disconnect power to luminaire or circuit (if possible). Ensure all power is OFF by using a voltmeter or other approved method to confirm.

2. REMOVE EXISTING TUBE LAMP(S).


- Remove troffer lens, if present.
- Remove existing fluorescent tube by rotating one quarter turn and sliding lamp(s)
- Remove ballast cover. (Cover may be secured with screws or tabs)

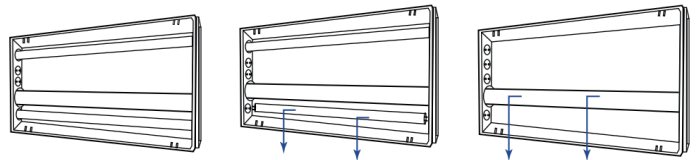

3. RETROFIT LUMINAIRE


Retrofit luminaire with electronic ballast

- Disconnect the wires between starter and ballast according to the below figure.

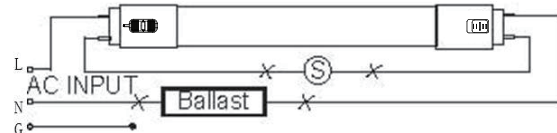

- Connect two wires to branch circuit L and N according to the below figure.


Case 1: Direct AC wiring diagram without dimming

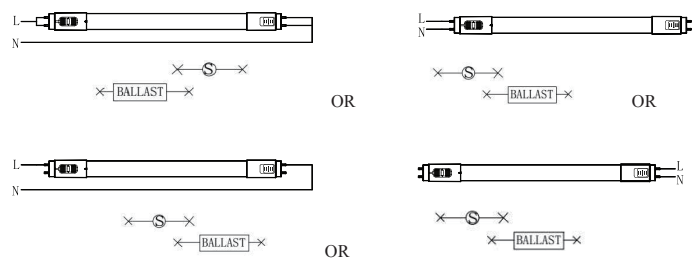

Voltage Input: AC120-277V 50/60Hz

4' T8 RETROFIT TUBE - 5 CCT & 3 WATTAGE SELECTABLE LR34238

Case 2: Direct AC wiring diagram with 0-10V dimming system

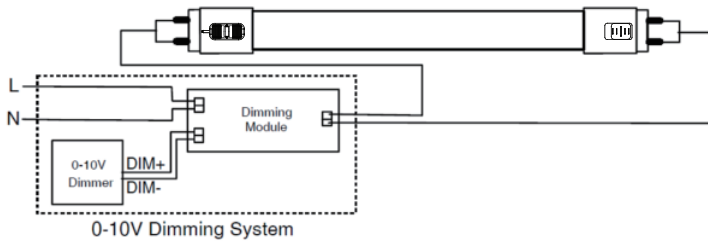

Voltage Input: AC120-277V 50/60Hz

4. INSERT LED TUBES

- Read label on the LED tube to ensure the power end of LED is aligned with powered tube socket, then insert LED lamp in the normal way by sliding pins into sockets and rotating a quarter turn until LED tube locks in place.
- LED lamps are now fully installed.
- Replace troffer lens, if present.
- After modification is complete. Attach the replacement marking and cautionary label to a visible place on the luminaire and keep it visible after installation.

5. RESTORE THE POWER OF LUMINAIRE

Restore power to circuit/luminaire and test light. If necessary, adjust position of LED tube, and enjoy your new LED tube light.