



www.irmmoto.com

sales.irmfg@gmail.com

IRM Moto Elf Pegs

Fits BMW R1100RT, R1100GS, R1100RS, R1100R, R1100S, R1150GS, R1150RS, R1150R

Parts List




- (x1) Left assembly
- (x1) Right assembly
- (x4) M5-0.8 x 25mm bolts

Tool List

- 4mm Allen wrench
- Threadlocker

IRM Moto Elf Peg Installation Instructions

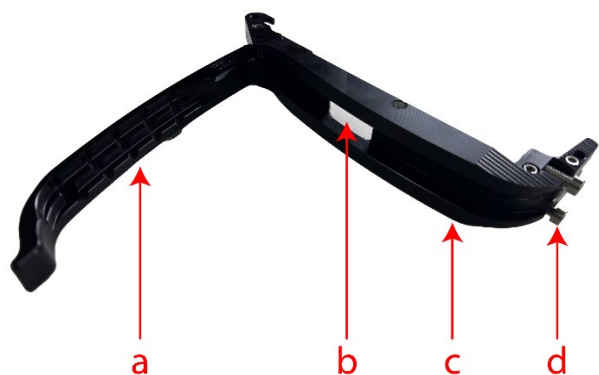

ID	Description
a	Footrest
b	Machined slot
c	Mount
d	M5-0.8 x 25mm bolts

Installation Instructions

1. Remove the spark plug cover from the valve cover
 - Pull outward from the back and lift
 - Make sure the entire cover is removed, along with the rubber catch at the rear of the cylinder head
2. If you have tip over protection installed, remove the front bolt for better access to the valve cover
3. Locate the correct footrest for each side
 - R or L is engraved on the bottom of the footrest
4. Apply threadlocker to the (x2) M5-0.8 x 25mm bolts and start the bolts into the mount
5. Open the footrest and hook the mount over the first cooling fin of the valve cover
6. Apply pressure to the rear of the mount until the mount is fully seated
 - Make sure the spark plug wire rests securely within the machined slot without pinching insulation
7. Tighten the (x2) M5-0.8 x 25mm bolts
8. Reinstall the bolt removed from tip over protection, if applicable
9. Repeat for the opposite side

Care and Maintenance

1. Periodically check the tightness of the mount bolts
2. Apply grease to the pivot and detent mechanism regularly