




Cayenne / Touareg Transfer case skid install

When install our transfer case skid you will need a large drill bit or die grinder to open up the holes in your transmission crossmember to install our supplied rivnuts. Open up these two holes here to install Rivnut.





Make sure hole is just big enough to slip the rivnut inside without being too loose.

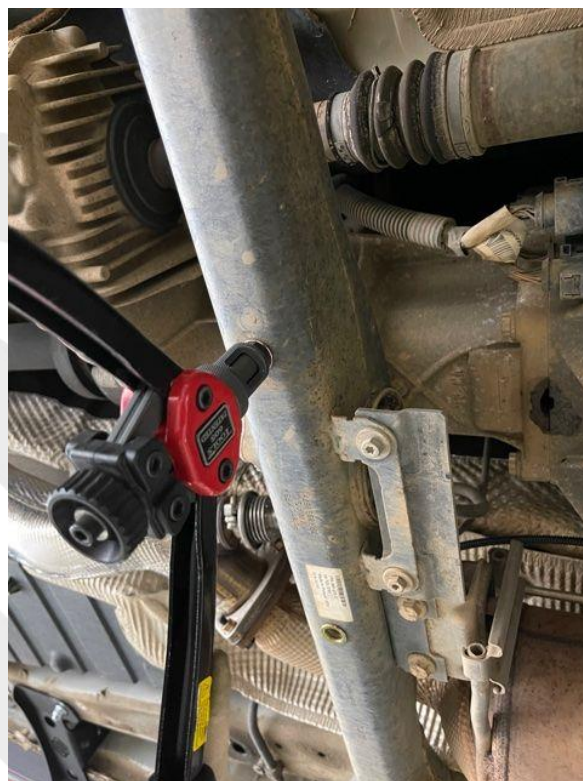

Now You are ready to install the skid.





If you have our 1" subframe drop you can install the skid on the top of the FRONT Skid.

If you do not have subframe drop you can install the transfer case skid against the bottom of the front skid.



Carriage bolts face upwards to keep from damaging the hardware. Lock nuts are installed on top.



Rear bolts receive washer and 2 bolts.



***IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT
PLEASE CONTACT US!***