



Eurowise Cayenne and Touareg Trunk Rail System Insulation Guide

Product includes

Quantity 2 Aluminum Rails Quantity 4 Mounting Brackets Quantity 8 M6 Bolts.








Remove Factory trunk brackets on all four corners using T 30 torque bit.








Needs to be drilled out using 1/8 inch drillbit.

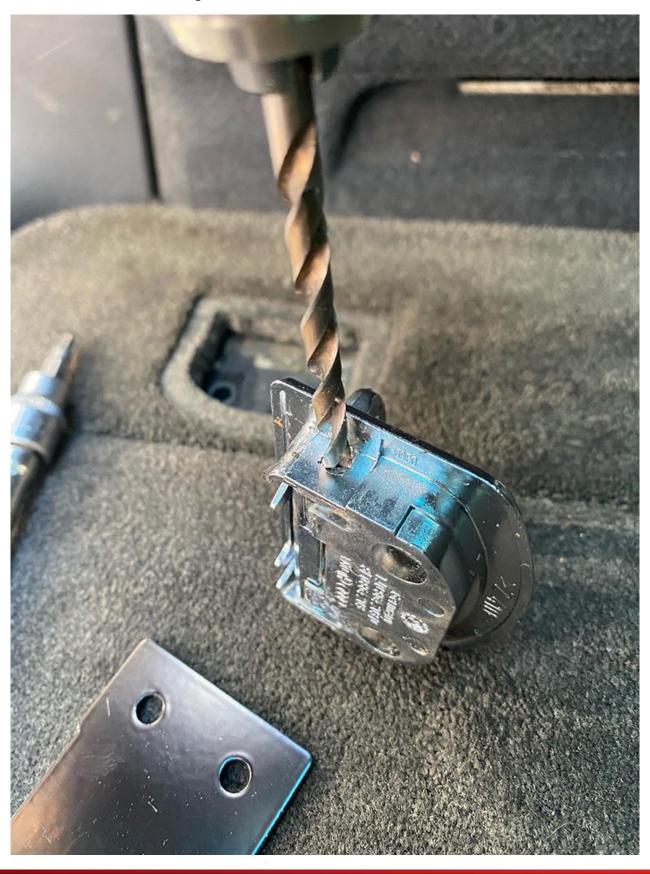






You can punch out using a punch or screwdriver and pull out the rest of the way you will dispose of this and the D shape bracket that is removed.

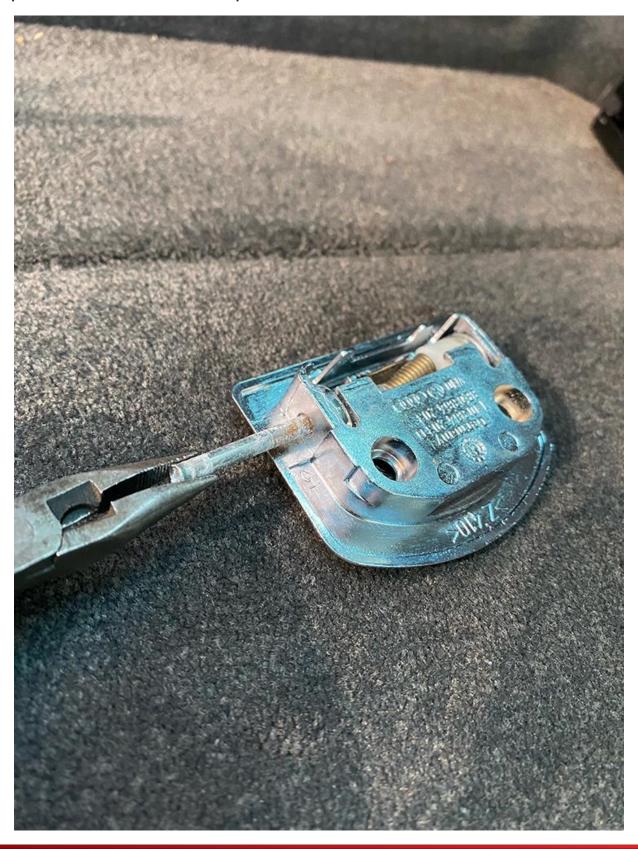






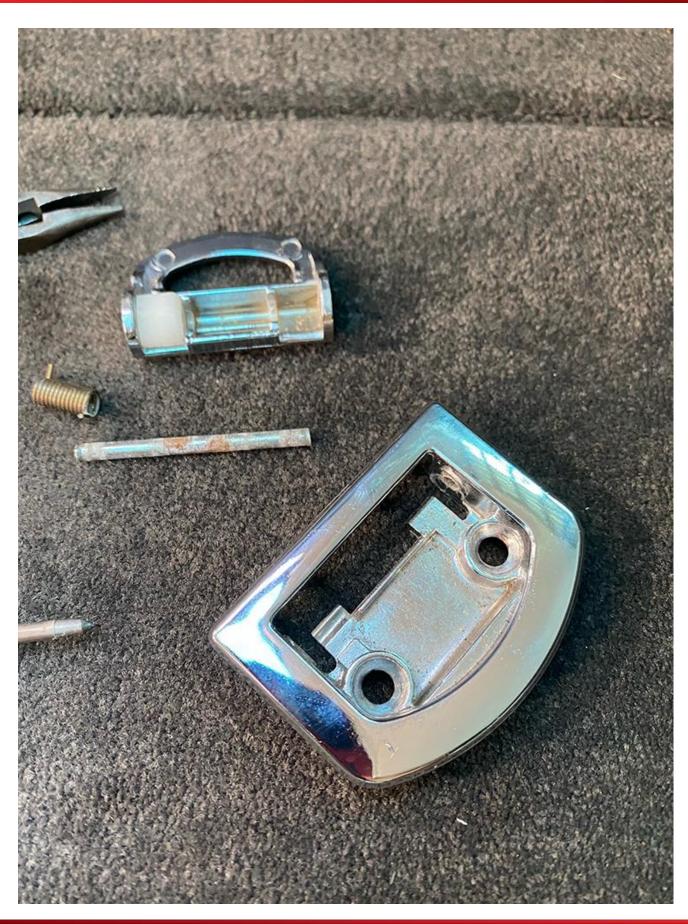






Pass the included bracket through the opening that is created.

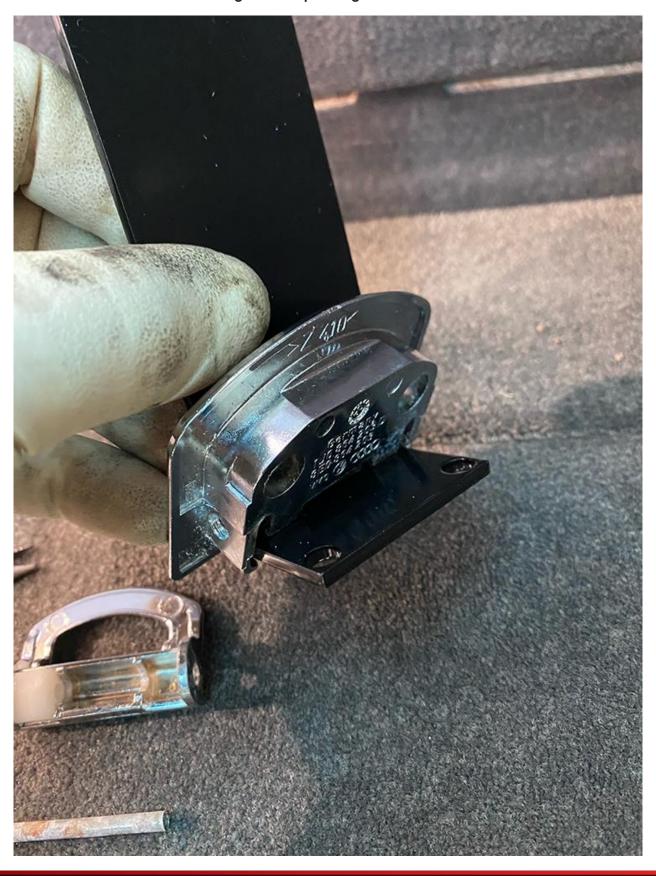





Test fit it before bolting the rail system on to confirm it is clocked in the right position. Do not tighten it down as you will install the rails next.

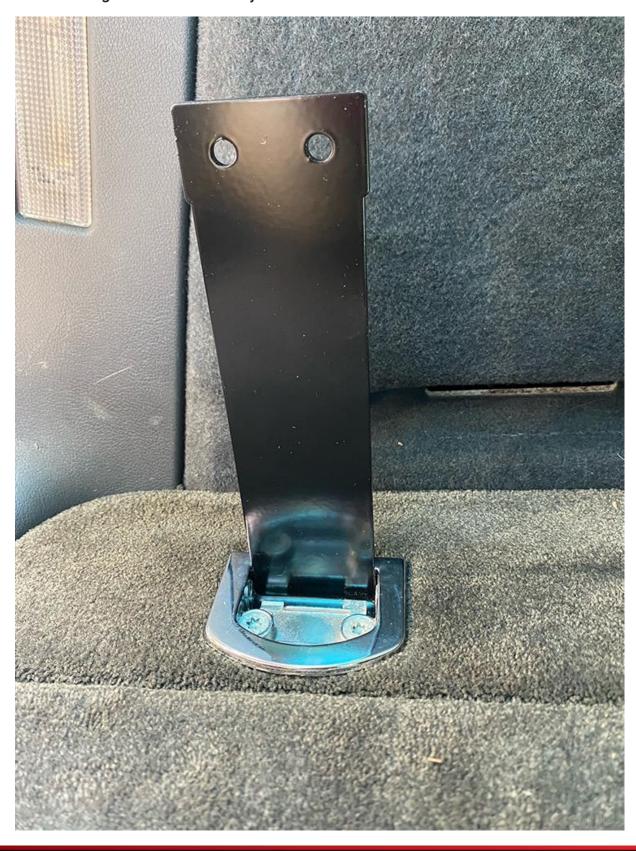











Now install the rails using supplied bolts torque to 10 foot pounds now reinstall into vehicle and reinstall the OEM Torx screws.















If you have a diesel, Touareg model, it will have a different height rail from the photos.

Thanks for your purchase. Email us for any questions.

IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT
PLEASE CONTACT US!