



## G WAGEN TRANSFER CASE SKID INSTALLATION


## W463 G Class Transfer Case Skid

**SKU: EW463TC01** 

Product Link: https://shop.eurowise.com/products/ew463tc01

1. unbolt Qty 4 front transmission bracket bolts marked "A" in photo


2. unbolt 2 rear transmission bolts marked B in photo

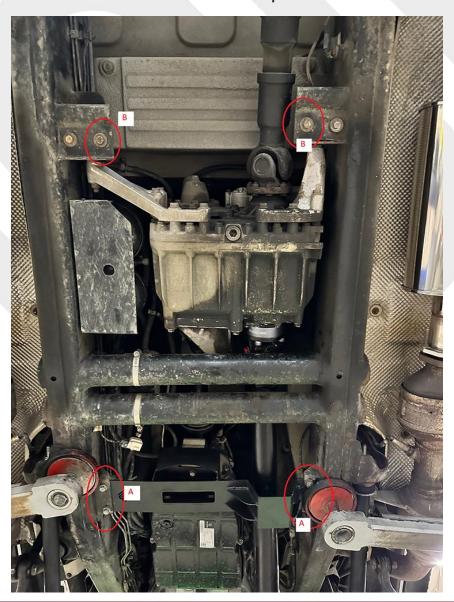





- 3. Install front 4 bolts reusing the OEM bolts first and use a transmission jack or a second hand to help support the reward section of the skid plate.
- 4. Now put the aluminum spacers with the supplied longer bolts in the hole and tighten the rear "B" bolts.
- 5. torque all bolts back down and enjoy!

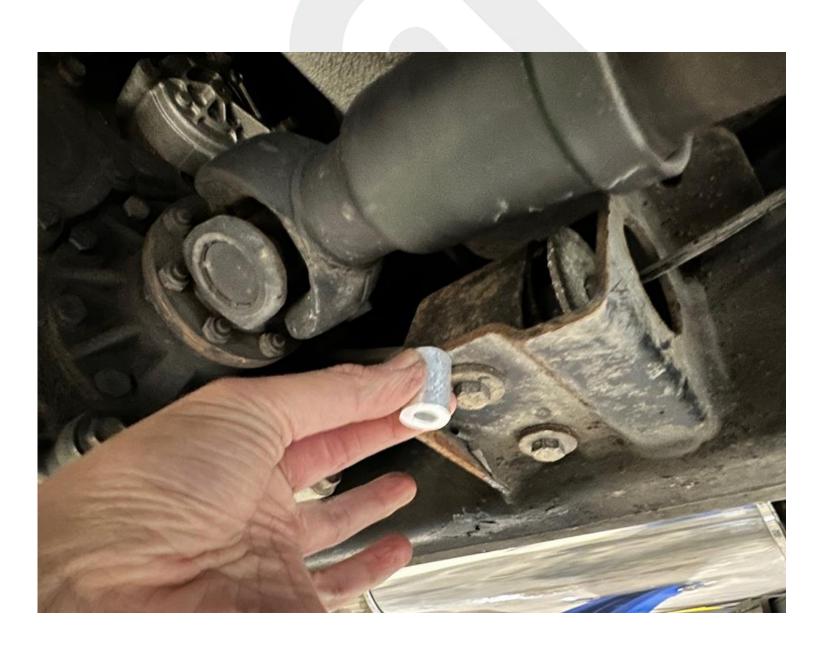







IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT
PLEASE CONTACT US!