
Hybrid Pro Backlit Counter 12

The Hybrid Pro Backlit Counter 12 is a stylish counter solution for the discerning exhibitor, featuring accessible storage with locking door and a backlit light box counter front with SEG push-fit fabric graphics. The waterfall inspired laminate counter top offers an attention grabbing modern look. This custom manufactured counter is available in four laminate finishes and offers a lifetime warranty.

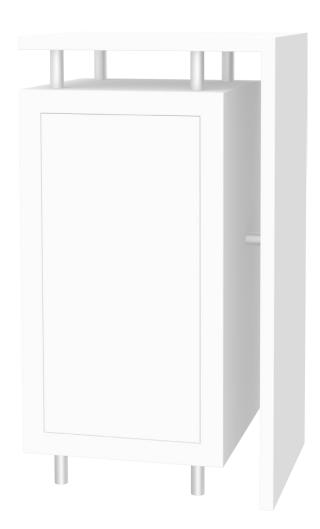

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE. See Graphic Templates for graphic bleed specifications.

features and benefits:

- 30mm aluminum stand offs
- Laminated cabinet with locking doors
- Choice of 4 laminate colors
- 2 T-handle key tools included

- Kit includes an adjustable counter top and one wood crate
- Kit includes one backlit intensity push fit graphic, one push fit opaque liner
- Lifetime hardware warranty against manufacturer defects

dimensions:

Assembled unit:
21.9"w x 38.24"h x 17.72"d
557mm(w) x 971mm(h) x 450mm(d)

Approximate weight:
44 lbs / 20 kgs

Graphic

Refer to related graphic template for more information.

Visit:

www.tradeshowplus.com

Shipping

version)

Packing case(s): 1 HPC-01-B-CRATE

Shipping dimensions: 48"l x 31"h x 27"d 1220mm(l) x 787mm(h) x 686mm(d)

Approximate total shipping weight: 182 lbs / 83 kgs (graphic and lights to be included with backlit version)

(graphic and lights to be included with backlit

additional information:

Graphic material:

Standard: Dye-sublimation Power stretch Backlit: Backlit intensity

Recommended tools:

1/2" hex head wrench keys, not included

When included in a larger kit, a different packaging solution will be listed to accommodate all contents of the kit. Individual packaging no longer provided.

Panel Colors:







black


white



This product may include the following materials for recycle: aluminum, select wood, fabric, cardboard, paper, steel, and plastics.


Connection Methods

Connection Method 1: SILICONE EDGE FABRIC GRAPHICS

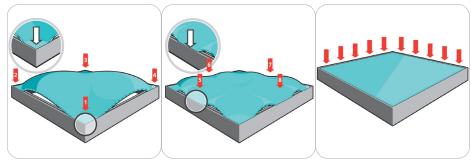

First, insert the silicone edge fabric corners into the frame extrusion fabric graphic channels (points 1 through 4). Second, insert the silicone edge fabric sides into the frame extrusion fabric graphic channels (points 5 through 8). Third, push the remaining silicone edge into the frame extrusion fabric graphic channels.

Connection Method 2: SILICONE EDGE FABRIC OPAQUE LINER

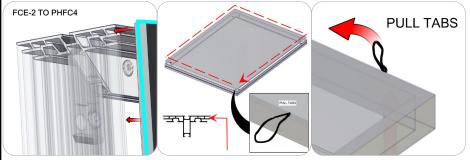

First, insert the silicone edge corners of the opaque liner into the frame extrusion SEG channels. Second, insert the silicone edge fabric sides of the opaque liner into the frame extrusion SEG channels.

Third, the opaque liner will have a pull tab to start removing the panel.

Kit Assembly


Step by Step

Step 1.

Use the provided hex key tool for attaching the 4 set screws. Make sure the set screws are flush to the inside surface and do not protrude into the cabinet. Next, hand tighten the 30mm tube feet onto the set screws.

Reference Connection Method 3 Image A for more details.



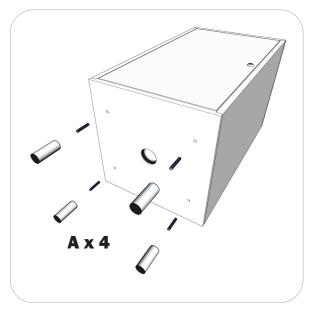


Step 2.

Use the provided hex key tool for attaching the 5 set screws onto the counter top. Next, hand tighten the 30mm tube posts onto the set screws.

Reference Connection Method 3 Image A and B for more details.



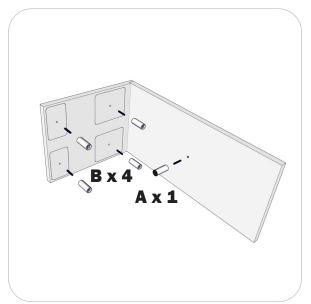

Step 3.

Use a a 1/2" hex wrench (tools not included) for attaching the four 30mm tube posts of the countertop onto the cabinet.

Reference Connection Method 3 Image D for more details.

This counter top can be assembled on the left or right.







Step 4.

Using the provided allen key tool, attach the 4 camlocks into the cabinets inside extrusion channels. Make sure they are all at the same height and level for the internal shelf.



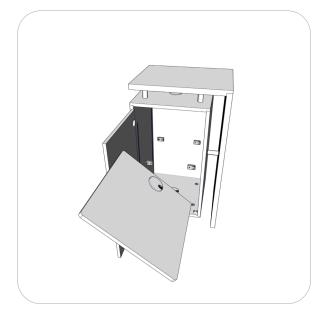

Included In Your Kit

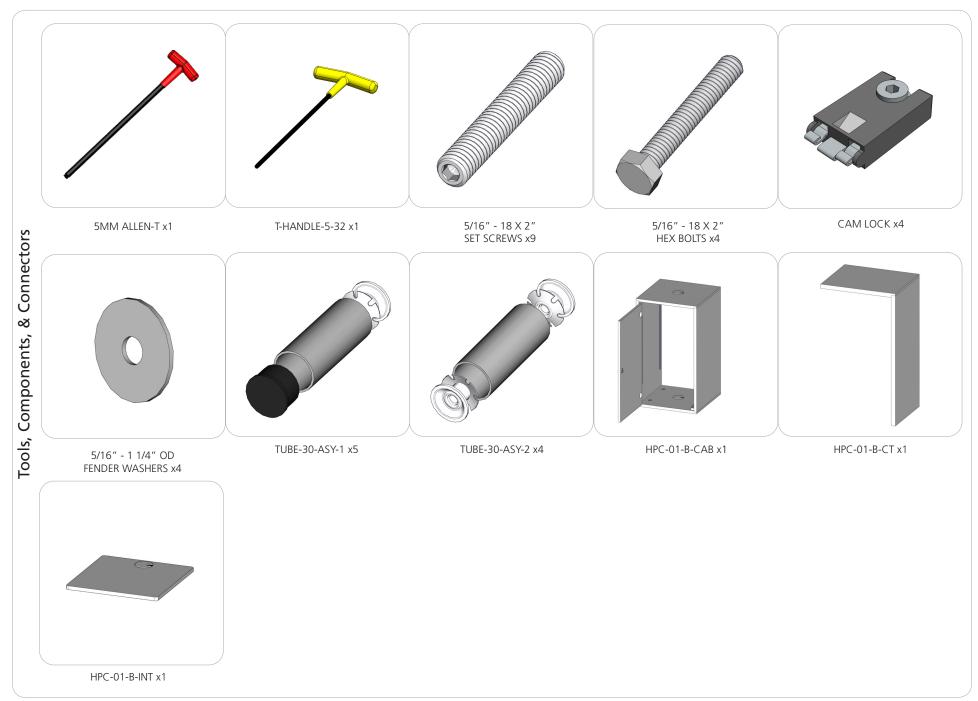

Connection Methods

Connection Method 1: CAM LOCK



First, with the cam lock disengaged, place the cam lock teeth into the extrusion channel. Second, use the allen key tool to lock it in place. Make half turns clock-wise to engage the cam lock. Do not over tighten the lock buttons.

Connection Method 2: TUBE-30-ASY-1 / TUBE-30-ASY-2

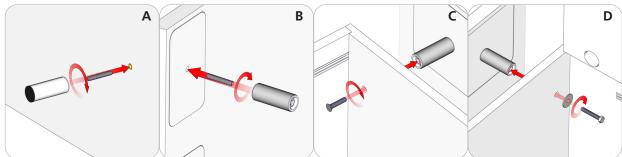


Image A. Use the hex key tool to drive the 2" set screw into the panel. Then, hand tighten the 30mm tube assembly 1 onto the set screw.

Image B. Use the hex key tool, to drive the 2" set screw into the panel. Then, hand tighten the 30mm tube assembly 2 onto the set screw.

Image C. Drive the countersink screws into the 30mm tube assembly 2.

Image D. Use a 1/2" hex wrench (tool not included) to drive the hex bolt and washer into the 30mm tube assembly 2.