



Set Up Instructions

WLM-2000E


Step 1: Assemble straight poles by pressing and pushing together.

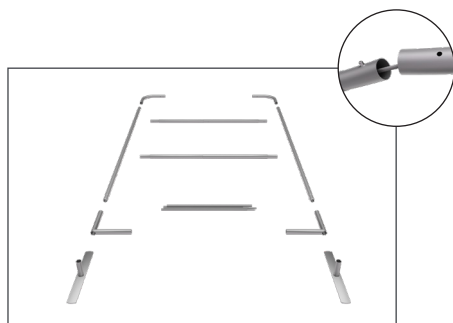


Step 2: Connect all corner sections to curved and straight sections of the frame by matching shape symbols on pipes.

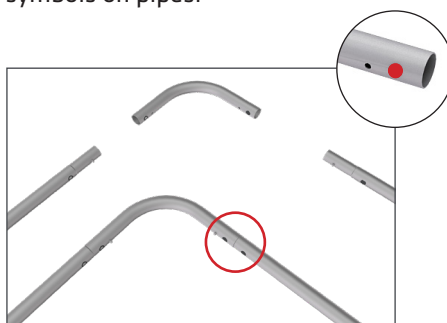



Step 3: Insert feet into base to complete assembled frame shown.

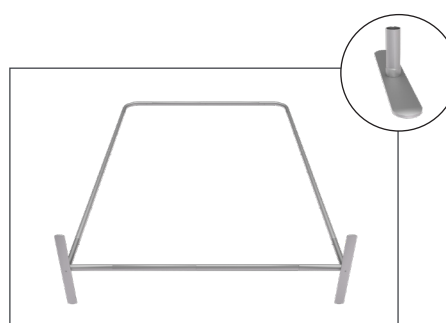

Step 4: Unzip print and lay image face up. Slide print onto frame like a pillow case.

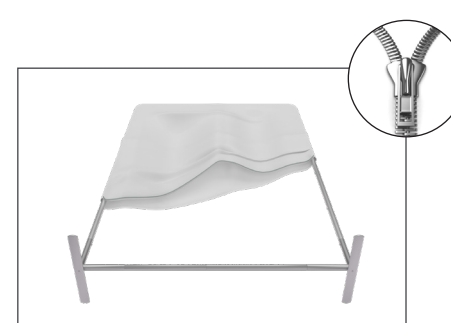

Step 5: Zip the edge of graphic beyond the center point as shown to hold the center pole in place. Zip the remaining side and bottom to meet at the corner.

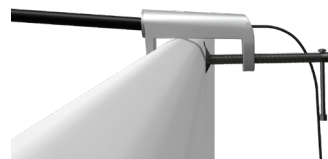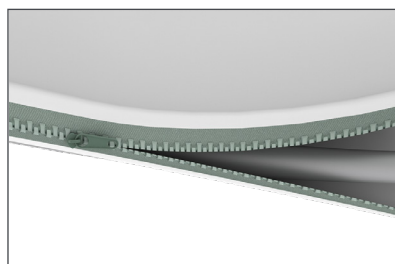

Step 6: Complete.


LIGHTS:
(OPTIONAL) Position as desired and tighten knob to hold in place.
WARNING! Over tightening may cause damage to fabric image.



Set Up Instructions

WLM-PANEL CONNECTION

FEET

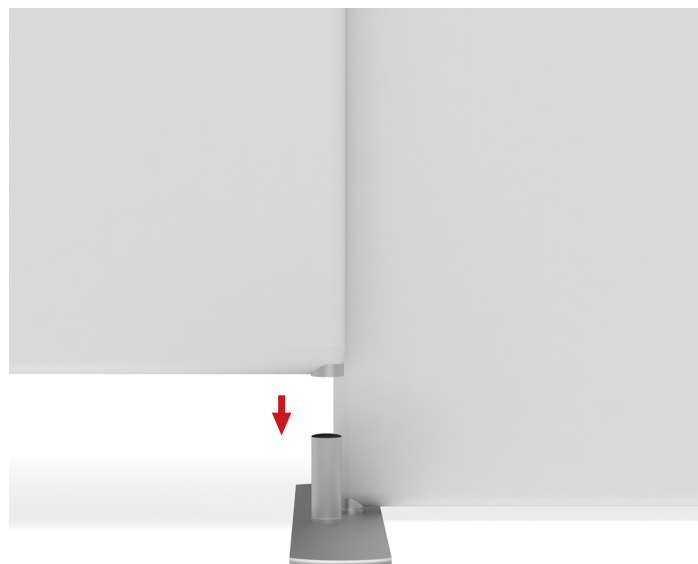


WLM-P-22E



WLM-P-22R





WLM-P-22L



WLM-P-22E


CLAMPS

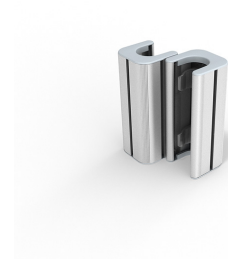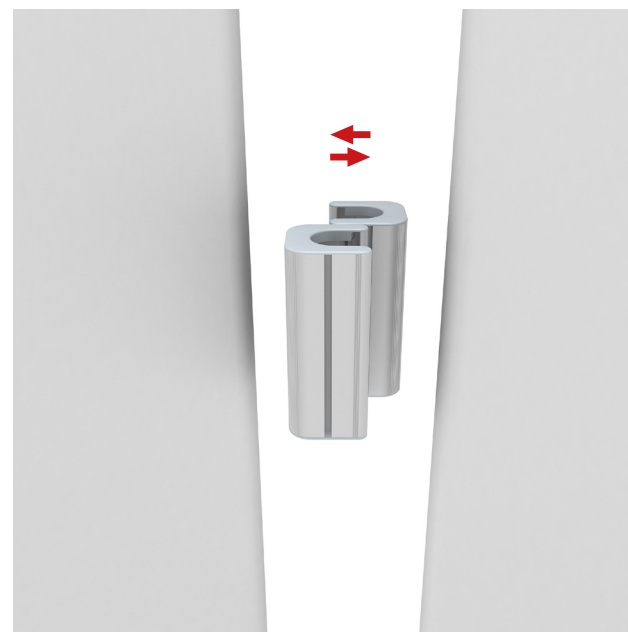


Set Up Instructions

CA700-CASE TO COUNTER


Step 1: Put case flat on the floor and undo straps. Lift lid and remove the contents of the case.

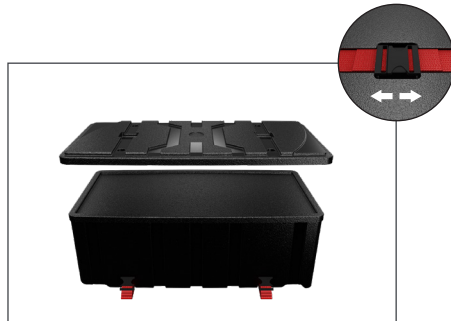


Step 2: Put the lid on the floor and screw the supplied vertical support poles into place.

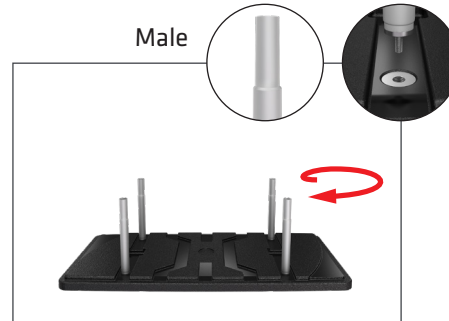


Step 3: Put the base on the floor with wheels up and screw the supplied vertical support poles into place.

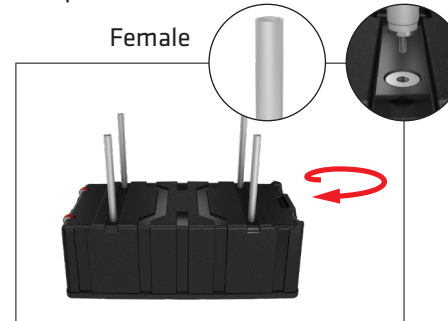


Step 4: Align support poles and fit the base to the lid. Press together firmly to secure. **OPTIONAL:** Install storage pocket onto lid first.

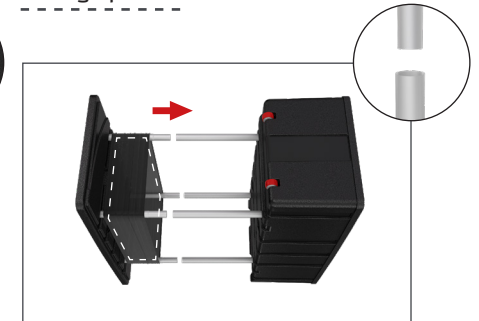

Step 5: Place case in a clean area upside down to place fabric print, over the case. **Start at the top with graphic up side down**, make sure zipper is in the middle.

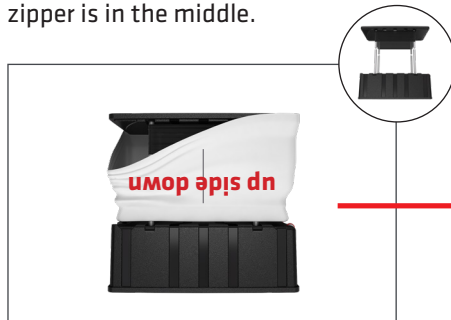


Pull the silicone grooved edge of graphic over the top of the lid and push onto the edge. Push the groove all the way around the case until secured without overstretching.

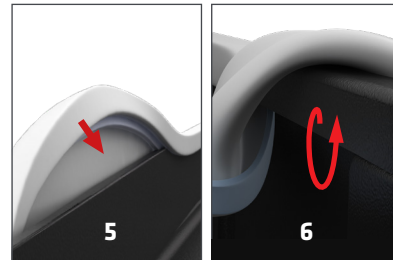

Step 6: Upright the case and pull edge of graphic over the top of the base and tuck under the lip into the groove of case. Follow all the way around the case until secured.



Step 7: Make sure that all wrinkles are out and the fabric looks straight. Press the counter top onto the case to secure.

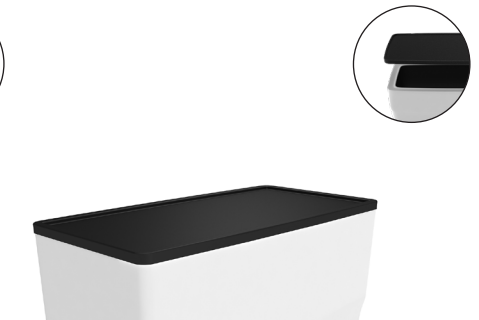

Note: Do not overstretch silicone edge when installing graphic or you will end up with extra fabric that will not press on.

STORAGE:

The zipper on the back is used to access storage.

