

#P597 - John 3:16

Make this beautiful plaque with well known scripture combined with stunning fretwork.
22"W x 23"H




"Providing great patterns for scrollers since 1996."

Scrollsaw.com




The very first website for scrollers!
You're supporting American business.

This pattern is for the sole use of customers of Scrollsaw.com and SRX Enterprises, LLC. -- distribution, sale, or use for gain, and file sharing is strictly against Copyright law.

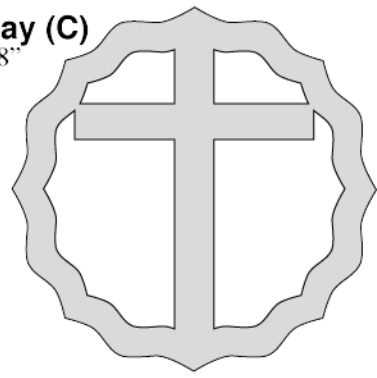

#P597 For God so loved... (John 3:16)

Description	item	Qty	Size
Top & Bottom	A	2 each	1/8" - 1/4"T x 6 5/8"W x 9 1/2"L
Top Overlay	B	1	1/16" - 1/8"T x 5"W x 6 1/4"L
Cross Overlay	C	1	1/16" - 1/8"T x 2 1/8"W x 2 1/8"L
Side	D	2	1/8" - 1/4"T x 3 1/8"W x 14 7/8"L
Bottom Overlay	E	1	1/16" - 1/8"T x 5"W x 6 1/4"L
Bottom Cross Overlay	F	1	1/16" - 1/8"T x 3 1/4"W x 3 3/4"L
Top Corner	G	2	1/8" - 1/4"T x 1 3/4"W x 2 7/8"L
Bottom Corner	H	2	1/8" - 1/4"T x 4 7/8"W x 4 7/8"L
Text	I	1 each	1/16" - 1/8"T x cut as needed
Back	*	1	1/4"T x 22"W x 23 1/2"L

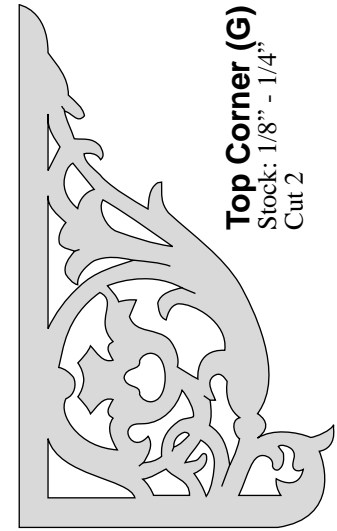


Top Corner (G)
Stock: 1/8" - 1/4"
Cut 2

• No pattern given - instructions tell how to cut / shape the Back.

#P597 - Assembly Instructions

1. Select your material from a variety of hardwoods or solid core plywood.
2. Measure each pattern piece and cut the work pieces to size accordingly. Sand as necessary.
3. Make all pattern pieces by adhering the paper patterns to the work pieces with a repositionable spray adhesive. Cut the outer shapes and any interior designs. And drill where indicated.
4. Remove all paper patterns. Sand where needed. The edges can be rounded by sanding or using a small roundover router bit if desired.
5. Assemble by first gluing the 2 Top halves together. Then attach the Overlay, if required. Follow the same procedure for attaching the left and right Sides together, if necessary, and the Bottom.
Now, align the Top with the left and right Sides. And then align the Bottom. Be sure all pieces fit flush before gluing together. If they do not fit flush; adjust by sanding or cutting where necessary.
Next, position the pieces onto the Back workpieces, and tape or clamp to secure. Trace around the outer edges of the framing. Remove the pieces and cut the Back. Stain or finish all pieces before assembling.
Now, reposition the framing pieces onto the Back and secure with glue. To get the proper spacing for the lines of Text on the plaque, place the paper pattern onto the Back. Use a push pin or sharp nail point to mark the ends of each line of Text. The lines of Text on the paper pattern are spaced properly. Remove the paper pattern, and glue the Text lines into place. A magnifier light will help you see the pin holes easier.

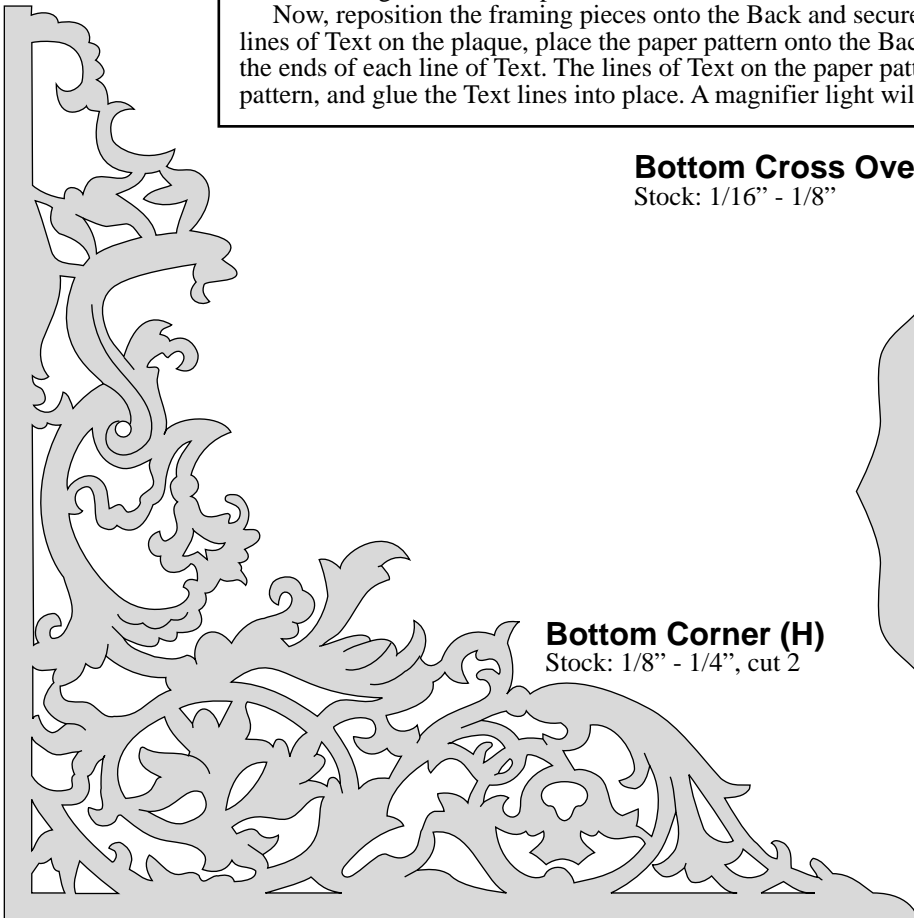

Bottom Corner (H)
Stock: 1/8" - 1/4", cut 2


Bottom Cross Overlay (F)
Stock: 1/16" - 1/8"





Top & Bottom (A)


Stock: 1/8" - 1/4", cut 2 each

Dashed lines indicate
placement of Top & Bottom
Overlays.

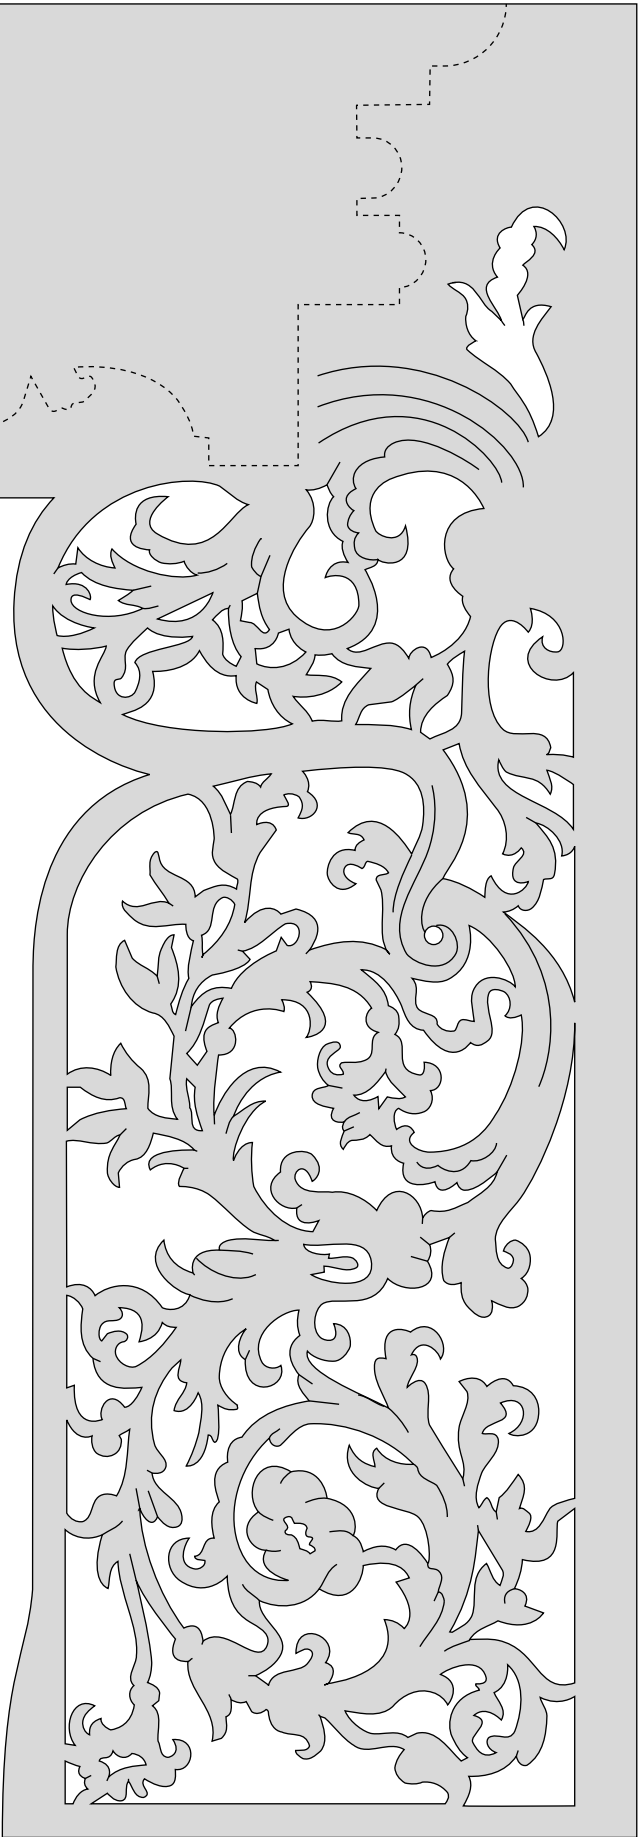

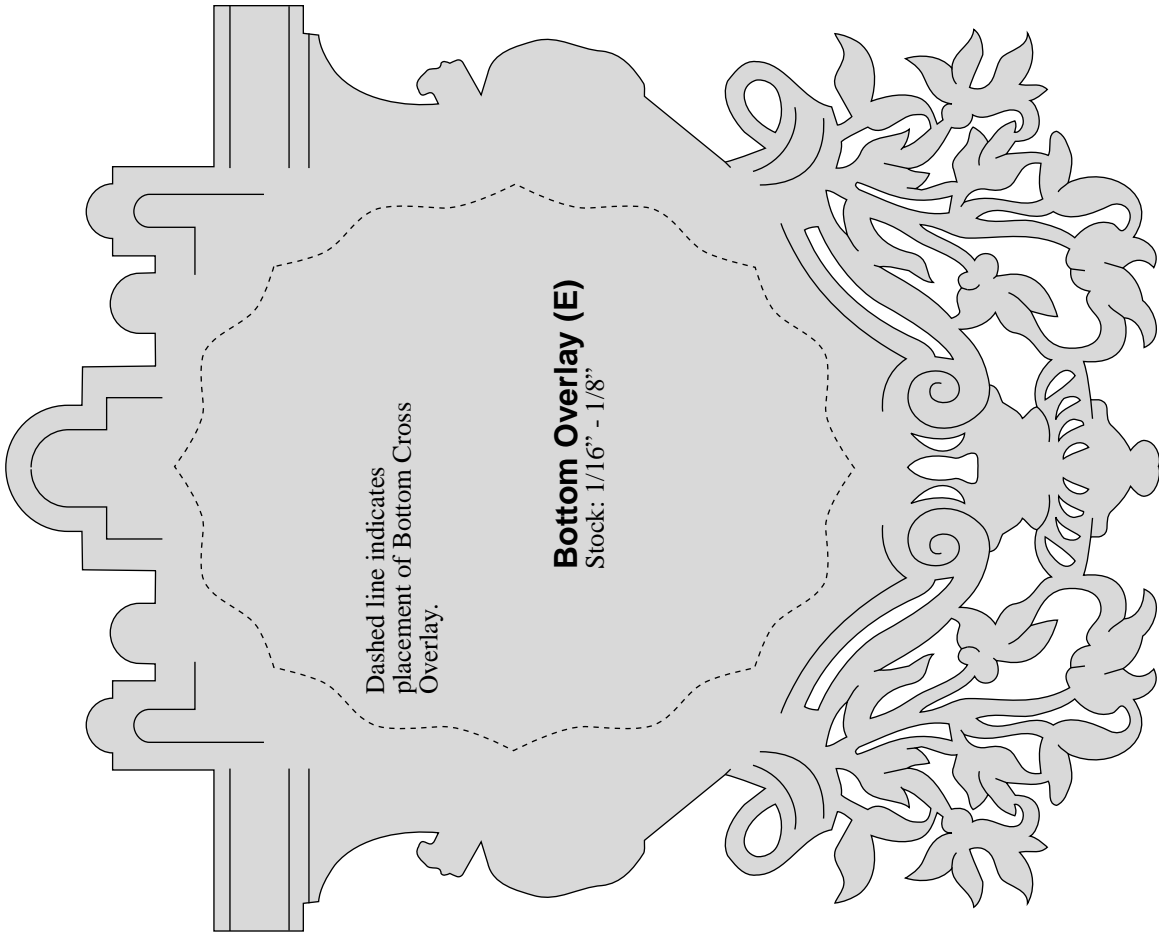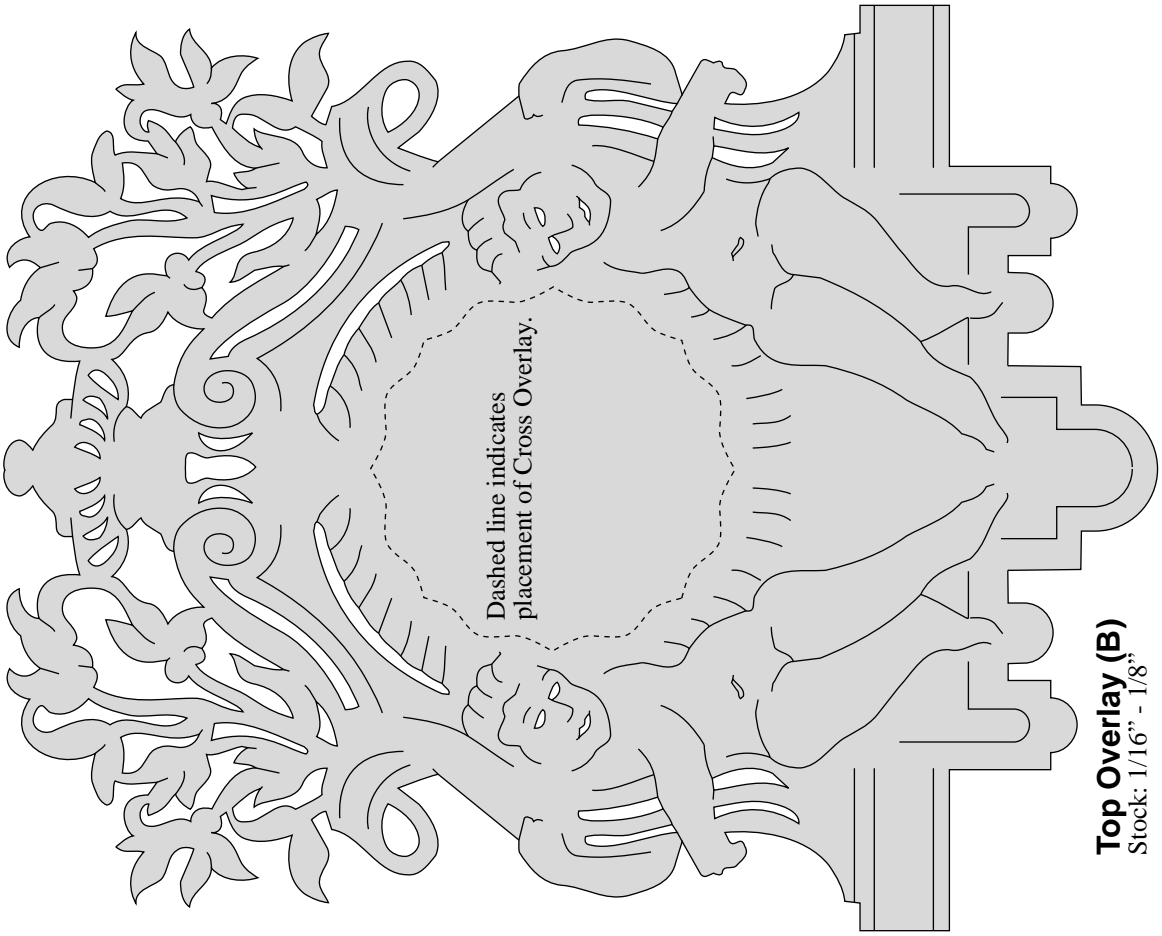


Pattern overlap line

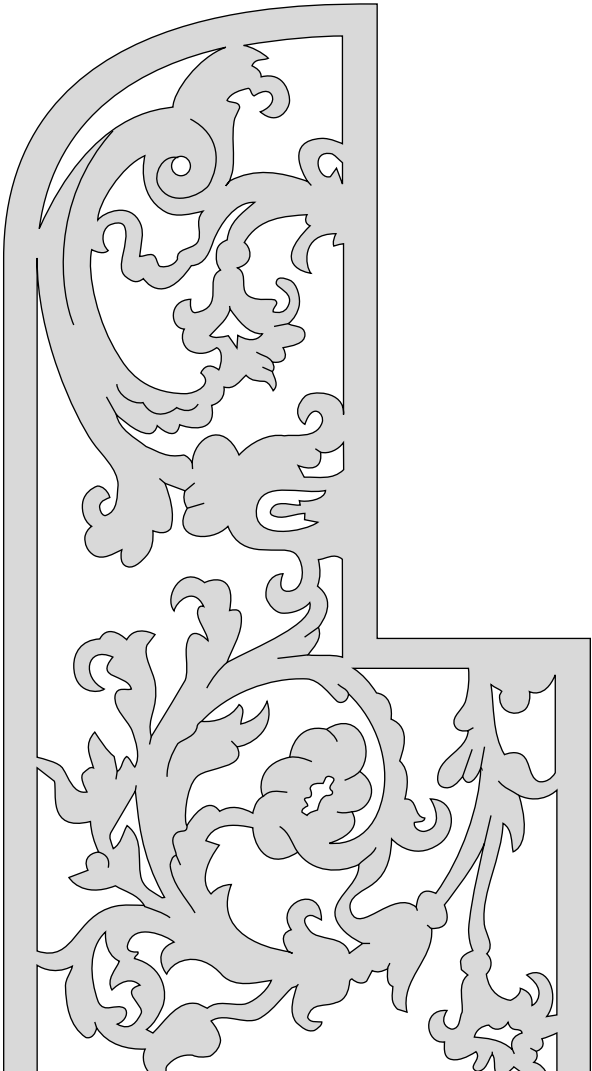


Pattern overlap line

Side (D)
Stock: 1/8" - 1/4" T
Cut 2
Top pattern piece.

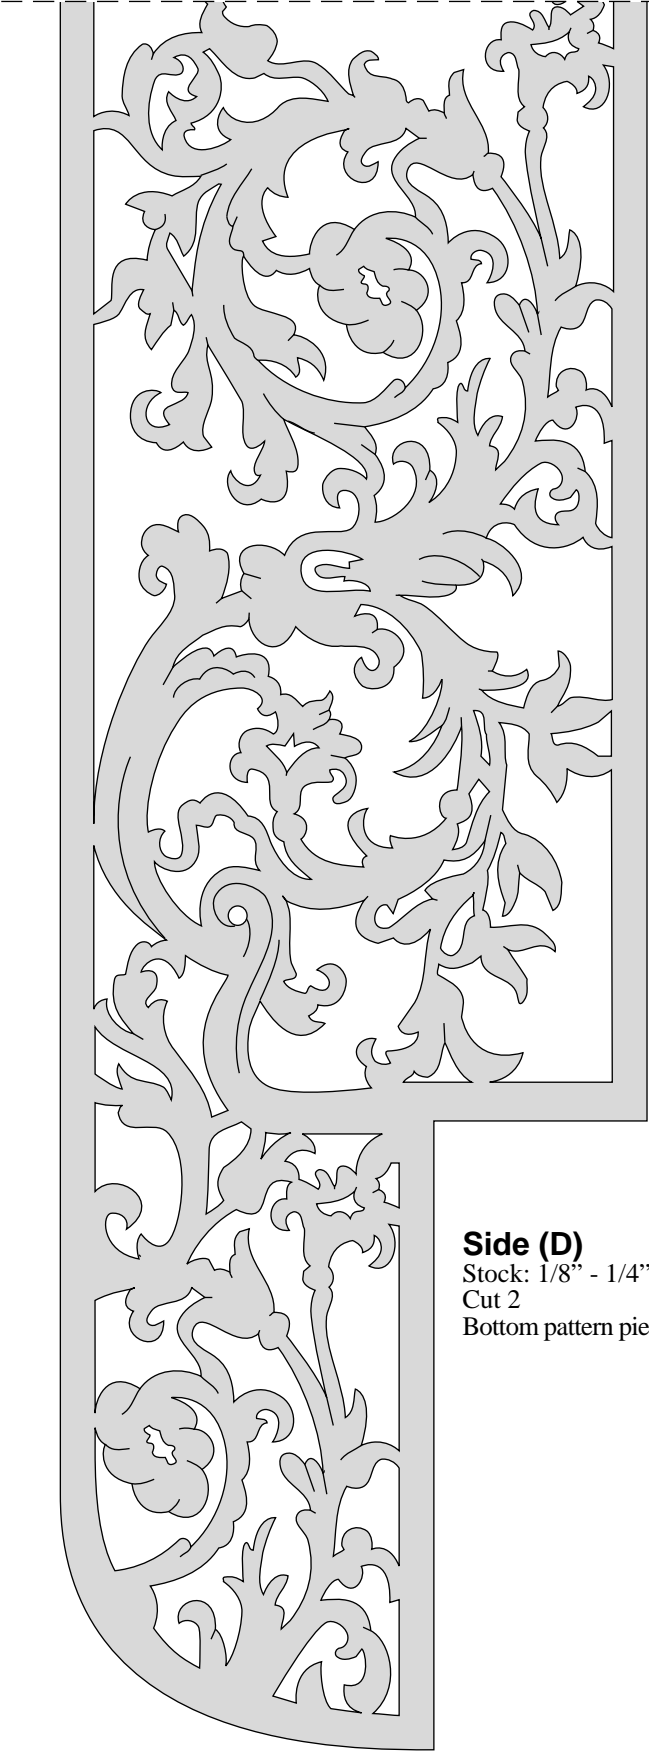

Side (D)
Stock: 1/8" - 1/4" T
Cut 2
Bottom pattern piece.

For God so loved



Suggested space between Top and first text line.


Text (I)

Stock: 1/16" - 1/8",

Cut from individual line work pieces or from 1 piece. Left pattern piece.

that he gave his one

that whoever believ



Suggested space between text lines. A Spacer block can be used.

shall not p

but have eter

John 3:16

the world

Text (I)

Stock: 1/16" - 1/8",

Cut 1 each

Right pattern pieces.

and only Son,

eyes in him

erish

nal life.

o

Pattern overlap line