
## DOWELL

# **4012 0218 GREY Pull out Wire Basket**INSTALLATION GUIDE







### **Product parts**

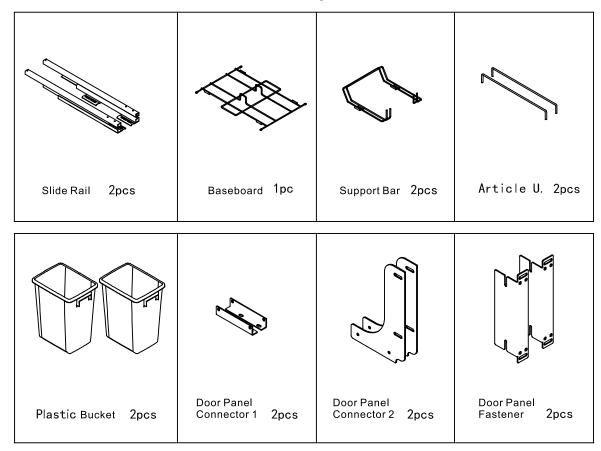

#### **Part List**

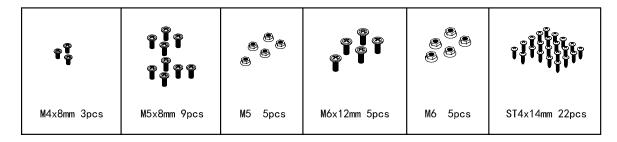


### **Recommended tools You Will Need-Outils Requis**

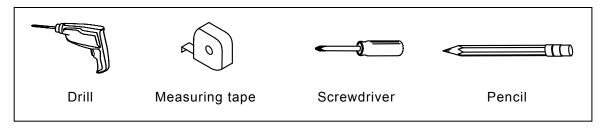






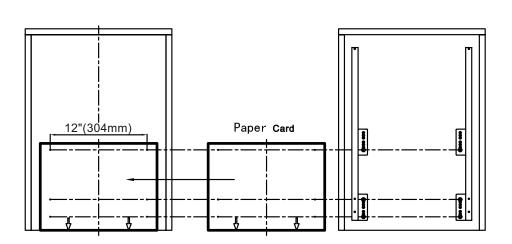


Align the arrow direction of the paper card with the edge of the cabinet, place the center line of the paper card on that of the cabinet, and use a 2.5-mm drilling bit to drill holes on the baseboard of the cabinet. Align the left and right guide rails with the holes shown in the figure, and secure the first

left and right guide rails with the holes shown in the figure, and secure the first step with six ST4x14mm self-tapping screws.

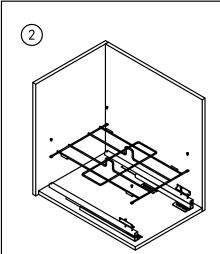


As shown in the figure, fix the door panel connector 1 and slide rail with 2pcs M4x8mm screws. Then, fix the baseboard with 4pcs M5x8mm screws to complete the second step.

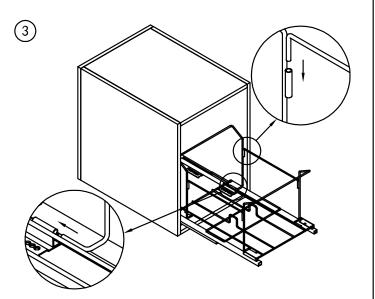


Insert 2pcs of support bars into the bottom tube according to the arrow direction shown in the figure, and then insert 2pcs of U-shaped bars into the tube according to the arrow direction shown in the figure to complete the third step.



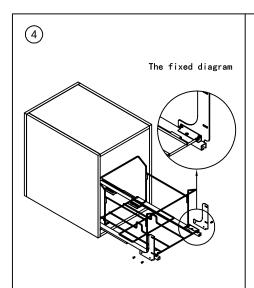



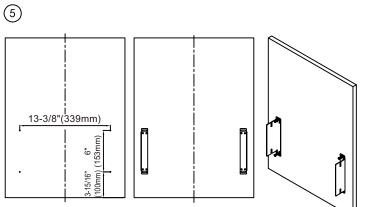

Tip; (this product cabinet door thickness requirements for more than 14 mm is suitable for installation)

As shown in the figure, drill 4 pre-assembly holes with a 2.5 mm drilling bit, and fix the door panel fasteners with 4 PCS ST4x14mm screws. (Note that the fixed holes are 4 long holes at this time, and the screws should be in the middle of the long holes.) Reserve for the next step when fine-tuning the cabinet door, and complete the fifth step of installation.

