


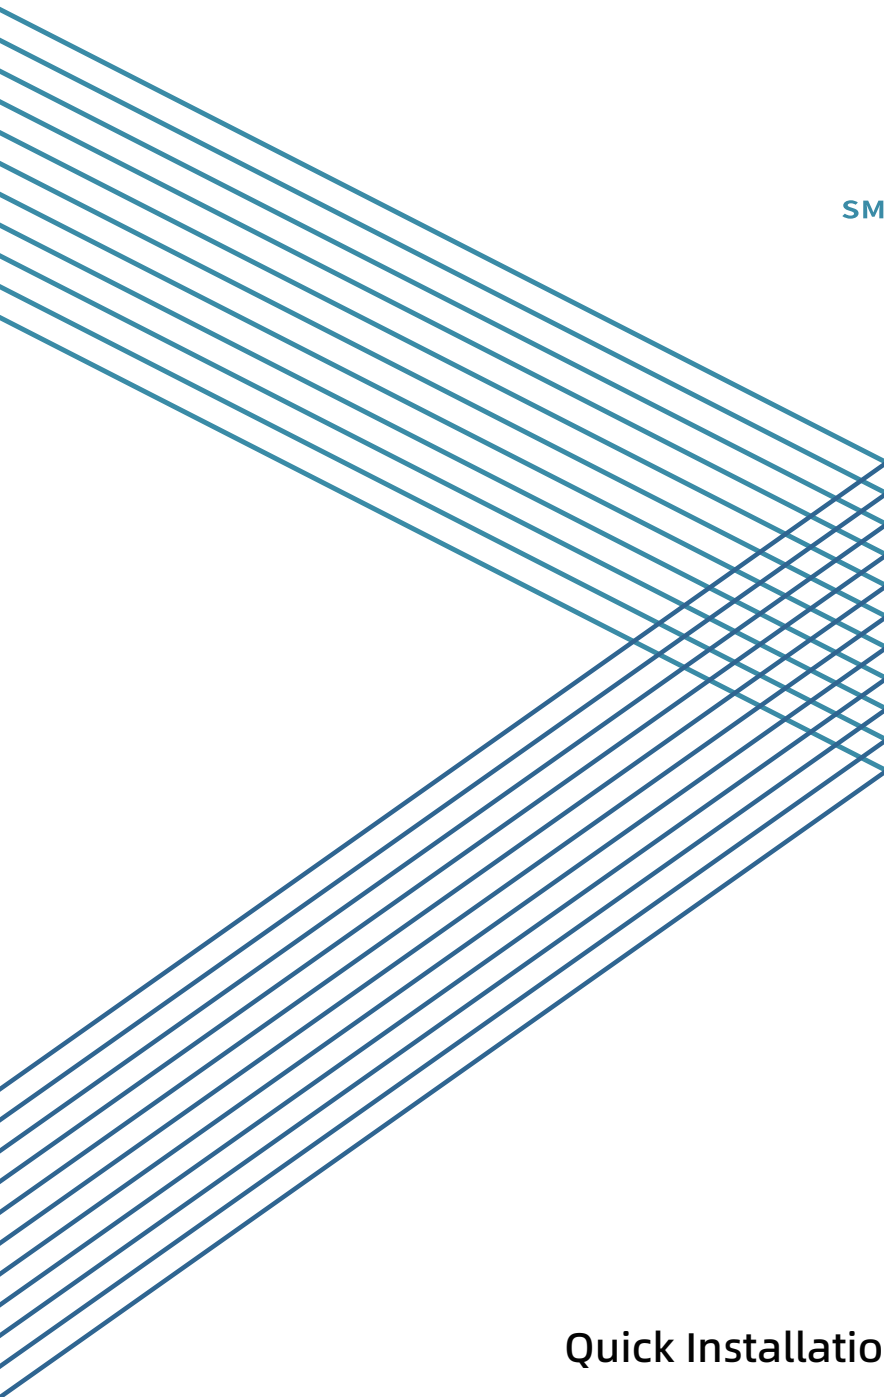

SMARTWINGS



Quick Installation Guide

Drapery

INS-102-C034
A-09 November 2024

TABLE OF CONTENTS

1. Track Splicing.....4

2. Track Runner Removal.....8

3. Fabric Hook Installation.....9

4. Track Installation.....10

 4.1 Ceiling Mount.....10

 4.2 Wall Mount.....14


5. Valance Installation.....17

6. Motor Installation.....18


7. Fabric Installation.....19

8. Remote Holder Installation.....21


TOOLS YOU WILL NEED :

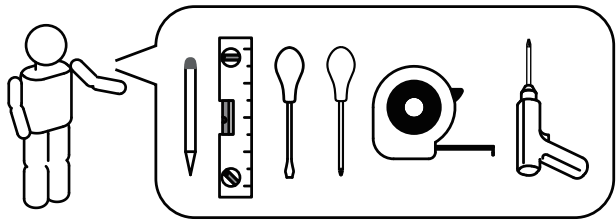


Single Rod kit accessory list:

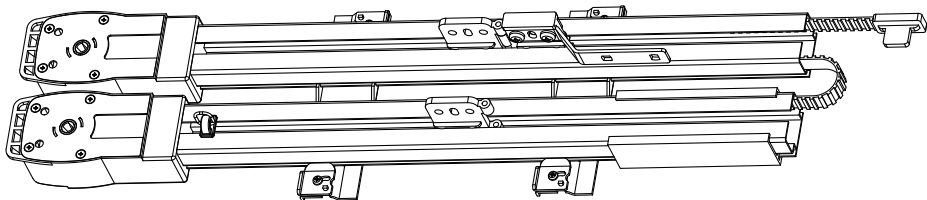

① Track

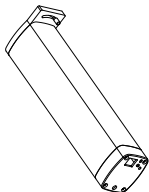

② Motor

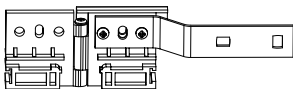

③ Fabric Hooks




④ Fabric Hooks




⑤ Fabric Clips



⑥ Valance Fixed Brackets




⑦ Valance Fixed Sticker

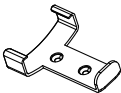

⑧ Remote Holder




⑨ Accessories

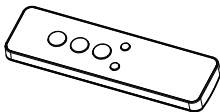


⑩ Remote Controller



⑪ AAA Battery

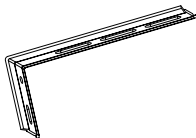


⑫ Extension Bracket

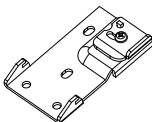


⑬ Fixed Bracket


TOOLS YOU WILL NEED :

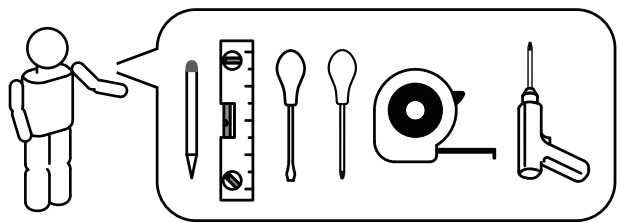


Double Rod kit accessory list:

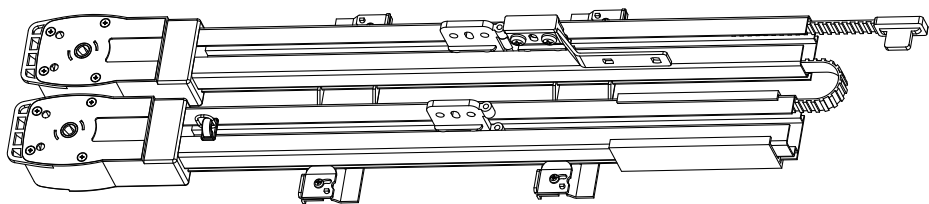

① Track

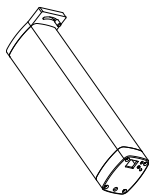

② Motor

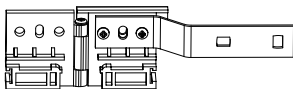


③ Fabric Hooks



④ Fabric Hooks




⑤ Fabric Clips

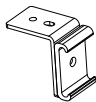

⑥ Valance Fixed Brackets




⑦ Valance Fixed Sticker

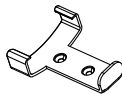

⑧ Remote Holder




⑨ Accessories

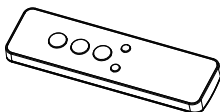

⑩ Remote Controller




⑪ AAA Battery

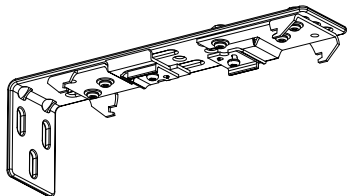


⑫ Double Rod Kit Extension Bracket

Ceiling Mount

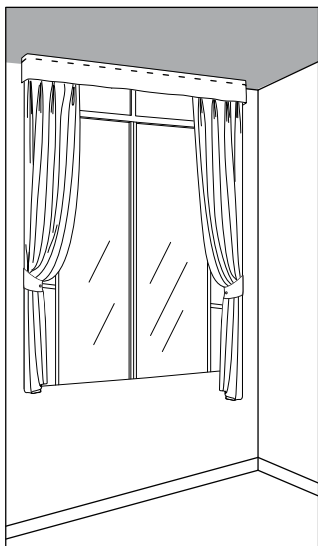


Single rod kit

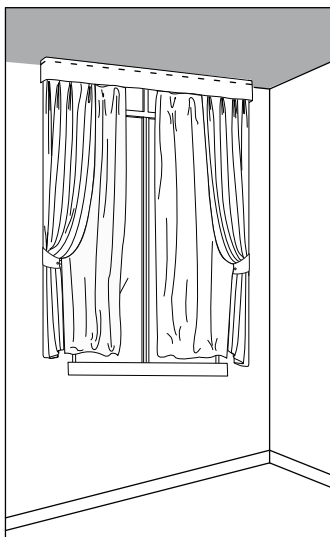


Double rod kit

Wall Mount

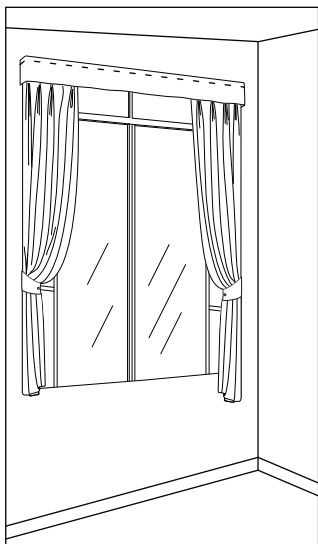

Single rod kit

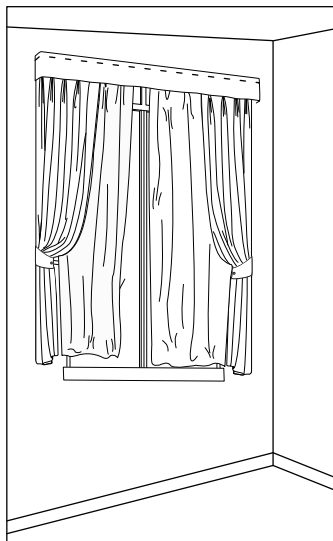

Double rod kit

Track Splicing

Peel off the protective plastic film from both ends of the track.

If the track length is less than 98.4" (2500mm), you may skip this step and proceed to page 9. Tracks under this length are supplied as a single piece and do not require joining.

For tracks longer than 98.4" (2500mm), refer to page 3 for assembly instructions, as they are provided in two separate pieces.

Step 1 Unfold the folded track to install.

1. Ensure sufficient clearance is maintained at both ends of the track during installation. Place the track on a flat, stable surface (Fig 1-a), such as a large table or a clean floor.

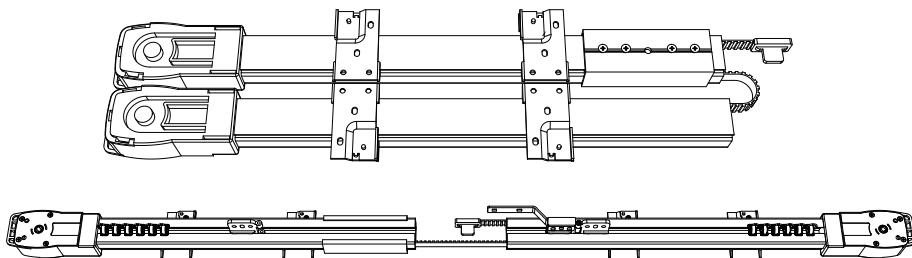


Fig 1-a

2. Prepare to install the overlap arm (Fig 1-b). Ensure it faces the opposite direction of the pre-installed overlap arm (Fig 1-c).

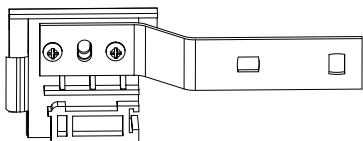


Fig 1-b

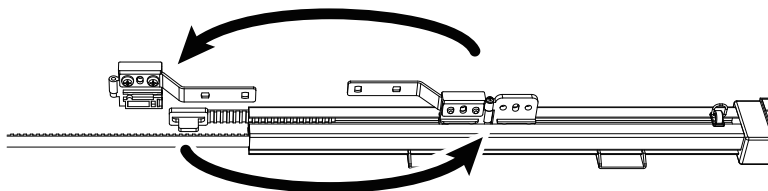


Fig 1-c

3. Use the belt buckle (Fig 1-d) at the end of the belt to thread it through the overlap arm (Fig 1-e).

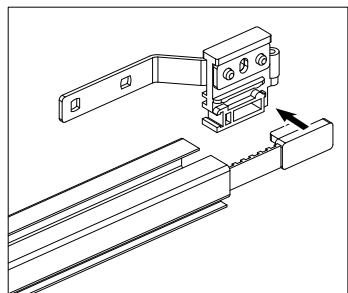


Fig 1-d

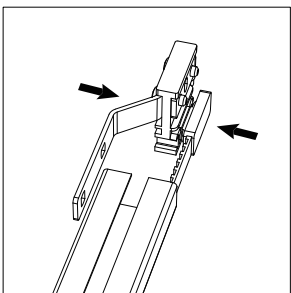


Fig 1-e

4. Insert the belt buckle and overlap arm into the track (Fig 1-f). Align the combined belt buckle and overlap arm with the designated position on the track (Fig 1-g), then slide them into place (Fig 1-h, Fig 1-e).

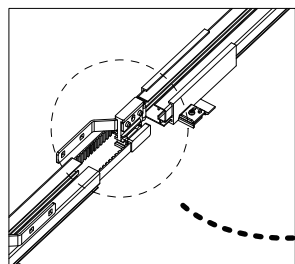


Fig 1-f

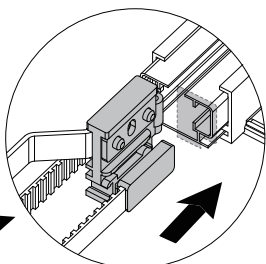


Fig 1-g

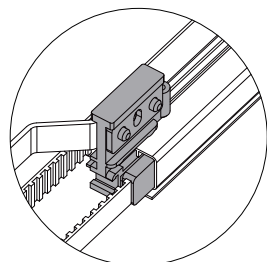


Fig 1-h

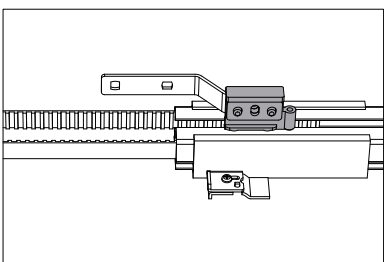


Fig 1-i

5. Splice the overlap arm with the sliding component on the track. Pull the overlap arm and the sliding part together by hand (Fig 1-j).

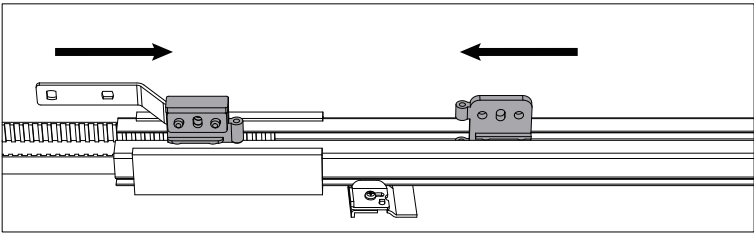


Fig 1-j

6. Put the screws from the kit into the overlapping round holes.

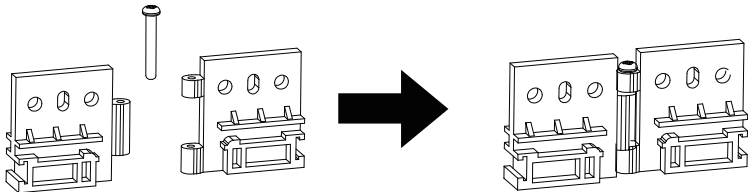


Fig 1-k

Fig 1-l

7. Secure the fabric carrier and the iron block with screws.

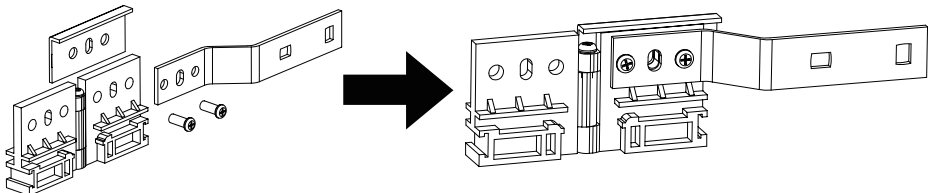


Fig 1-m

Fig 1-n

Step 2 Loosen Screws

1. Loosen the four screws on the track joint bracket connecting the two tracks (Fig 1-o).

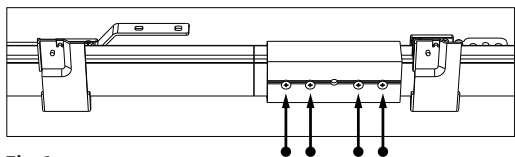


Fig 1-o

Step 3 Align Tracks

1. Flip the track over and align the two tracks (Fig 1-p).

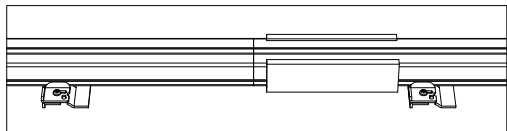


Fig 1-p

Step 4 Adjust Position

1. Slide the track joint bracket to the point where the two tracks disconnect. Aim to center the bracket at the disconnect point (Fig 1-q).

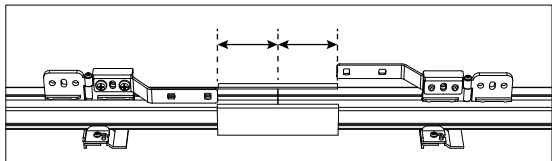


Fig 1-q

Step 5 Tighten Screws

1. Flip the drapery back and tighten the four screws securely (Fig 1-r).

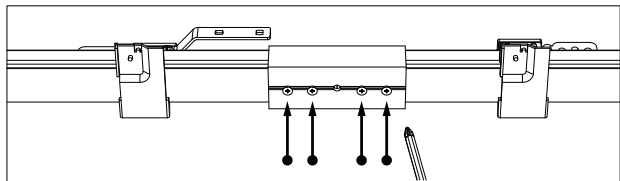


Fig 1-r


Track Runner Removal

If you consider the number of runners on the track to be excessive, please follow the steps outlined below to remove them.

If removal is not required, please turn to page 10.


Step 1: Loosen the locking nut

Use a screwdriver (not included) to loosen the locking nut at the end of the track, allowing access to remove the excess track runners.

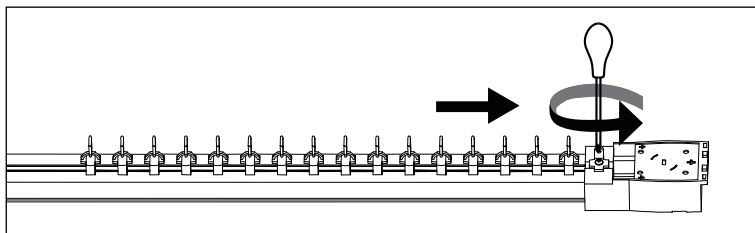


Step 2: Remove excess track runners

Slide the track runners you wish to remove to the end of the track, then gently take them off.

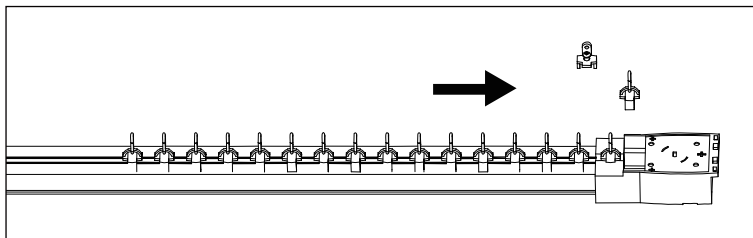

Step 3: Retighten the locking nut

Reposition the end cap and securely tighten the locking nut using a screwdriver (not included) to ensure the track is properly secured.

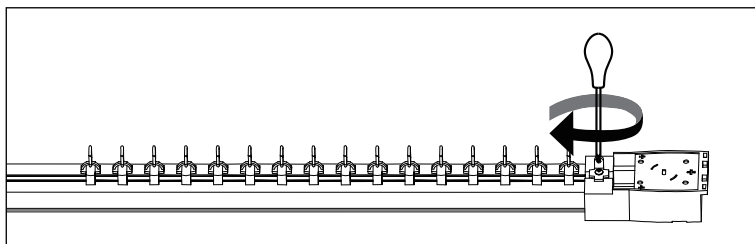

Fabric Hook Installation

Important!: Insert the fabric hook with the hooked end facing upward into one of the two smaller holes on the end before securing the track to the ceiling or wall, as the hook cannot be attached afterward.



Fig 2-a


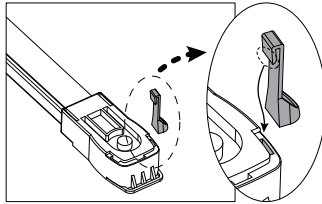



Fig 2-b

With Fabric Hook

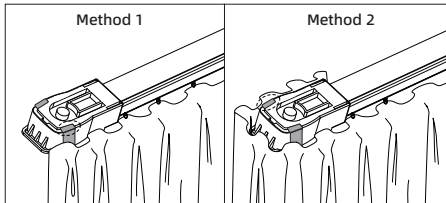

Single rod kit

Fig 2-c1

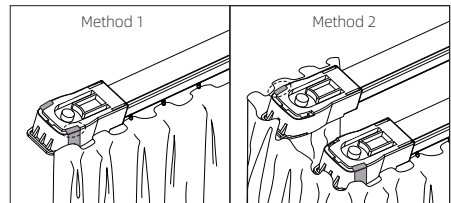

Double rod kit

Fig 2-c2

Track Installation

Choose between ceiling or wall installation for your drapery. If installing on the ceiling, fixed brackets should be used, then the installation steps refer to page 10. For wall installation, install both fixed brackets and extension brackets according to page 14.

Ceiling Mount

Install the track, the fixed brackets should be used.

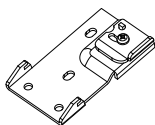


Fig 3.1-a

Step 1 Install the Fixed Bracket

Rotate the lower metal buckle of the fixed bracket clockwise to the right. Snap the bracket onto the track. Return the metal buckle to its original position. Tighten the screws securely, ensuring they are firmly in place. Double-check to ensure the attachment is securely fixed.

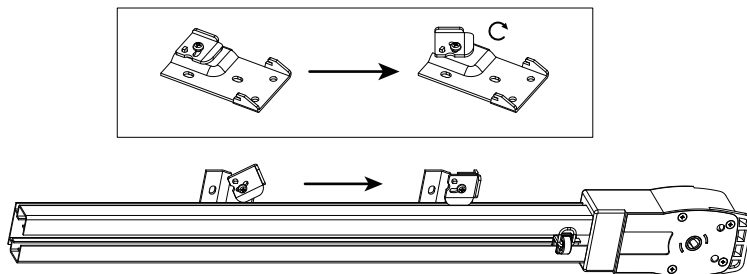


Fig 3.1-b

* When installing it on the wall or ceiling, please install screws in the 3 screw holes reserved for the fixed bracket.

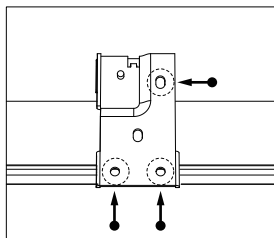


Fig 3.1-c

Step 2 Install track to the Wall

Single rod kit with valance installation method:

Tips: Leave at least 10cm of space for single rod kit installation.

1. Mark the holes for securing the brackets. Keep the brackets parallel. Maintain a distance of at least 6cm from the wall corner to the middle hole of the first fixed bracket. Maintain a distance of at least 4cm from the middle hole of the second fixed bracket to the valance fixed brackets hole.

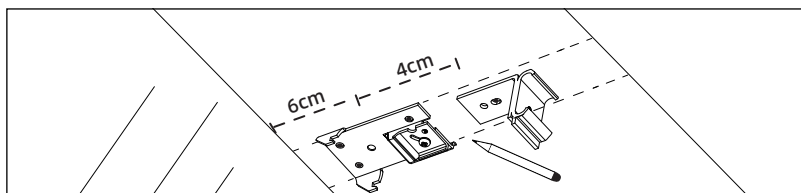


Fig 3.1-e

2. Drill holes at the marked points.

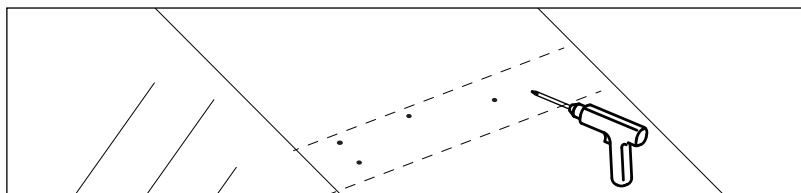


Fig 3.1-f

3. Insert the wall plugs into the holes, align the holes of the mounting brackets, and screw in the screws.

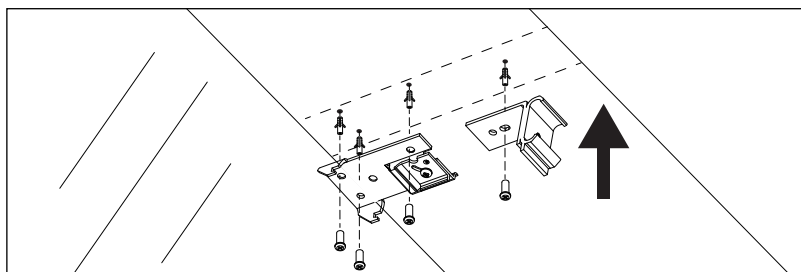


Fig 3.1-g

Tips: After installing the mounting brackets, refer to page 10 for the rod kit installation tutorial.

Double Rod kit with valance Installation method:

Tips: Leave at least 18cm of space for double rod kit installation.

1. Mark the holes for fixing the brackets. Ensure the brackets are parallel. Maintain a distance of at least 6cm from the wall corner to the middle hole of the first fixed bracket. Maintain a distance of at least 8cm from the middle hole of the first fixed bracket to the holes of the second fixed bracket. Maintain a distance of at least 4cm from the middle hole of the second fixed bracket to the valance fixed brackets hole.

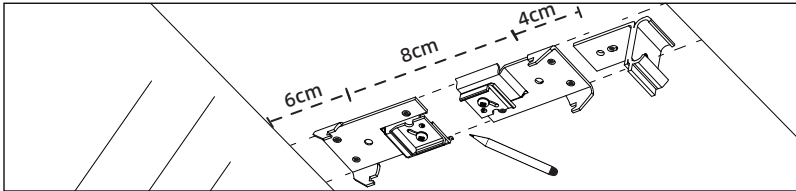


Fig 3.1-e

2. Drill holes at the marked points.

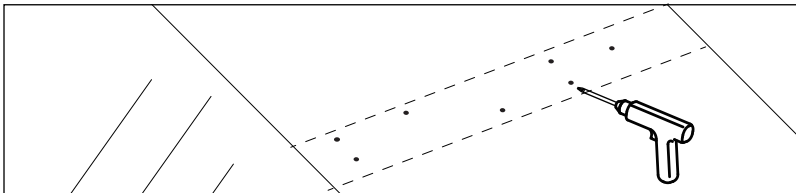


Fig 3.1-f

3. Insert the wall plugs into the holes, align the holes of the mounting brackets, and screw in the screws.

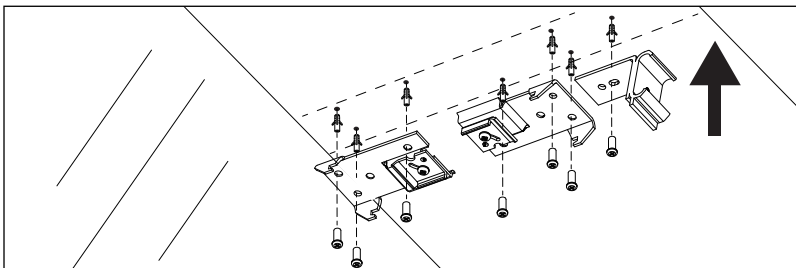


Fig 3.1-g

Tips: After installing the mounting brackets, refer to page 10 for the rod kit installation tutorial.

When you have the curtain box

Tips: The internal width of the curtain box should be at least 18cm.

1. Mark the holes for securing the brackets. Ensure the brackets are parallel. Maintain a distance of at least 6cm from the wall corner to the middle hole of the first fixed bracket . Maintain a distance of at least 8cm between the holes of the first fixed bracket and the second fixed bracket.

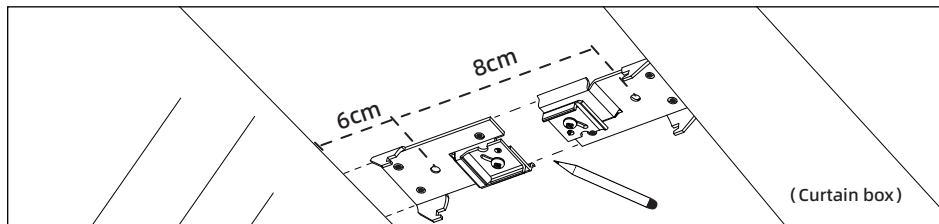


Fig 3.1-h

2. Drill holes at the marked points.

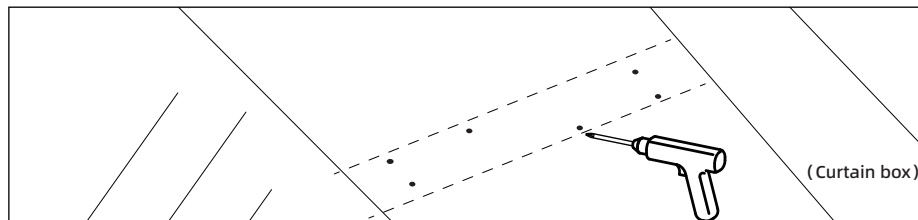


Fig 3.1-i

3. Insert the wall plugs into the holes, align the holes of the mounting brackets, and screw in the screws.

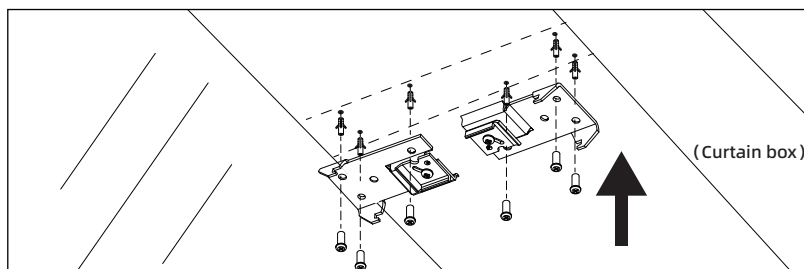


Fig 3.1-j

Tips: After installing the mounting brackets, refer to page 10 for the rod kit installation tutorial.

Wall Mount

Install the drapery on the wall, extension brackets should be used.

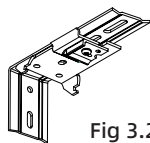


Fig 3.2-a

Secure the Fixed Bracket to the Extension Bracket by fastening screws through the center hole, completing the assembly of the Single Rod Kit Extension Brackets.

Step 1 Install the Extension Bracket

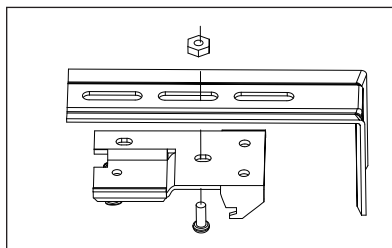


Fig 3.2-b

Before installing the brackets on the wall, first secure the mounting brackets and extension brackets together using screws and nuts.

Single rod kit

Step 1: Draw a horizontal line at the appropriate position to ensure the brackets are parallel.

Step 2: Mark the hole positions on the brackets to keep them level. Drill holes with a suitable-sized drill.

Step 3: Insert the plastic expansion screw plugs, align the brackets, and screw in the screws.


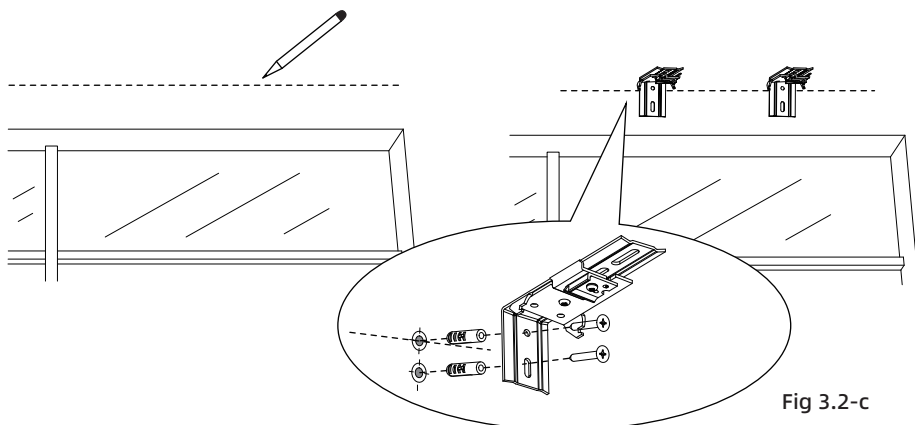


Fig 3.2-c

Install the drapery on the wall, extension brackets should be used.

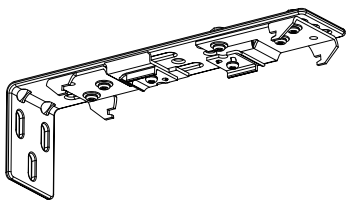

(Double rod kit extension brackets)

Fig 3.2-b

Install the Extension Bracket

Double rod kit

Step 1: Draw a horizontal line at the appropriate position to ensure the brackets are parallel.

Step 2: Mark the hole positions on the brackets to keep them level. Drill holes with a suitable-sized drill.

Step 3: Insert the plastic expansion screw plugs, align the brackets, and screw in the screws.

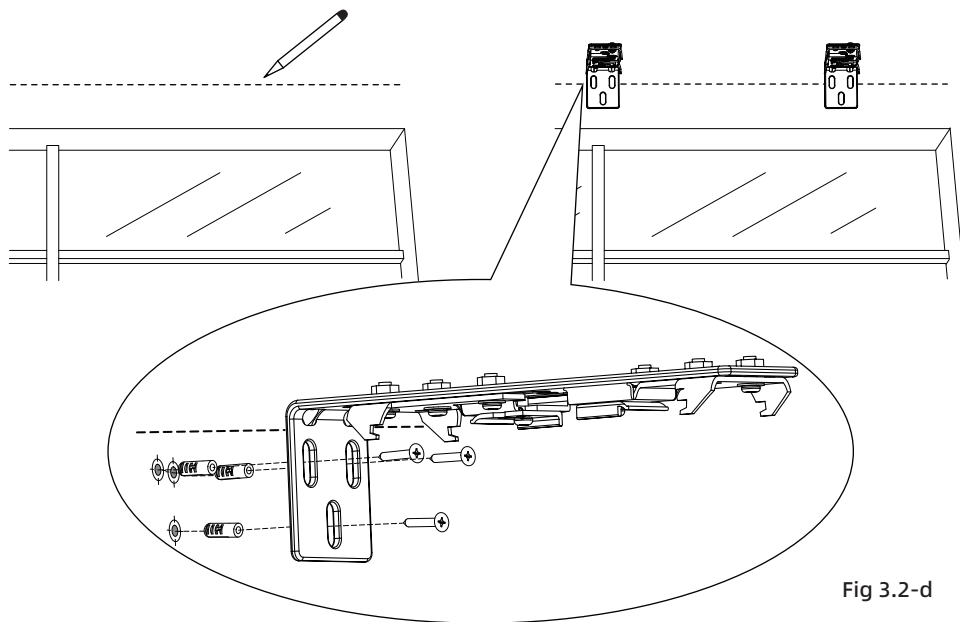


Fig 3.2-d

Step 2 Install track to Extension Bracket

Single rod kit

Rotate the lower metal buckle of the fixed bracket clockwise to the right. Snap the bracket onto the track. Return the metal buckle to its original position. Tighten the screws securely, ensuring they are firmly in place. Double-check to ensure the attachment is securely fixed.

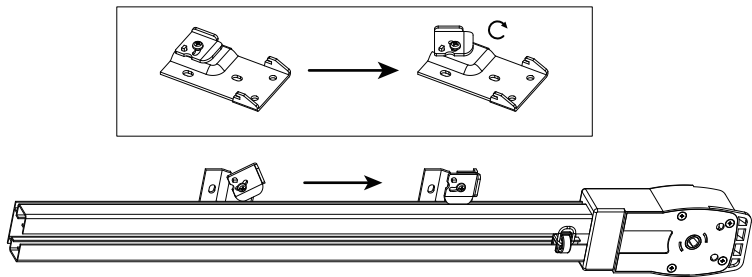


Fig 3.2-f

Double rod kit

Rotate the lower metal buckle of the fixed bracket clockwise to the right. Snap the bracket onto the track. Return the metal buckle to its original position. Tighten the screws securely, ensuring they are firmly in place. Double-check to ensure the attachment is securely fixed.

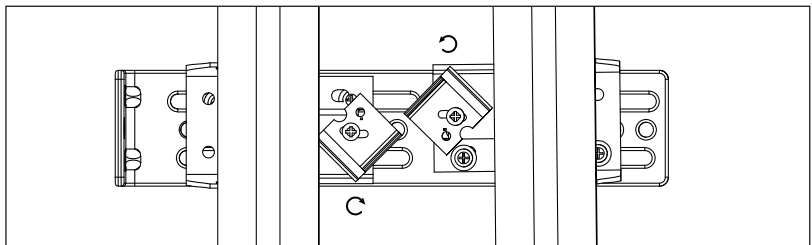


Fig 3.2-g

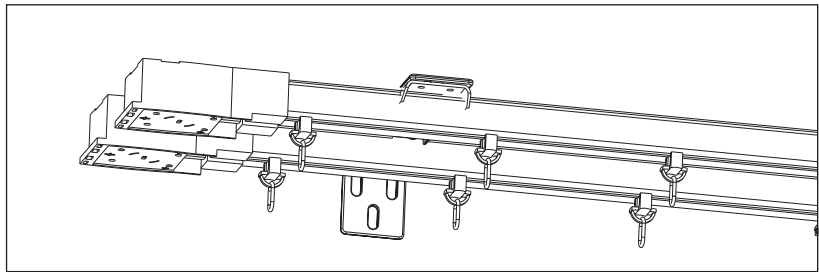


Fig 3.2-h

Valance Installation

If you didn't purchase a valance, skip this step and proceed to page 18.

Step 1 Install Valance Fixed Brackets

Install the valance fixed brackets by aligning the screw with the mounting hole and securing it with a bolt (Fig 4-a, Fig 4-b).

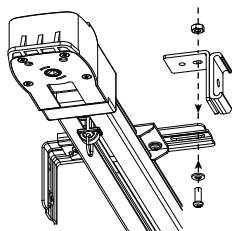


Fig 4-a

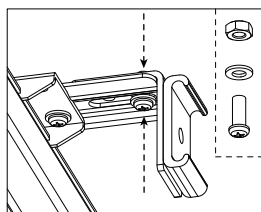


Fig 4-b

The installation method for the double rod kit is identical to that of the single rod kit.

Step 2 Insert the valance fixed sticker

You can use a hard object to gently bend the valance fixed sticker (Fig 4-c), ensuring it better aligns with and covers the track.

Snap the valance fixed sticker into the valance fixed bracket until you hear a "click" to ensure it is securely attached (Fig 4-d, Fig 4-e).

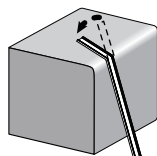


Fig 4-c

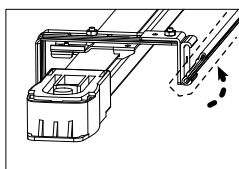


Fig 4-d

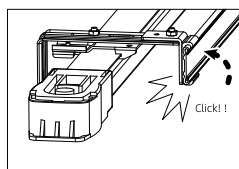


Fig 4-e

Step 3 Attach the Valance

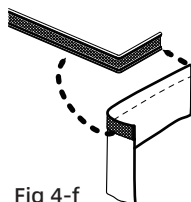


Fig 4-f

Motor Installation

Align the holes at the end of the track and insert the motor (Fig 5-a).

Pull the lock knob downward to secure the motor in place (Fig 5-b).

To unlock, simply return the knob to its original position (Fig 5-c).

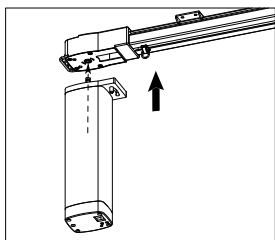


Fig 5-a

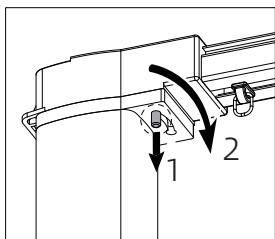


Fig 5-b

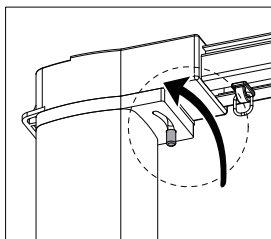


Fig 5-c

Note: After installing the motor, turn on the power and manually pull the fabric to test the track, ensuring it runs smoothly without any jamming.

Fabric Installation

Installation Diagram:

First, identify the front and back sides of the shade before installation. When installing, make sure to attach the Fabric Clips to the designated holes on the Fabric Carrier. The opposite edge should be secured in the fixed hole at the end of the track.

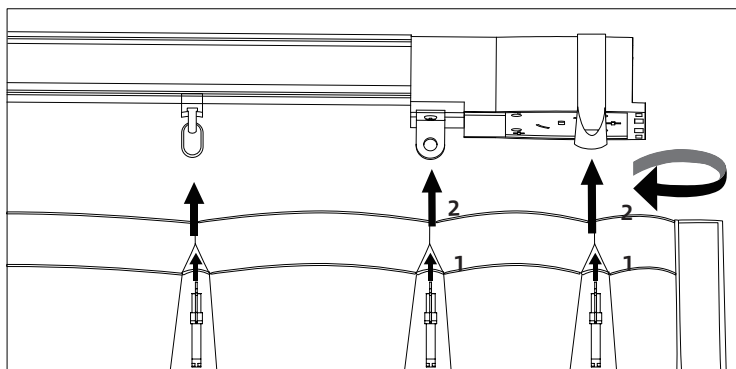


Fig 6-a

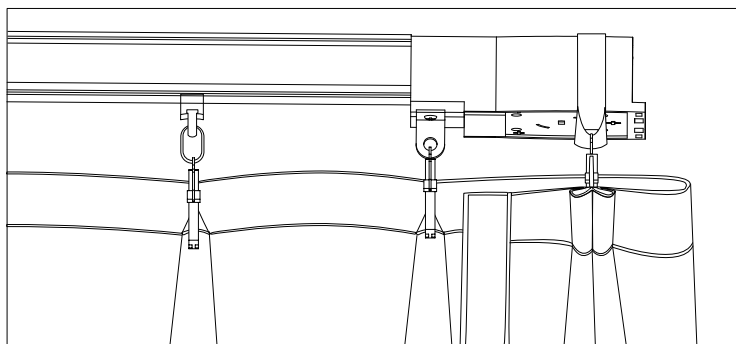


Fig 6-b

Fabric Installation

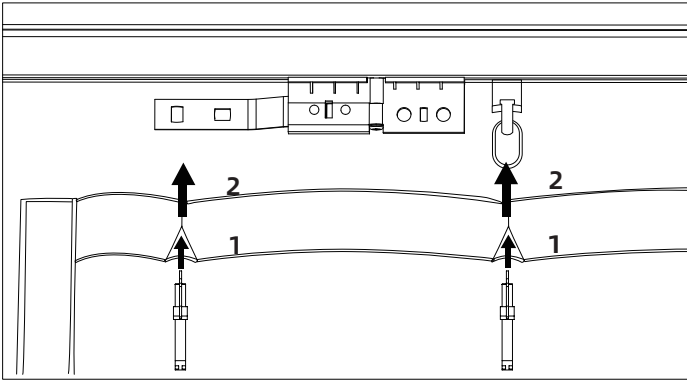


Fig 6-c

Insert the Fabric Clips one by one into the middle seam of the shade. Then, attach the clips in sequence to the metal rings of the track rollers.

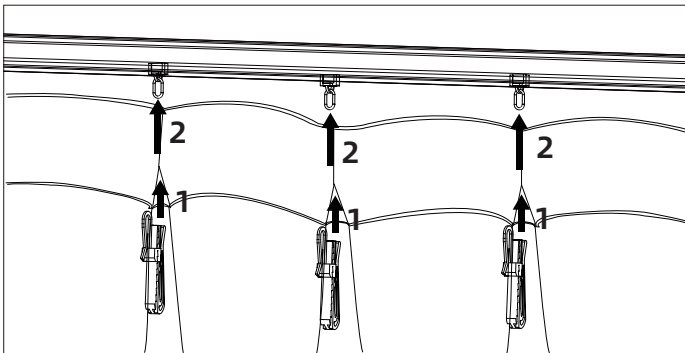


Fig 6-d

Match the hooks on the drapery fabric with the hanging wheels on the track one by one. Additionally, you have the flexibility to fine-tune the drapery by adjusting the hooks up or down.






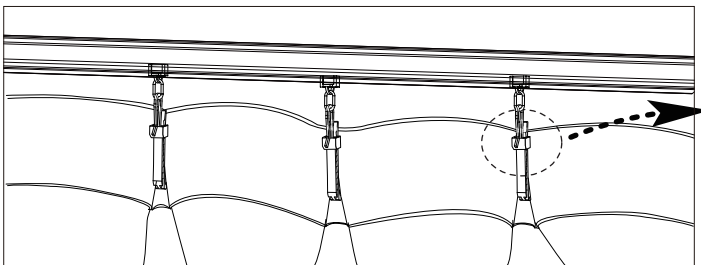



Fig 6-e

Remote Holder Installation

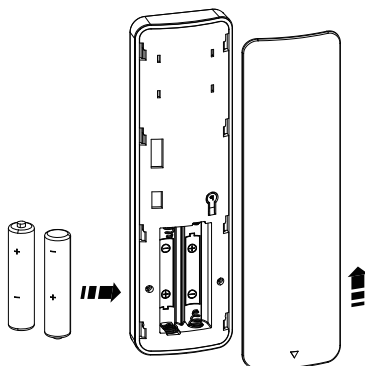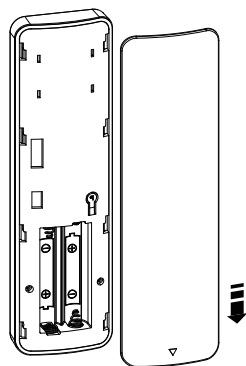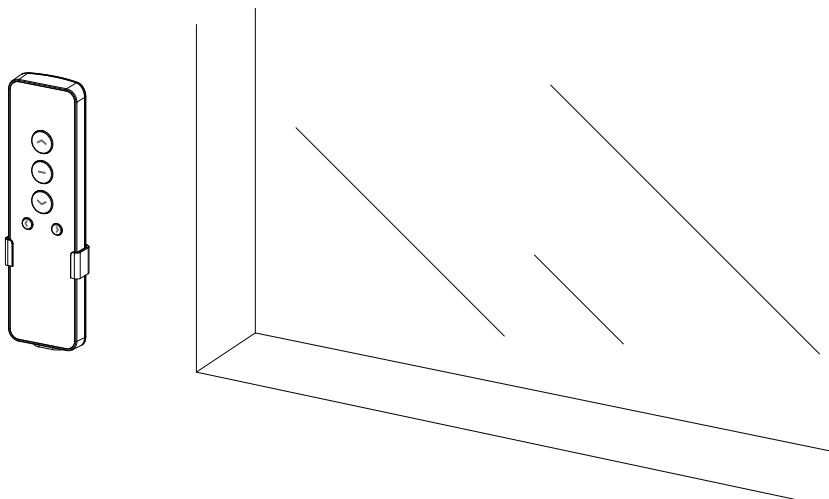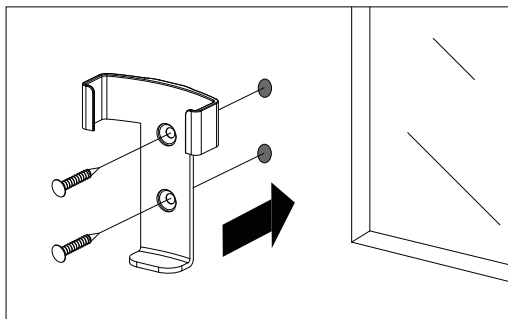

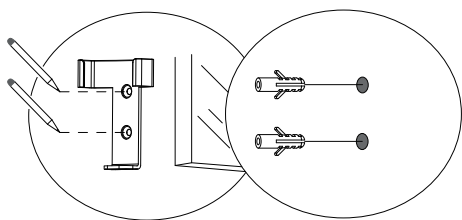

SMARTWINGS

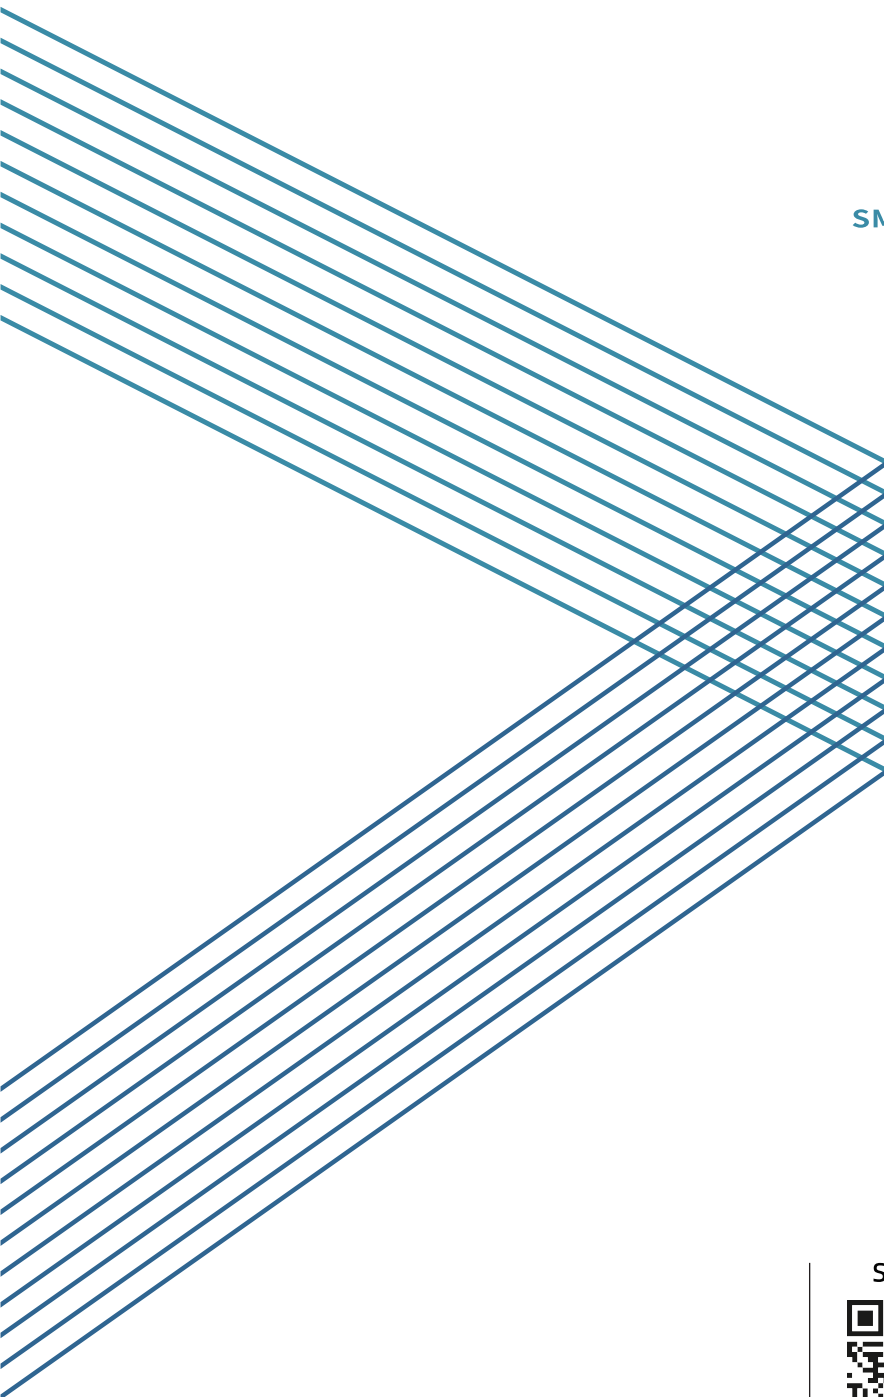

Social Media



T +1 877 762 7861
www.smartwingshome.com
support@smartwingshome.com