

1 Gather Your Supplies — Select the individual CPI PreTreat, sealing bucket(s), the CPI solution bucket and the CPI Microfiber Mops, Pads or Cloths needed for your cleaning task(s).



CPI solution bucket



CPI PreTreat buckets



CPI Microfiber mops, pads or cloths

Lay the CPI microfiber cleaning side down inside the PreTreated bucket(s).



CPI PTBUCKET = 18" microfiber mops



CPI PTMINI = microfiber cloths and trowel pads

2 Measure The Cleaning Solution

Add the amount of CPI microfiber from step 1 above, refer to the bucket sticker chart inside the CPI solution bucket to pinpoint the amount of cleaning solution. Pour that amount of cleaning solution into the CPI solution bucket.


NOTE: Use the cleaning solution you are currently using.



3 Add Cleaning Solution — Slowly pour the measured solution from step 2 over the CPI microfiber. Move the CPI solution bucket back-and-forth over the microfiber in the PreTreat bucket(s). Empty all of the measured cleaning solution.



4 Ready To Clean — You are now ready to clean with your CPI eWAVE™ and eTrowel™ pads. Cloths and non-mesh backed microfiber products require the lid to be secured and the bucket to be flipped for 10-15 minutes for the microfiber to correctly charge with cleaning solution.

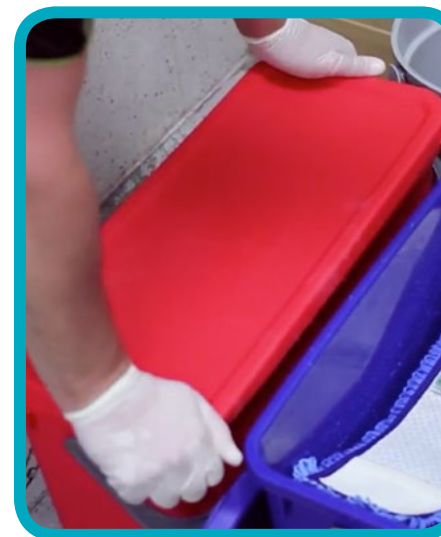

Scan the code or [View Online](#)