


Modification Guide for Winchester Super Model 1 for LPGWorks Shell Catcher

Due to the location of the charge handle on the Winchester Super X Model 1, there isn't enough clearance between it and the required height of the shell catcher as shown below.

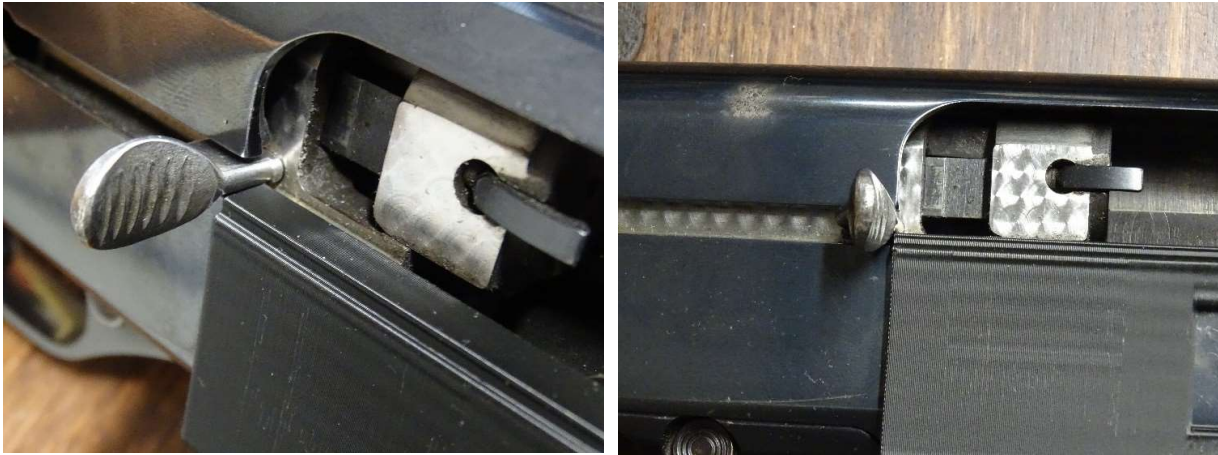

The charge handle will need to be modified as follows.

Remove approximately $\frac{1}{64}$ (.0196) of an inch / .5mm of material in the area marked on the charge handle in black below.

