

vanmade gear™ MOUNTING ZIPPERED BACK WINDOW SHADES

** Your shade will come with a metal strip with VHB adhesive backing.*


1.

Line up the included metal strip to the top of the glass. Peel back one side of the adhesive backing about 2-3". Adjust placement until it's level and make sure no light comes through the top edge as you hold it in place. With the metal strip pressed firmly against the glass with one hand, slowly peel the backing off by pulling straight down with the other hand. Continuously check that it's straight as you peel.



2.

Pop the sides of the upper panel off the three clips holding it to the frame. No need to remove the whole panel as you can easily slide in and attach the magnetic border of the shade to the metal frame around the window. The cut-outs should line up where the metal clips protrude so the panel can be clipped back on.

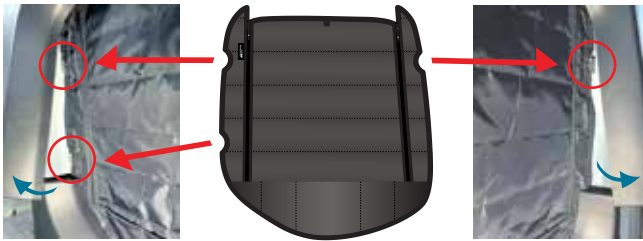

3.

Pop the sides of the lower panel off to tuck the bottom trim underneath, securing the pockets. You can then push the panels back onto the clips. When you zip up the shade the magnets in the trim will snap to the metal strip for complete cover.

! Tip: You may want to use a plastic trim removal tool from the outer panel edge if you are unable to pop the trim off by hand. !

