


*If you have any confusion about how to mount front door mosquito nets, we've made this graphic to help!*


1.

Facing your windshield, this is the correct orientation of your mosquito nets.

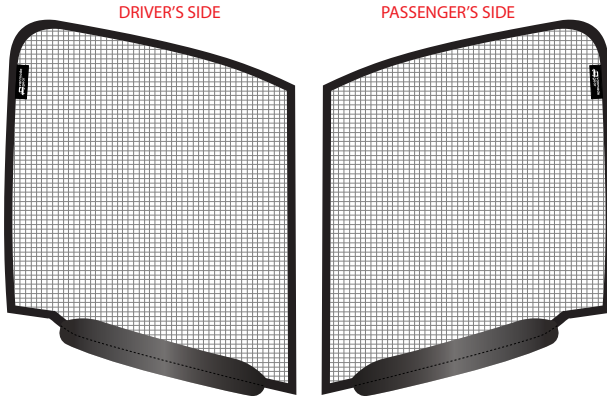

2.

Attach the magnetic border to the window frame. Then, tuck the plastic piece on the bottom into the door panel where the window rolls up and down.

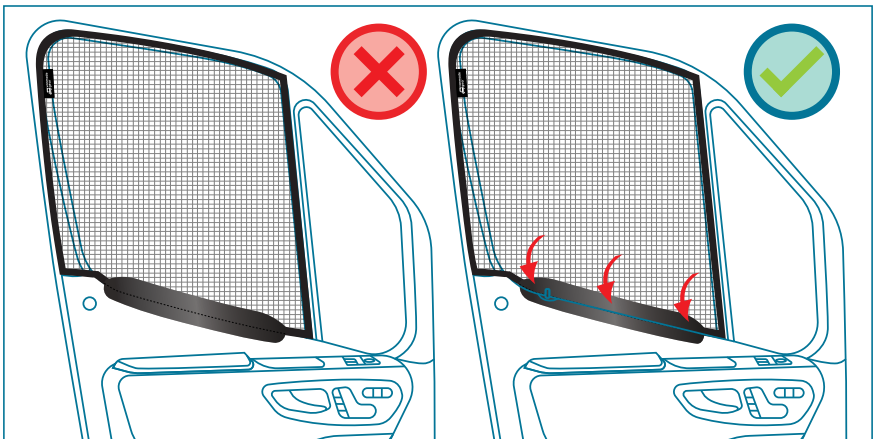

YOU DID IT!