

+2013 CUMMINS CSP5 SOTF – Install Instructions

1. After mounting your switch on the dash, you will run the harness through the fire wall. Into the engine bay.




2. Locate the harness in the engine bay and pull through some of the harness with out causing tension.



3. Locate the CCV Connector and disconnect it by releasing the sliding red locking tab.



4. Install the brown, black and red terminals into the provided connector. (Make sure you hear a click when pushing the terminal in to the connector). Next look in to the connector and push the red locking tab in.

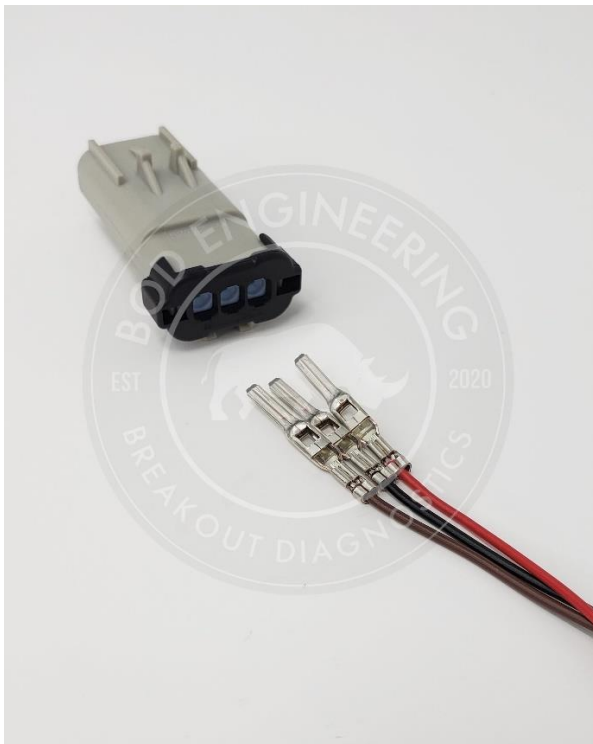

5. Plug your new connector in to the factory harness.



6. Zip-tie everything in place and clean up install before taking it out for a test drive

*Tuning sold separately.