




INSTALLATION METHODS


Installation diagram

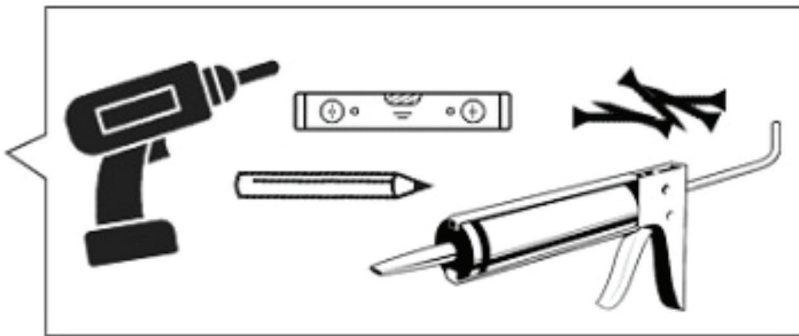


You will need grab adhesive, screw-driver, pencil and black screws. For protection use cotton gloves when working with the panels.

NOTE:


Because of the amount of wood in the acoustic panels, they can have a bit of a smell of wood. Therefore, we recommend that they are acclimatized before mounting.

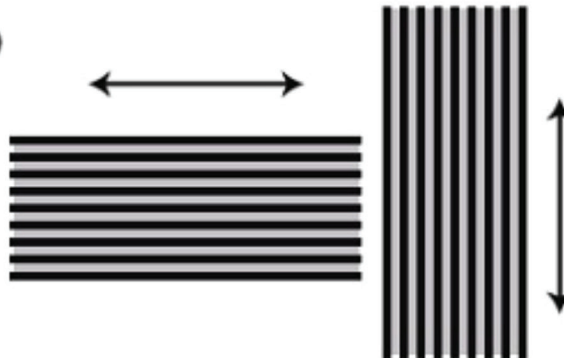

Decide which direction you want to use. The acoustic panels can be shortened from the back with fine-toothed blade.

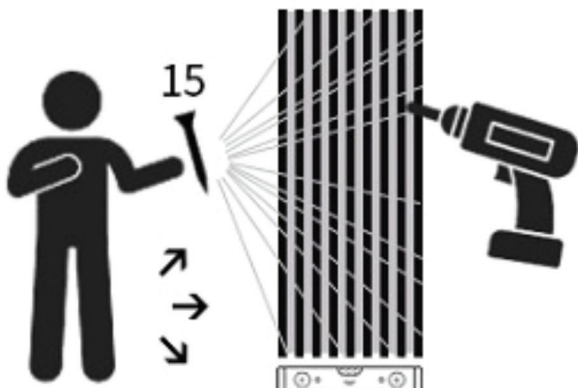

Install the acoustic panels with screws or adhesive through the polyester on wall or ceiling. Use 15 screws to each panel. Form work shall be distanced by 60mm. Always use screws when mounted on ceilings.

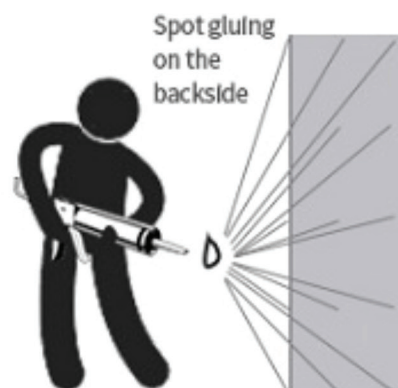

Remember :You can either use adhesive or black screws when installing your new panels on your wall. Always use screws when installing panels on ceilings.