Roosevelt Series Bench Assembly.

1. Place the unopened box on a small table with the seam tape facing up. Open the box, leaving the cardboard underneath.


Separate out the interior packaging. (This will save a lot of time)



2. Locate the bag of fasteners (Attached to one screw under the top). Insert one glide through the threaded hole in the bottom of the legs. Put the nut on the end of the inserted glide. No need to tighten now.



3. Find the front side of the legs and top. (Labeled Front). Place the top of the leg frame holes over the elevated screw heads, slide the base so the screw shafts slide into the slot. Tighten the screws.

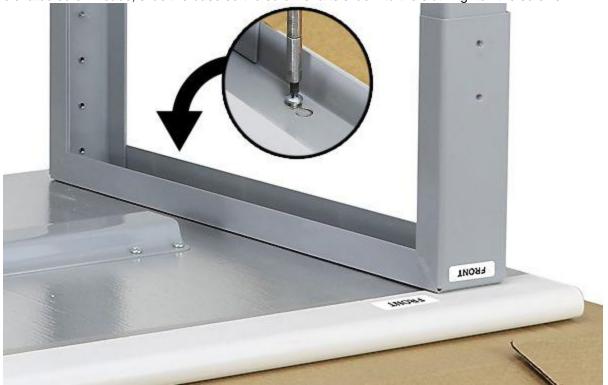

4. The front of the legs have 1/4" holes. The back side of each leg has 4 smaller, threaded holes. Position the back bar over the threaded holes, insert screws and tighten. (There are no lock washers or nuts required here)



5. Turn it over.



6. See if the table wabbles nuts on the glides.	due to an uneven floor	. Lower one glide to stop	the wobble. Now tighten the