
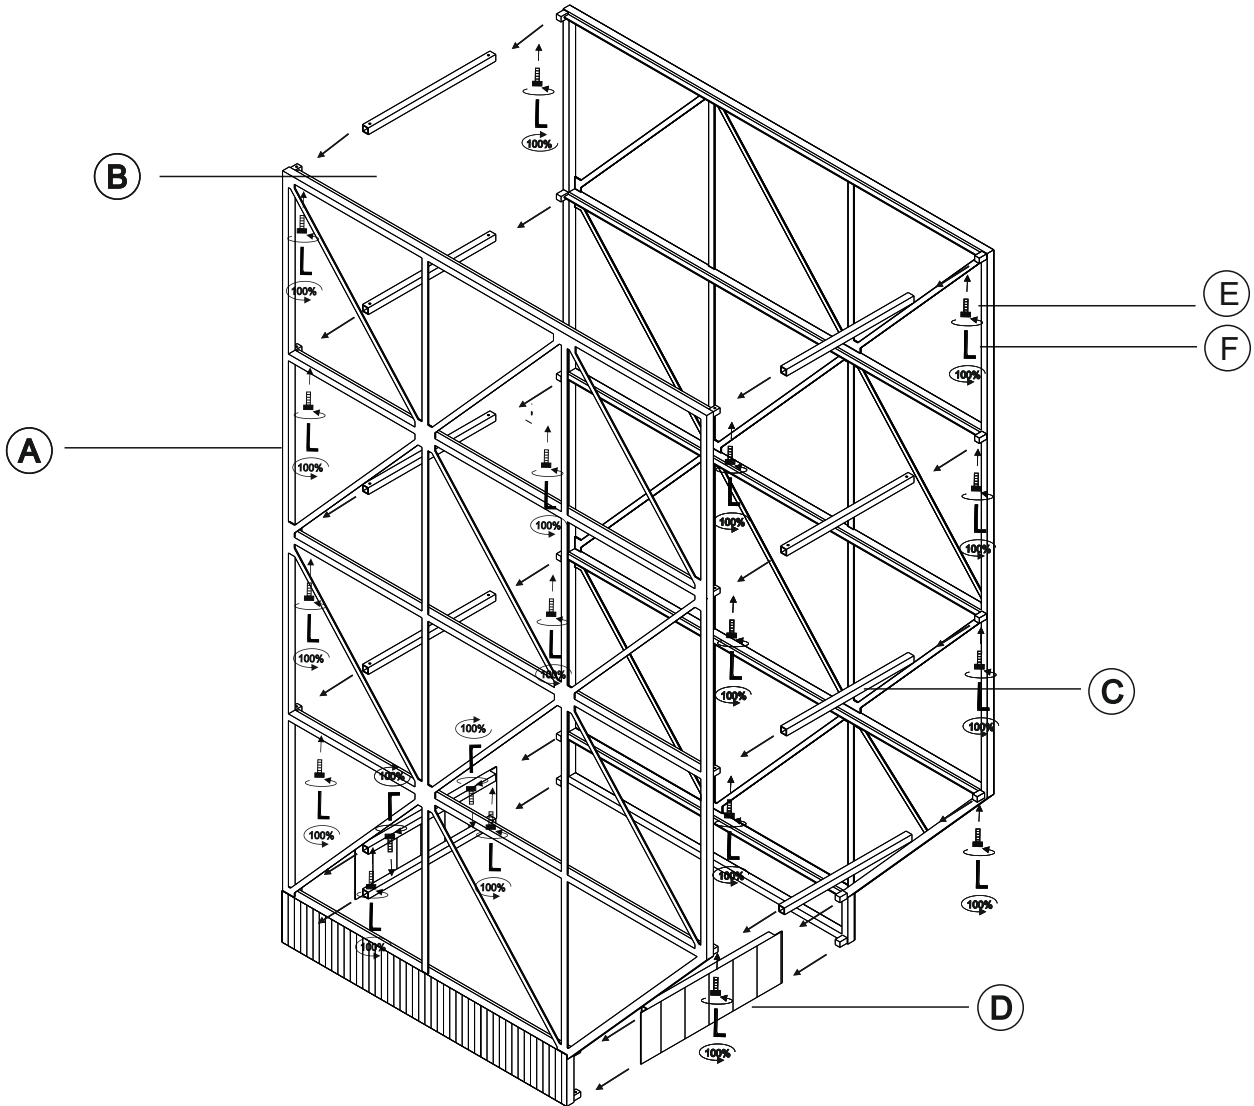


RF

RENOVATION FACTORY


F11003070526300

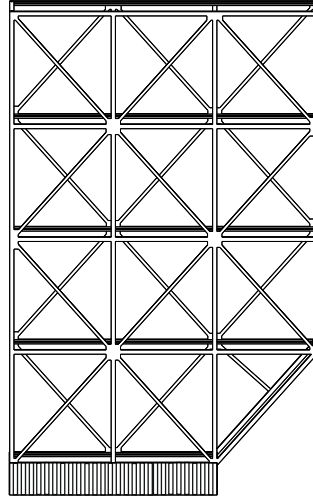

A			Metal Frame	2
B			Glass	5
C			Metal Connector	8
D			Base Metal Connector	2
E			Screw	24+2
F			Allen key	1


STEP 1

Insert the metal Connectors & base metal connectors in front frame carefully.

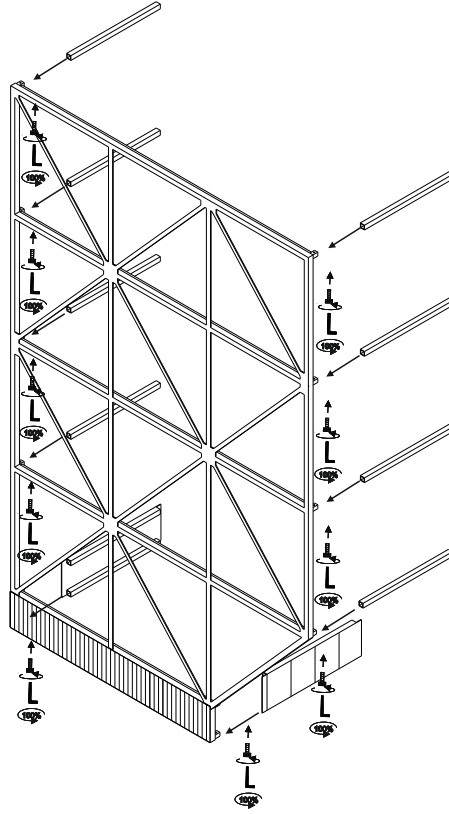


STEP 2

Insert the metal connectors & base metal connectors in back side frame carefully.

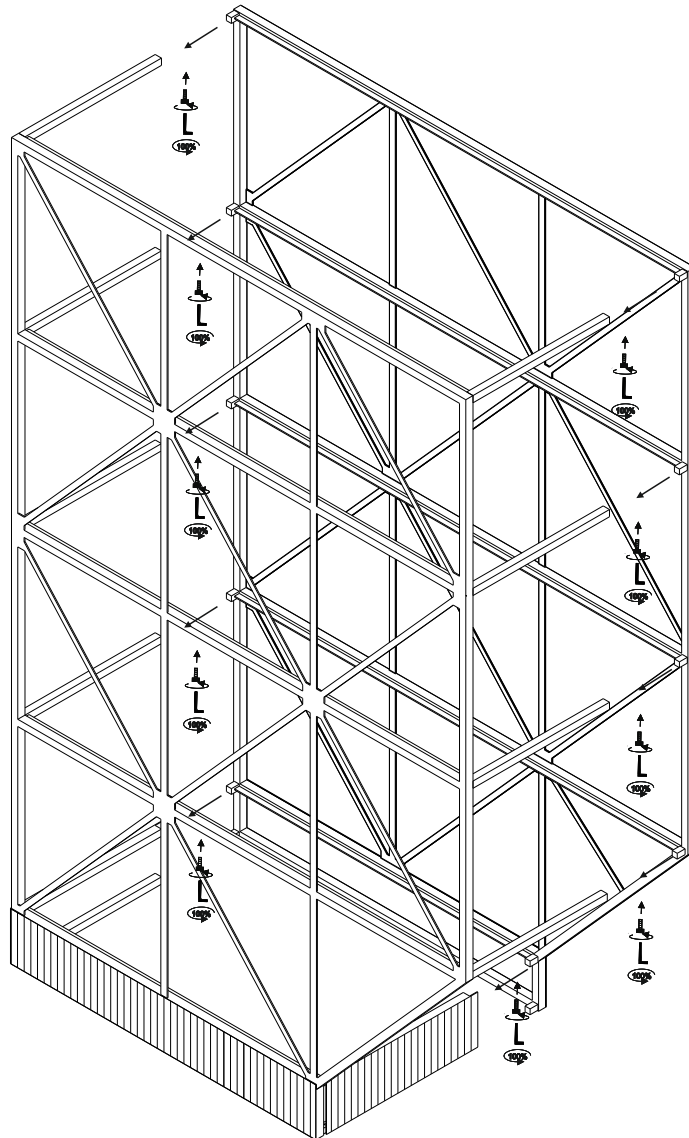


STEP 3

Align all holes of Connectors, Base Metal Connectors with both frames bush threading holes.

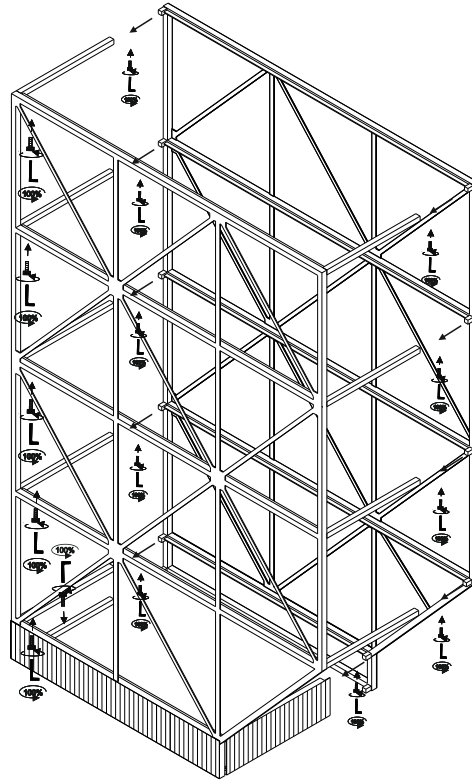


STEP 4

Tightening all screws (24 Nos.) using Allen Key.

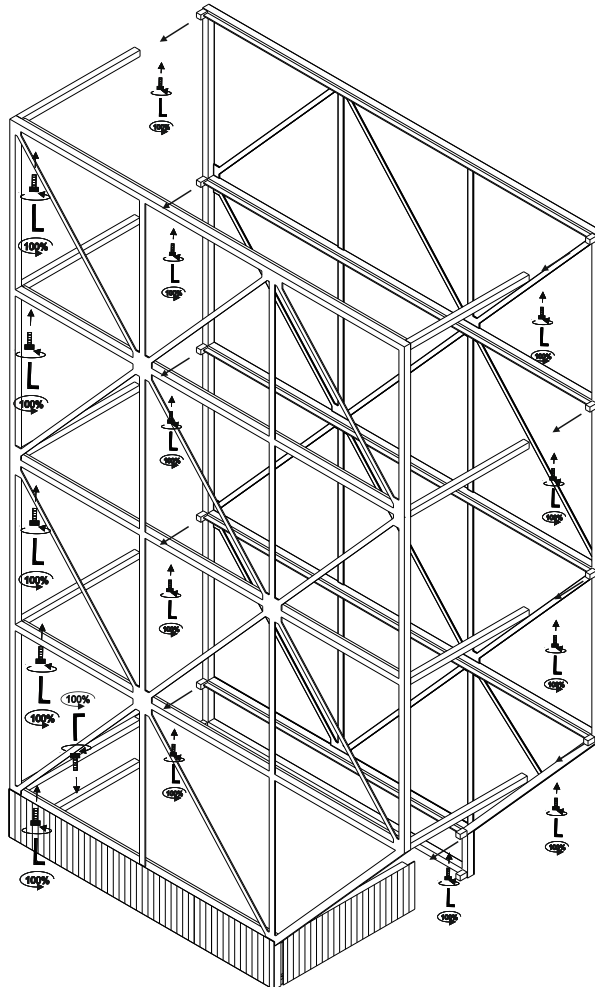


STEP 5

To avoid cracking of glass, carefully put the glass on the soft transparent dots pasted on the metal frame.

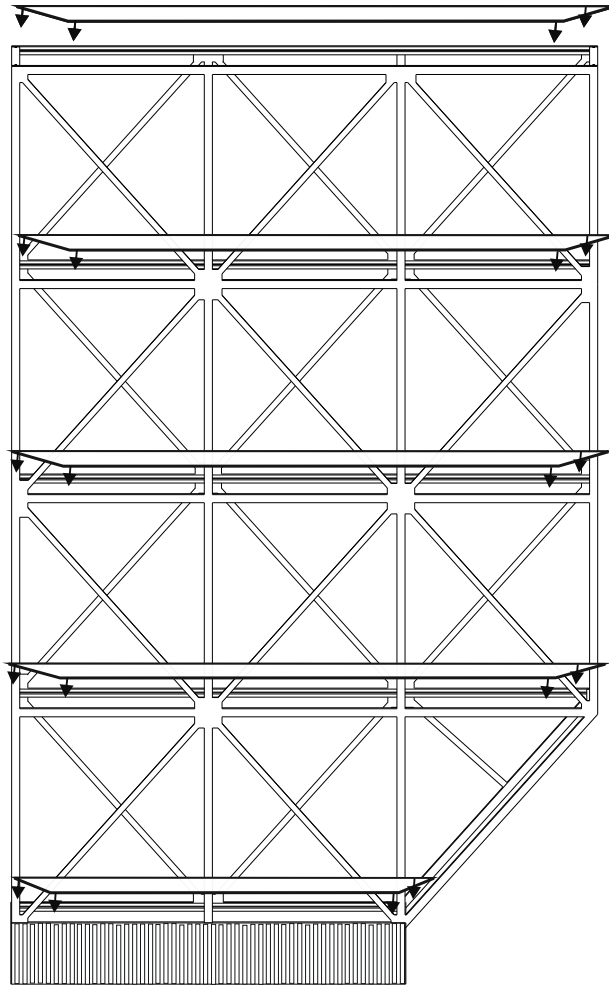

Final Product Image

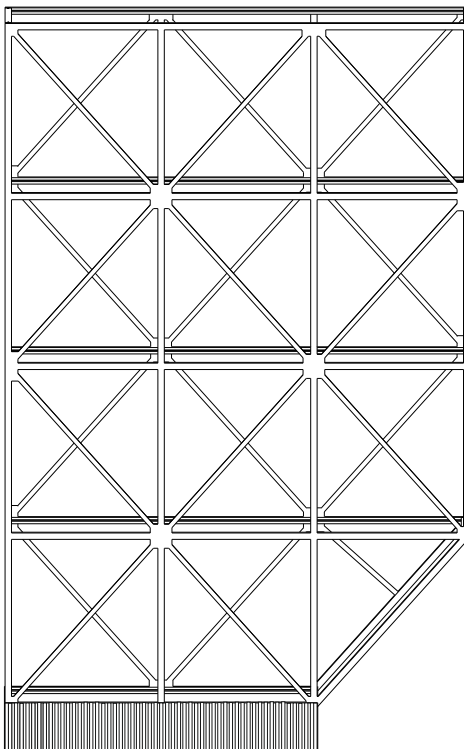

Now your product is ready for use.

CLEANING & CARE

- Dust regularly with a dry cloth.
- Wipe clean with a damp cloth.
- It is not recommended to use furniture polish or sprays.
- spillages should be removed immediately using a damp cloth, then dried thoroughly.
- Do not use abrasive cleaners.
- Do not use chemical cleaners.
- Always use heat proof placemats or coasters to protect the surface.
- Do not position your furniture in front of radiators, fires or direct sources of heat.
- Do not stand or sit on this product.
- Retain these instructions for reference.

