

BBK PERFORMANCE LLC / For any questions, email us:
3060 Performance Circle / TECH@BBKPERFORMANCE.COM
Deland, FL 32724



INSTALLATION INSTRUCTIONS - INS175

GRIPP SUSPENSION'S POLYURETHANE AXLE BUMPSTOP

PART # 2531 // 1979 - 2004 Ford Mustang



Special Tools required: 8, 13mm socket, ratchet..



Install Time: Approximately 15 minutes.



Difficulty: Easy.



MADE IN U.S.A.

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019

FOLLOW THESE INSTRUCTIONS CAREFULLY TO ENSURE CORRECT FITMENT AND OPERATION

STEP 1

Raise rear of vehicle up and support on sturdy jack-stands.

STEP 2



Locate pinion snubber bracket mounted to vehicle floor just above the front of the rear axle at the center of the vehicle.

STEP 3

Using an 8mm socket, remove the three mounting bolts that mount it to the body.

STEP 4


Remove bracket and stock snubber.

STEP 5



Remove nut from snubber stud and remove snubber from bracket.

STEP 6

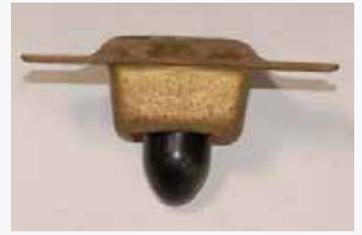

Install the GRIPP pinion snubber with provided nut into the bracket.

STEP 7



Reinstall bracket with new GRIPP snubber back in place.

STEP 8

Carefully lower vehicle back down.

 MADE IN U.S.A. 

IMPORTANT: All appropriate safety equipment and gear must be used during the installation of this or any BBK Performance products or any time you work on a vehicle. BBK Performance accepts no responsibility for injuries or damage caused by or during the installation of this product.

UPDATED LAST: March 2019