




POCKET PANEL

INSTALLATION INSTRUCTIONS - ALSO AVAILABLE ON 

1. Position panel on wall in desired location.
Remove blue arrow and place above orange arrow. (Point facing point)
Remove Panel

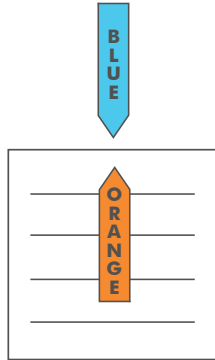


2. Make sure arrow on wall is centered at desired location.
Move arrow left or right to accommodate.

3. Remove green arrow from panel and place under blue arrow on wall.
(Point touching point)



4. Align center of elongated hole on mounting bracket over **X** on green arrow. Using Phillips screwdriver install first screw through center hole into **X**. Do not over tighten. Remove green arrow by pulling straight up.

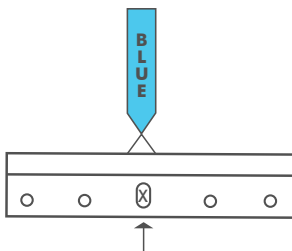

5. Level mounting bracket, install and tighten the remaining screws.
6. Place top of panel at top of blue arrow, lower panel until brackets connect.
Align arrow points.
7. If necessary, panel can be adjusted left or right 1/2", then realign blue arrow with orange arrow.
8. When satisfied with panel placement;
Remove panel by lifting up until brackets disconnect.
Remove liner from 3M Velcro strip, located at bottom center of panel back.
Repeat step 6. Keeping bottom of panel away from wall.
When blue and orange arrows are aligned, press panel front at 3m Velcro location until tape adheres to wall.
9. Place pockets on panel in desired locations.
Pockets can be easily repositioned to accommodate different items.
When satisfied with pocket placement they can be fastened more securely by removing 3m liner on back of pocket and placing back on panel. Lightly press pocket towards panel.

Happy Organizing

CAUTION : DO NOT HANG IN AREAS WHERE INJURY MIGHT OCCUR IF MOUNTED OBJECT FELL.
This product has a permanent adhesive and may cause damage if removed.

MAX WEIGHT : 15 lbs
INSIDE USE ONLY