



Plated Ground Mounted Kit

Thank you for purchase of our *Plated Ground Mount Kit*.

Foot plates are to be used on a level concrete surface. A small amount of adjustment is available for a slight slope. Not recommended for tiled surfaces as drilling may cause tiles to crack.

Parts:

- A. 2 x Foot Plates
- B. 4 x Tech screws

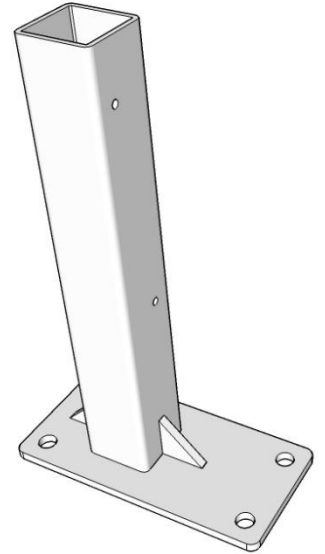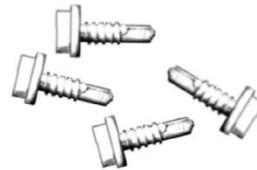

Assembly instructions

Step 1: Find the post holes centres as per Step 1 on your main *Ground Mount Instruction Manual* and make a 10mm mark on the ground surface.

Step 2:

Place the foot plate on top of the hole centre mark. Look down through the top sleeve and centre the mark within the area. Use your marker to mark the locations of the 4 bolt holes. Remove the foot plate.

Step 3:

Using a 10mm masonry drill bit, drill down on the four marked holes, enough to cover the depth of your fixings. Place the foot plate back over the holes and insert the fixings and tighten. Repeat on the other side. Place the posts into the sleeve, making sure the post holes are the same as Step 3 in your *Ground Mounted Instruction Manual*. Use the tech screws to secure the posts in the sleeve.

Step 4:

Continue at *Step 4* on your *Ground Mounted Instruction Manual*.