



Congratulations on your purchase of the BOAT-TOTE, the innovative boating and fishing accessory.

Please visit [www.boat-tote.com](http://www.boat-tote.com) for details on other innovative products we make and useful accessories for your BOAT-TOTE.

For Customer Service Please Call 1-888-514-1663

BOAT-TOTE is a patent pending product PCT#WO2018141066 owned and sold by:

1257425 BC Ltd.  
101-3570 194<sup>th</sup> Street  
Surrey, British Columbia, Canada  
V3Z 1A5  
[www.boat-tote.com](http://www.boat-tote.com)

Follow us on Facebook at:

[www.facebook.com/boattotecanada](https://www.facebook.com/boattotecanada) or [www.facebook.com/Boattoteamerica](https://www.facebook.com/Boattoteamerica)

Follow us on Instagram at: [www.instagram.com/boat.tote/](https://www.instagram.com/boat.tote/)

**Important Notices:**

- This product is designed for most smaller boats with a gunnel width or lip of 2.25" (57 mms) or less. It works on most commonly available aluminum and fibreglass boats.
- This product contains small parts that could cause a choking hazard.
- Install carefully and use at your own risk. Seller is not responsible for loss or damage to the BOAT-TOTE or hull caused by incorrect installation or use nor is seller responsible for any lost personal property (fishing rods, etc.) that may occur while using the product.
- **Please always boat responsibly and safely.**
- **Please obey all applicable laws when using your Boat-Tote.**

**Assembly Instructions:**

1. Remove the BOAT-TOTE and all the components from its packaging and recycle the cardboard packaging materials.

**TIP** - the Rod Holder Arm and Optional Tool Holder Arm accessories can be mounted on either side of the BOAT-TOTE depending on the users' preference.

2. Remove the Rod Holder Arm and the ¼" x 20 NC SS thumbscrew from inside the BOAT-TOTE.




3. Install the 1/4" x 20 NC SS thumbscrew through the hole in the rod holder base. The rod holder base has a series of radial holes in the mounting plate that engage with a pin on the body of the BOAT-TOTE to secure the rod holder from turning. Ensure that the accessory is tight against the BOAT-TOTE before tightening the 1/4" x 20 NC thumbscrew.



4. Remove the 1/2" x 13 NC jackscrew from its packaging and thread it into the BOAT-TOTE threaded insert at the base of the rear face of the BOAT-TOTE until it protrudes at least 1" (25 mms) past the threaded insert.




5. Install the self-levelling foot in the threaded end of the 1/2" x 13 NC SS jackscrew and tighten using the Allen key provided.

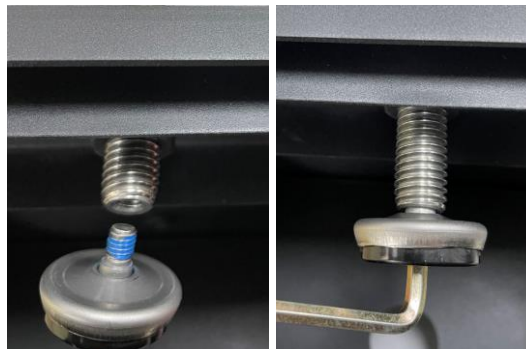

6. Next, simply slide the BOAT-TOTE over the gunnel of your boat until it is firmly seated.



7. Loosen the pre-installed  $\frac{1}{4}$ " x 20 NC SS thumbscrew on the bottom of the BOAT-TOTE, move the sliding shelf towards the gunnel until the BOAT-TOTE is level, and then retighten the thumbscrew.

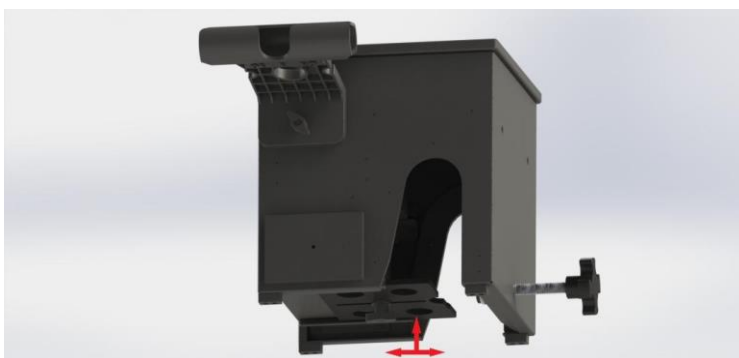

8. Then simply tighten the  $\frac{1}{2}$ " x 13 NC jackscrew until it is snug, and the BOAT-TOTE is securely fastened to your boat.



**Enjoy your day fishing and remember to be safe!**