

INSTALLATION INSTRUCTIONS

DRUM MULCHER HOSE CARRIER KIT INSTALLATION

DOC #15-2058




WARRANTY + SERVICE 888.960.0364

PARTS 888.960.0361



DIAMONDMOWERS.COM

HOSE KIT INSTALLATION

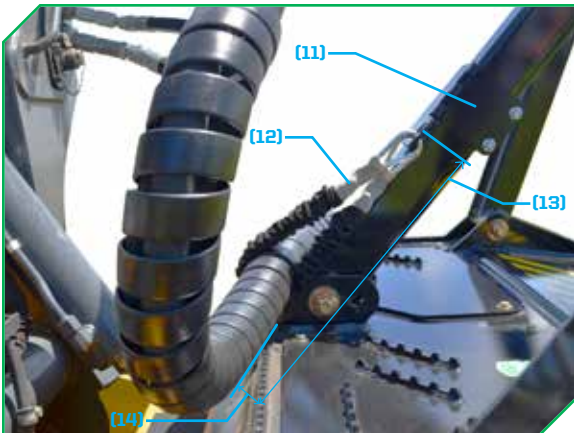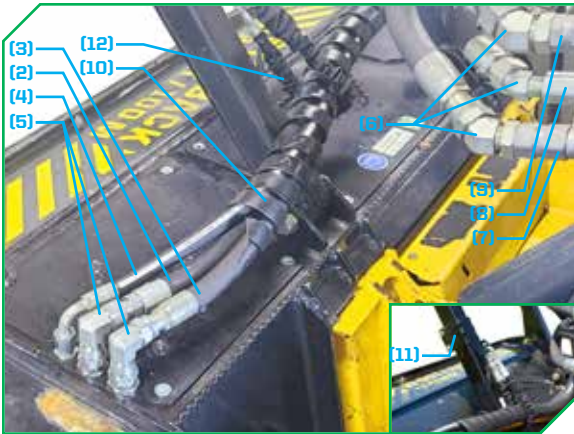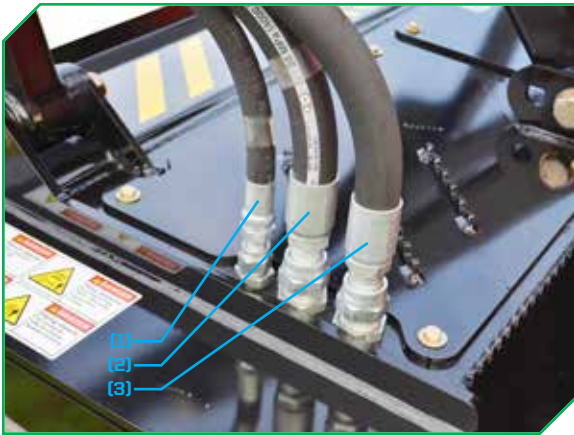

- Disconnect the hoses₍₁₎₍₂₎₍₃₎ from the drum mulcher.
 - Remove the kevlar sleeve from around the hoses and discard.
 - Remove the quick couplers₍₇₎₍₈₎₍₉₎ from the hoses₍₁₎₍₂₎₍₃₎ (Note which hoses₍₁₎₍₂₎₍₃₎ had which quick couplers₍₇₎₍₈₎₍₉₎).
 - Discard the old case drain hose₍₁₎.
- Replace the old case drain hose₍₁₎ with the supplied case drain hose₍₄₎ and assemble it to the drum mulcher.
- Reassemble the pressure and return hoses₍₂₎₍₃₎ to the drum mulcher with the supplied 90° elbows₍₅₎.
- Reassemble the quick couplers₍₇₎₍₈₎₍₉₎ to the hoses₍₄₎₍₂₎₍₃₎ with the supplied 45° elbows₍₆₎.
 - Assemble the quick couplers₍₇₎₍₈₎₍₉₎ to the supplied hoses₍₄₎₍₂₎₍₃₎ in the same order they were attached to the original hoses₍₁₎₍₂₎₍₃₎.
- Wrap the hoses₍₄₎₍₂₎₍₃₎ with the supplied poly hose guard₍₁₀₎ as illustrated.
- Assemble the hose carrier bracket₍₁₁₎ to the push bar support with its supplied hardware as illustrated.
 - **DO NOT** tighten the hose carrier bracket₍₁₁₎ hardware at this time.
- Wrap the hose carrier₍₁₂₎ around the hose bundle₍₄₎₍₂₎₍₃₎₍₁₀₎ and connect it to the hose carrier bracket₍₁₁₎ as illustrated.
- Adjust the hose carrier bracket₍₁₁₎ approximately 15" (381mm)₍₁₃₎ from center of hole to deck edge.
 - Loosen the hardware and slide the hose carrier bracket₍₁₁₎ up or down the pushbar support.
 - The hose bundle₍₄₎₍₂₎₍₃₎₍₁₀₎ should be suspended 2-3" (51-76mm)₍₁₄₎ from the top of the deck.