


TT MOUNT - SINGLE SIDED 3.0

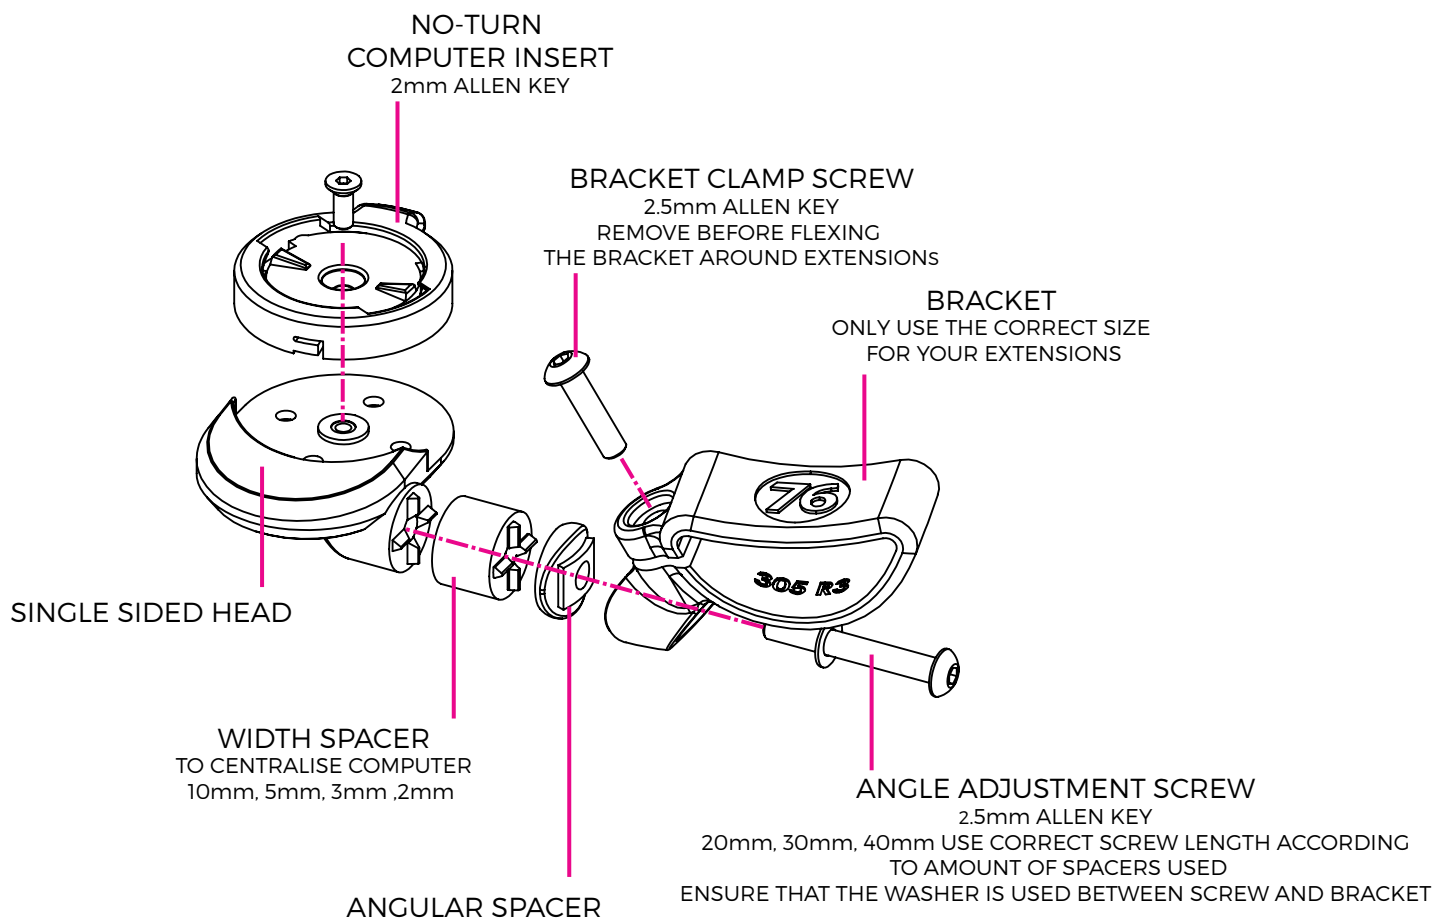


STEP ONE

Remove bracket clamp screw. The bracket can now be flexed open to fit over the extensions. Fit to the right hand extension approximately 20mm from the grip section.

Due to the shape of the extension the brackets will not fit in other locations.

Replace the screw but only tighten a few turns.

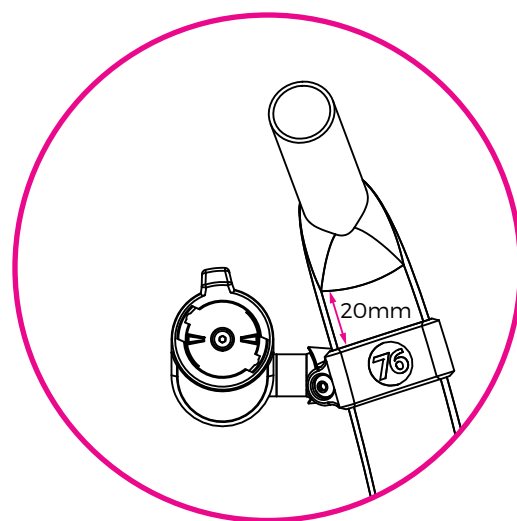

STEP TWO

Fit the computer to the head and hold it centrally between the bars level with the screw port on bracket. Establish which, if any, spacers are required and select the correct length angle adjustment screw to match.

The screw must pass completely through the nut body.

IMPORTANT
ENSURE SCREW ENGAGES
THROUGH NUT BODY

STEP THREE

To adjust the angles of the mount the angle adjustment screw should be tightened until a few mm to the end so there is still rotational movement possible without force.

Adjust the mount to the angles required before fully tightening the angle adjustment screw. Finger tight is sufficient.



To finish the bracket clamp screw should be tightened.