DR650 / DRZ400 Rally Shield Installation Instructions




1) Remove the stock headlight cowling.(3 screws, 1 on each side, and 1 in the center under the headlight)




2) Use the provided hole pattern to mark holes on your stock shroud for drilling.



3) Drill 4 holes in the locations marked in the previous step. Use a ¼ inch drill bit. (Not provided)

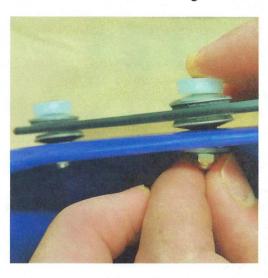

4) Attach Parabellum's Rally shield to the stock shroud using provided hardware. (Hand tighten only)

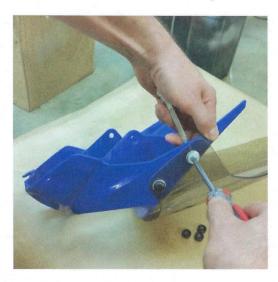

5) Tighten all 4 screws using a Phillips head screwdriver and an 8mm wrench. (Do not over tighten)



6) Re-mount your headlight Shroud on the bike in the original location.