




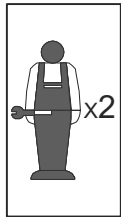


# Assembly Instruction

Applicable product model :

Ardina

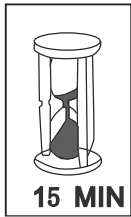

(3)=2



(1)=1

M6x45

Ø6


Ø6



A = 8


B = 8


C = 8






(2)=2

## Step 1

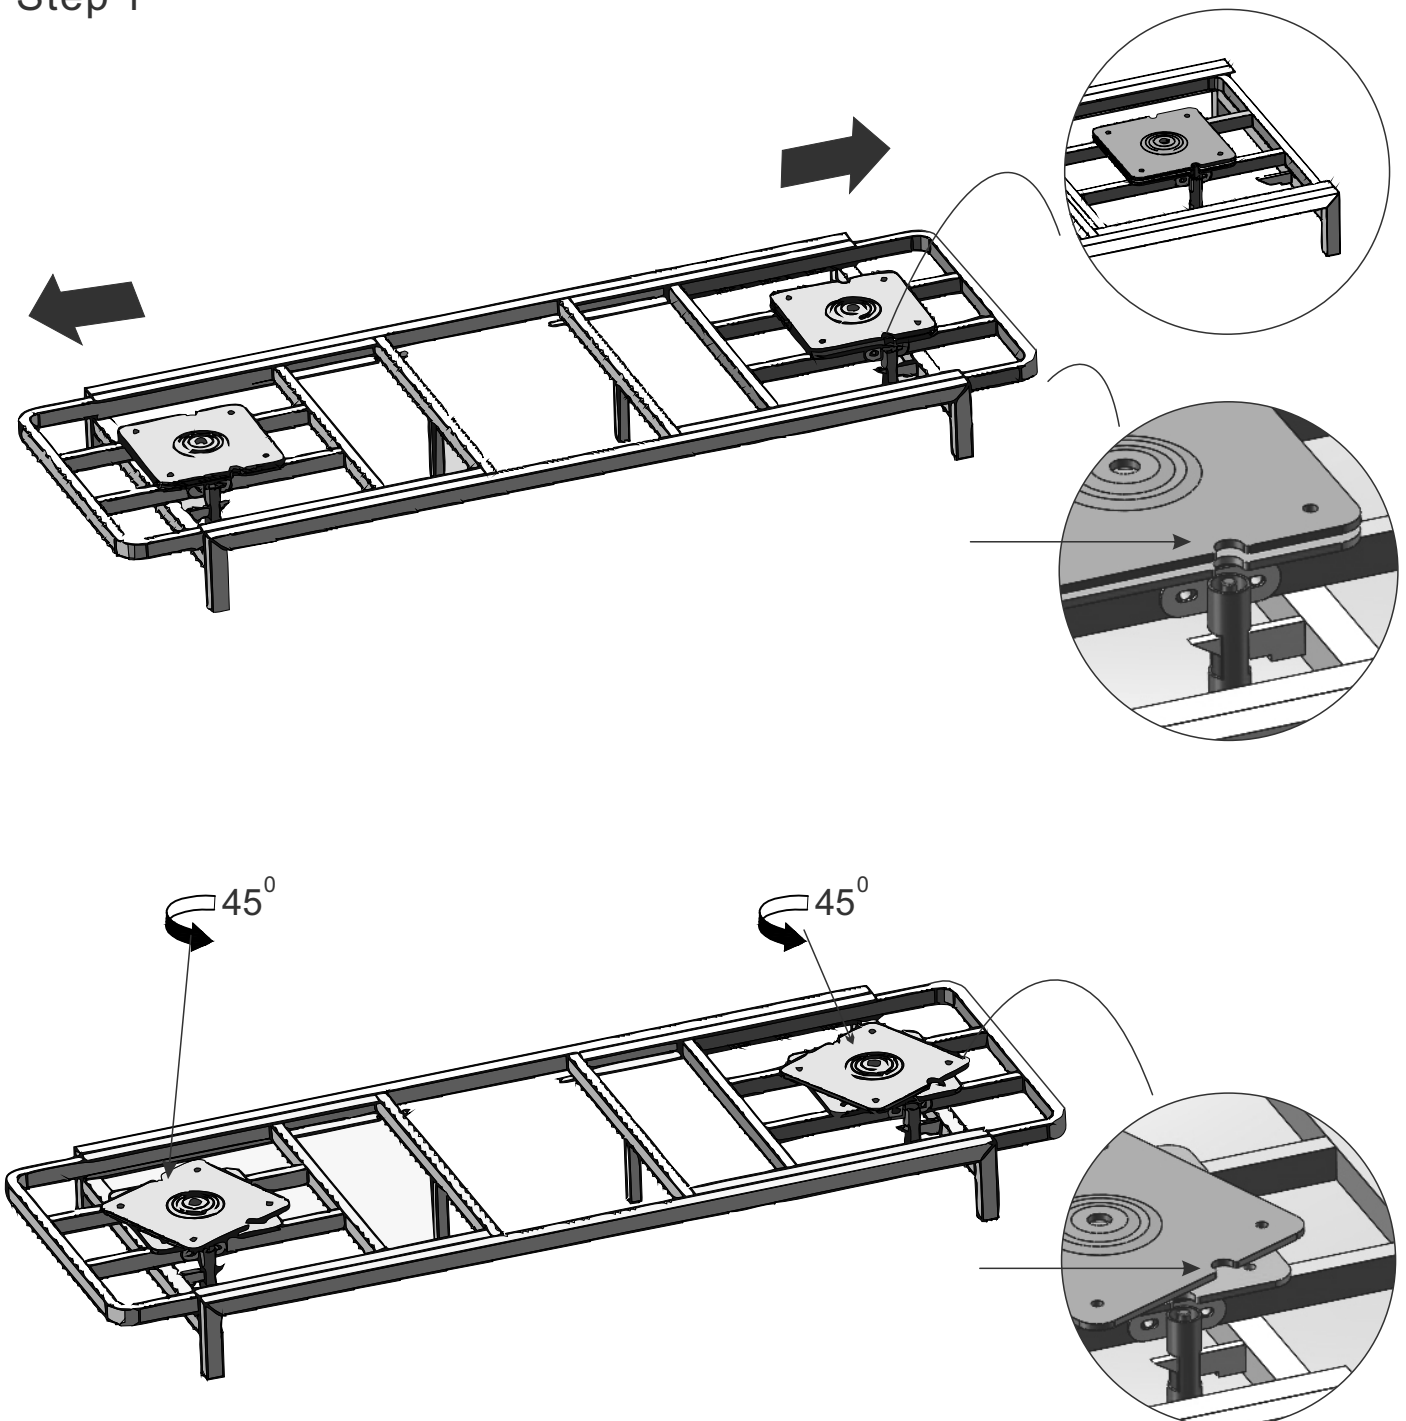



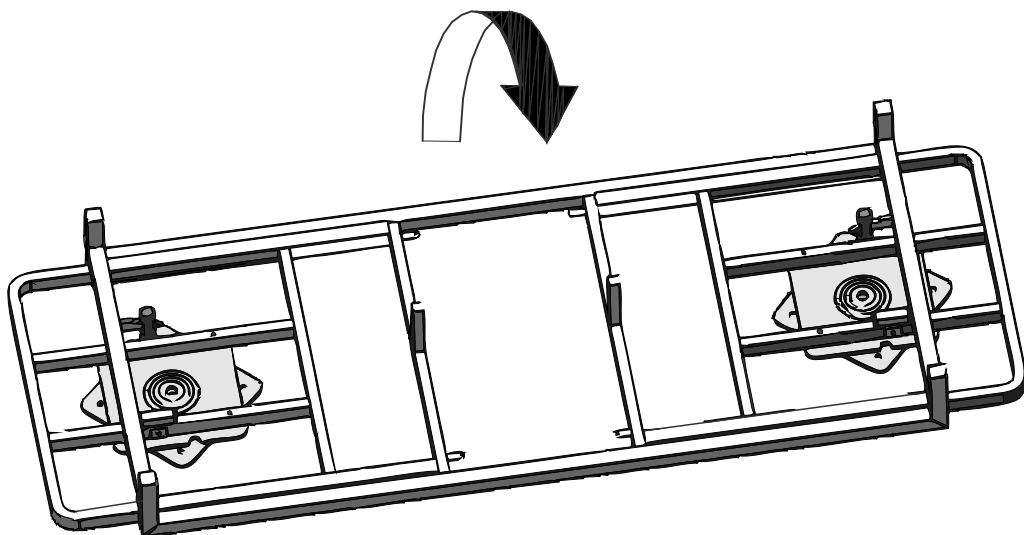


Step 2

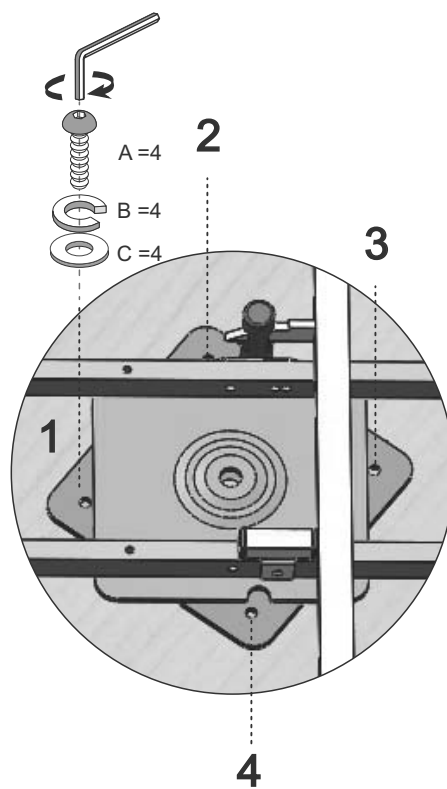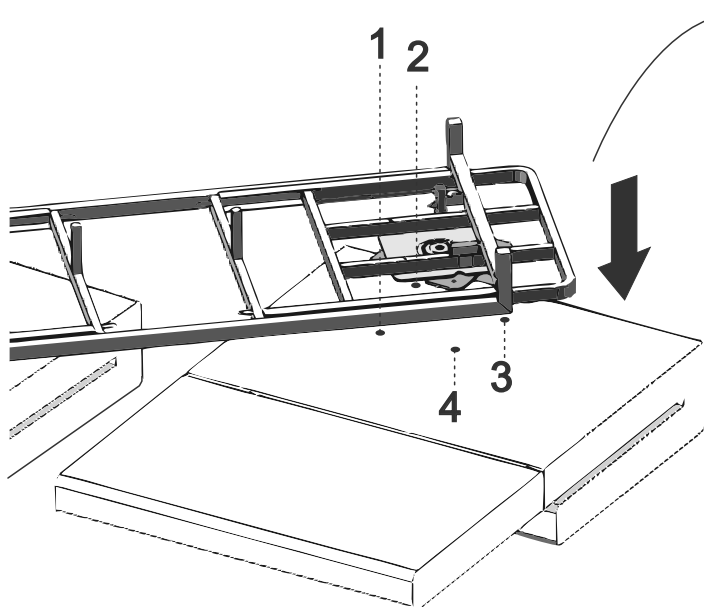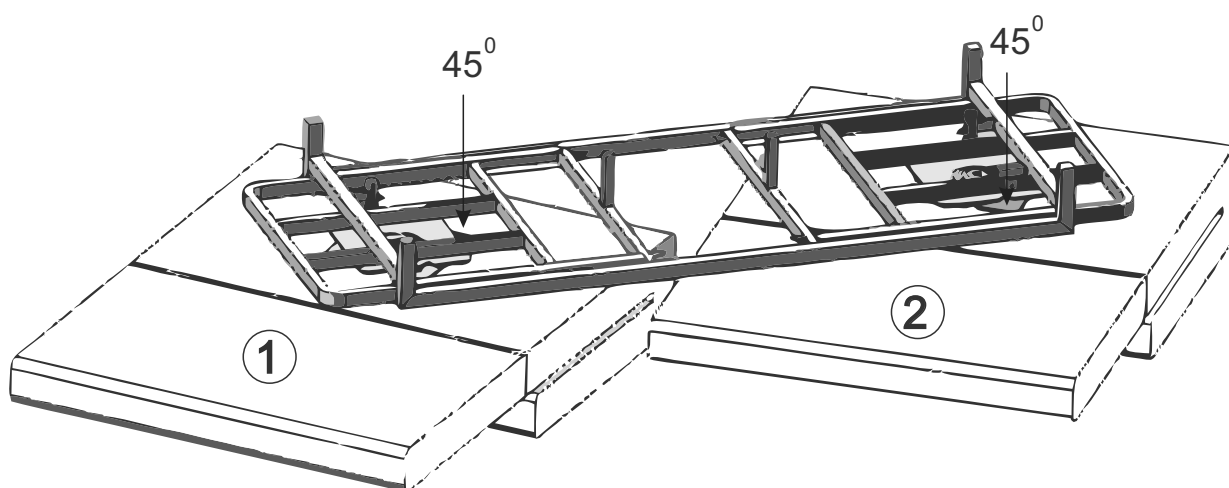


Step 3

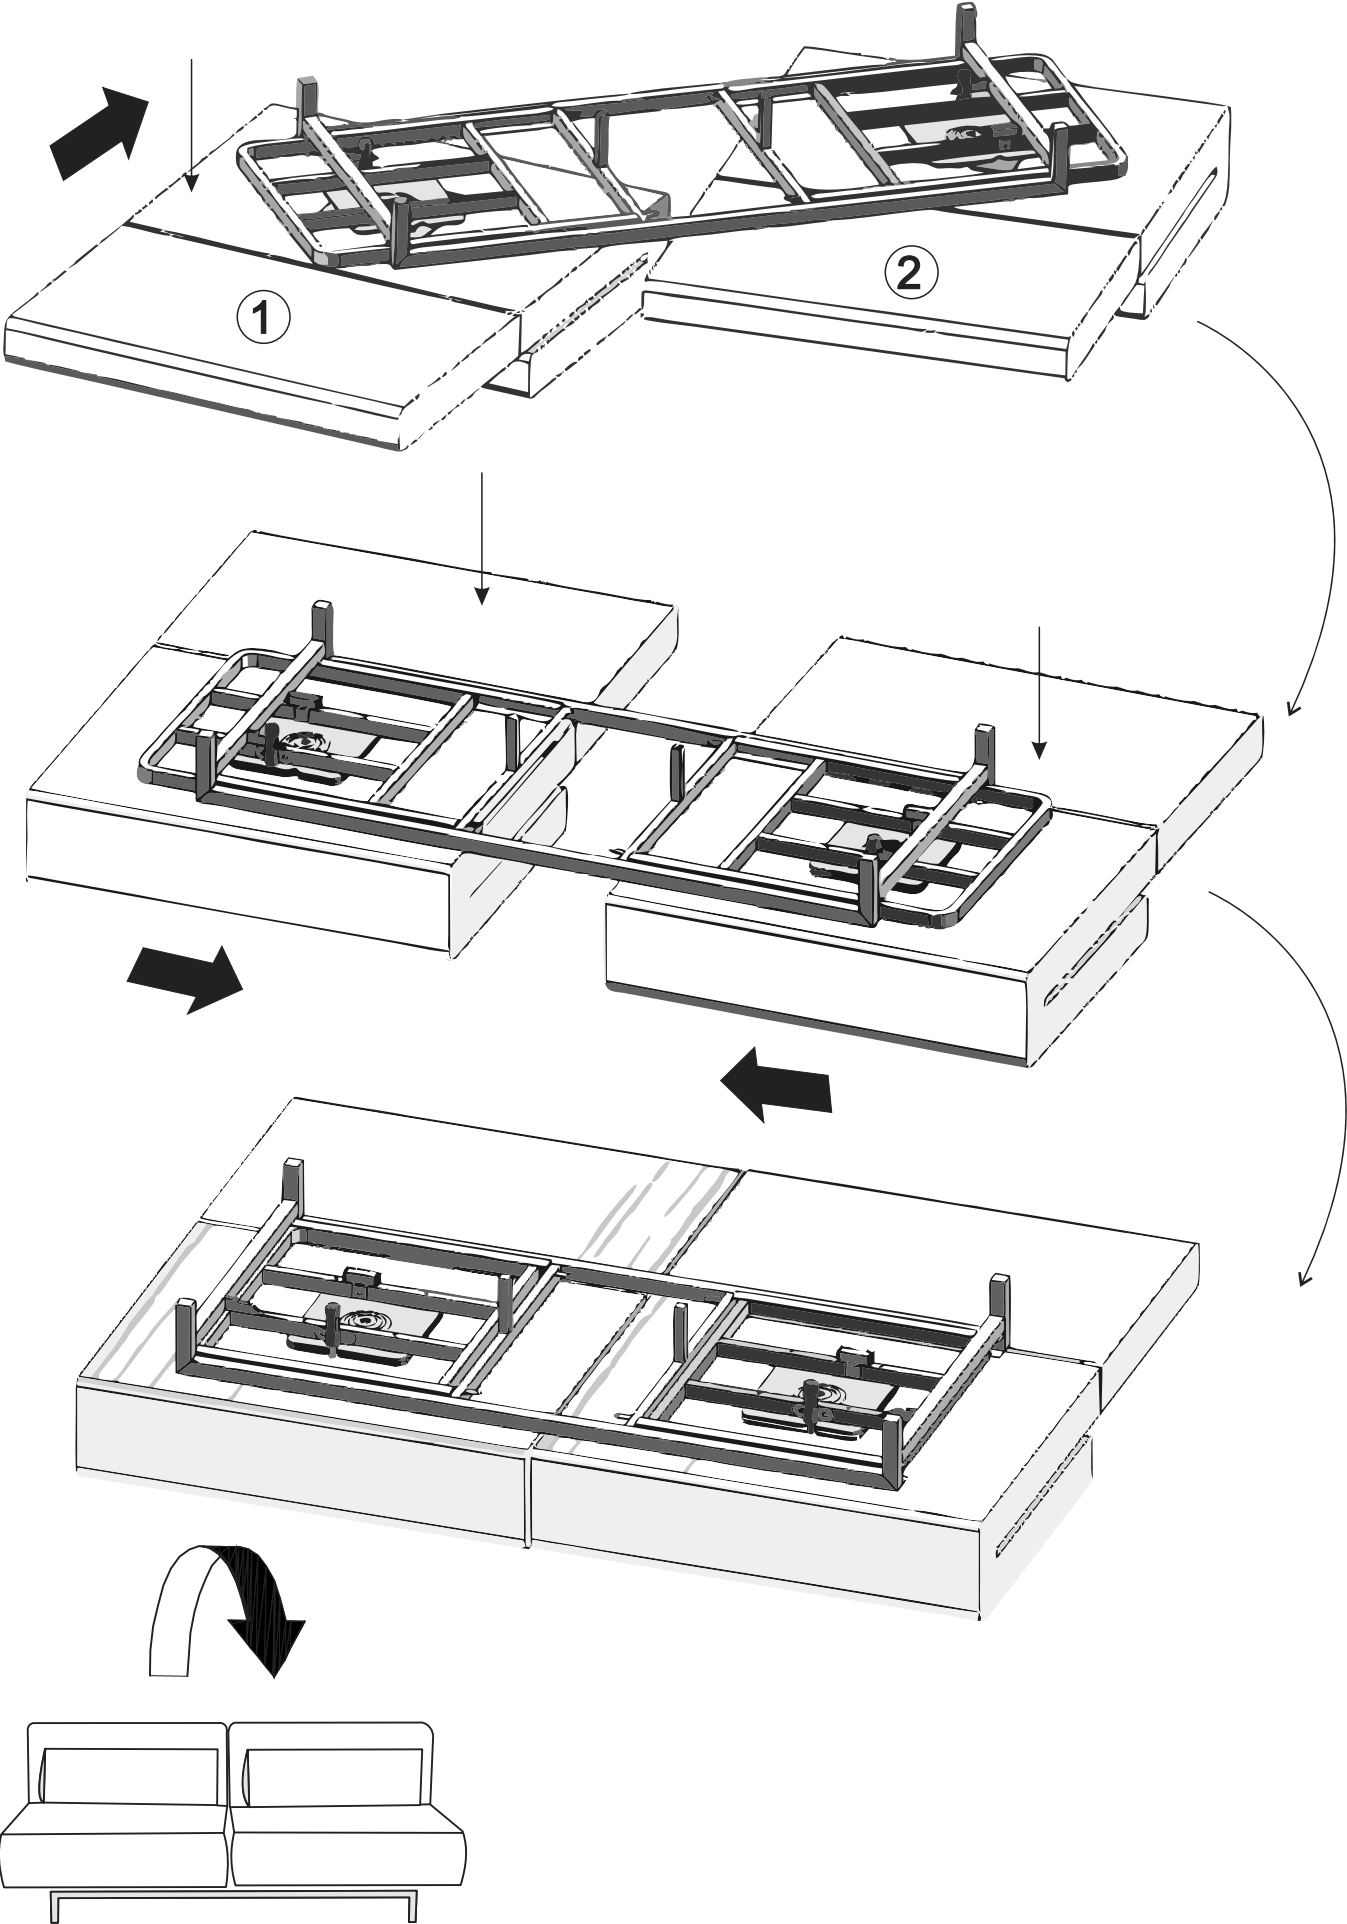


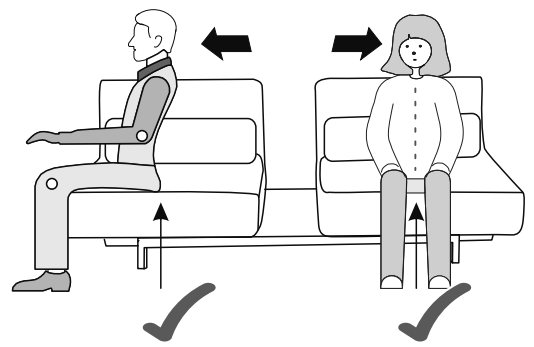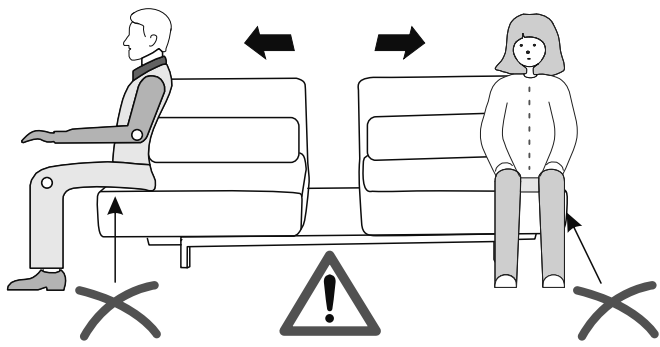


1

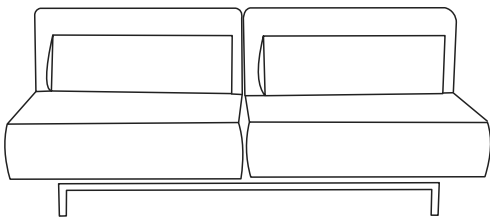


2

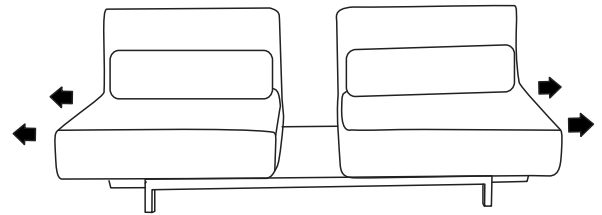


3

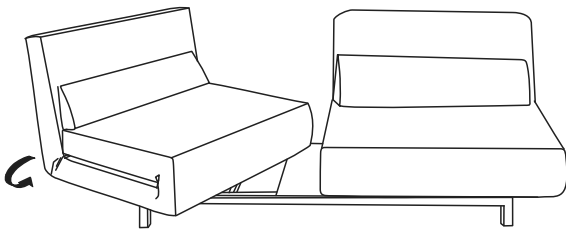


4

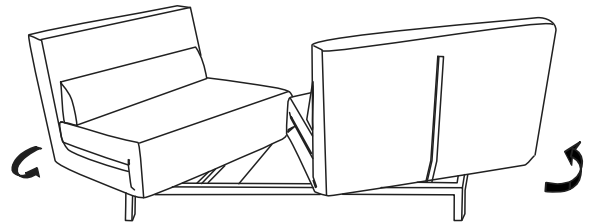


5

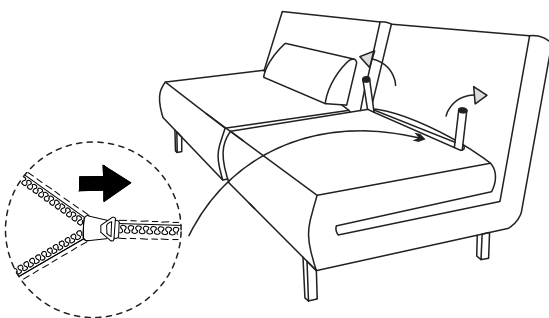

6

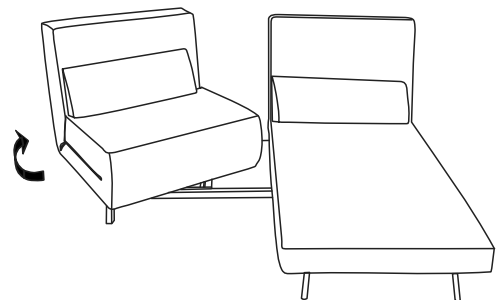

7

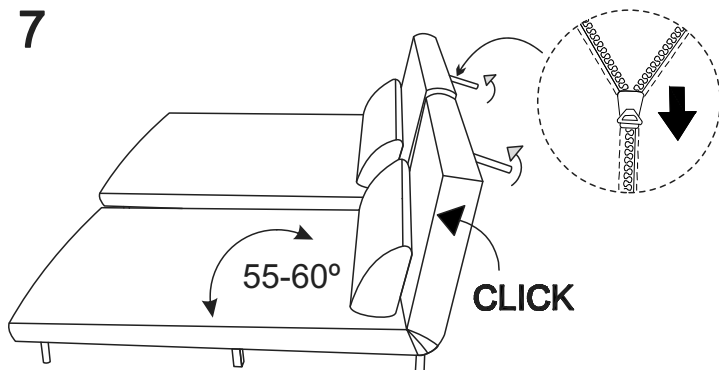

8

