

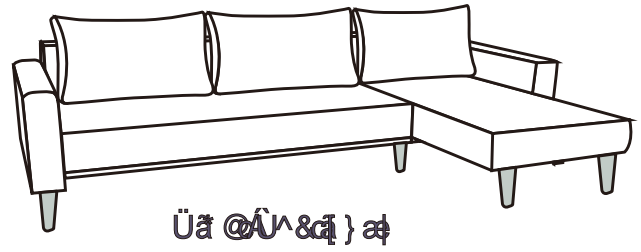
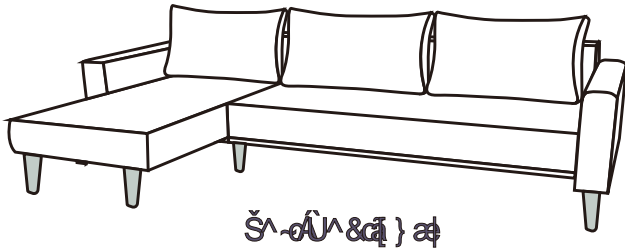


Assembly Instruction

Applicable product model :Marline

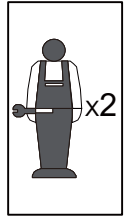

M8x75

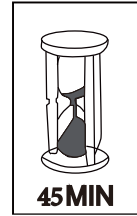

A=9

Ø25



B=12

m8








C=3



D=6






E=2

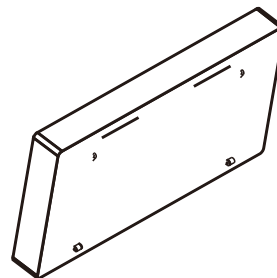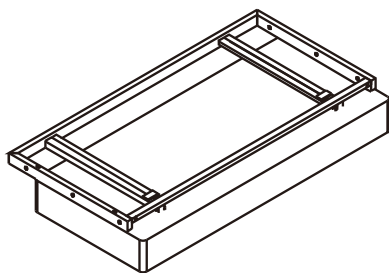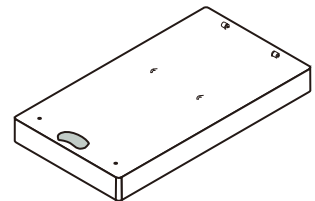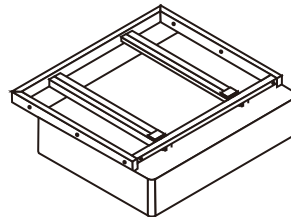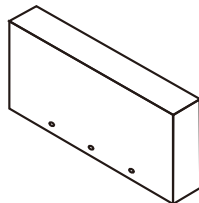


Assembly Instruction



Sofa part

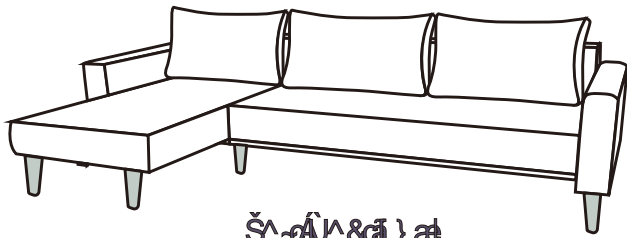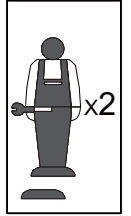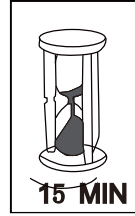



Štř-řŮ^&čř } ař

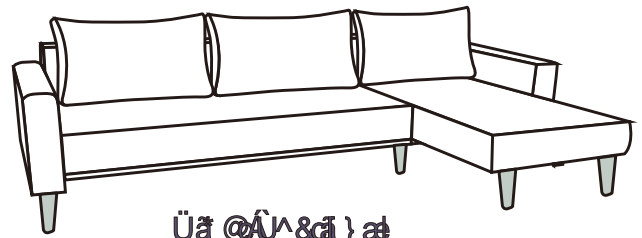



Ůř @Ů^&čř } ař

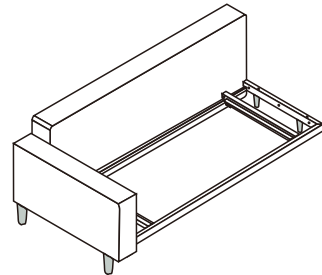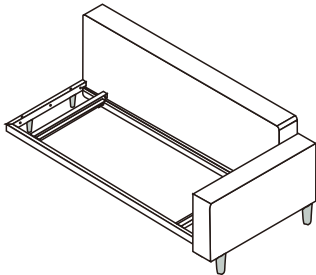



Step 1

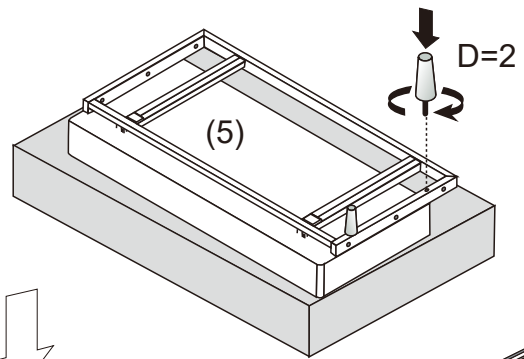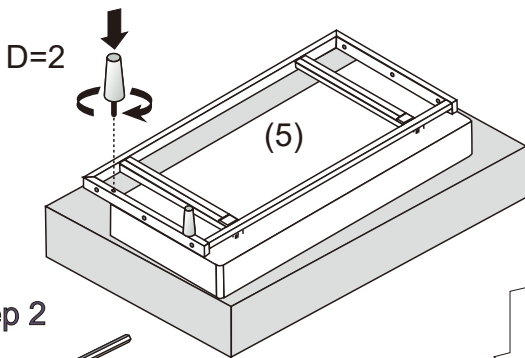

Step 2


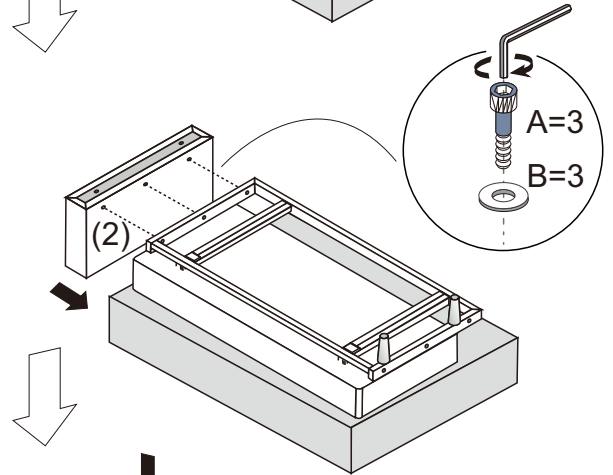
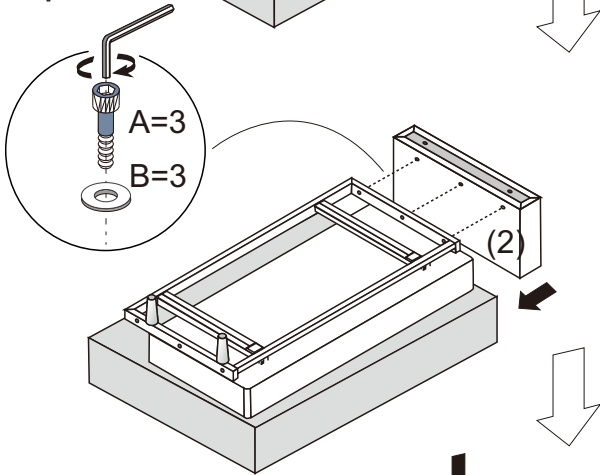


Step 3

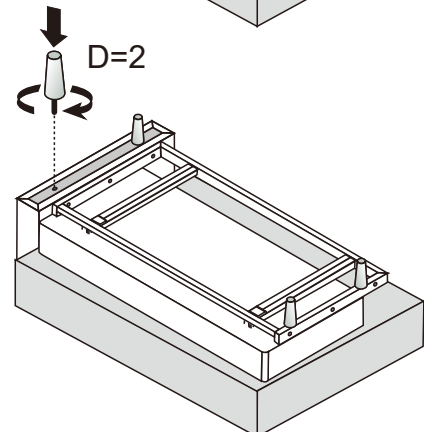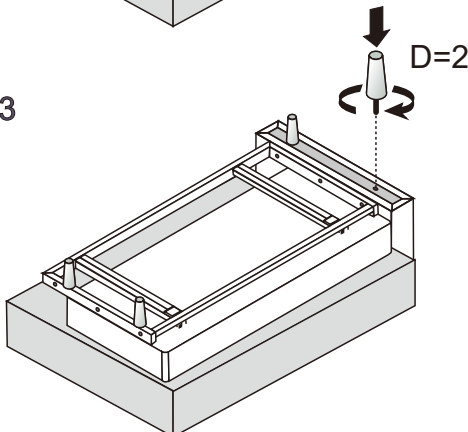


Assembly Instruction



Chaise part

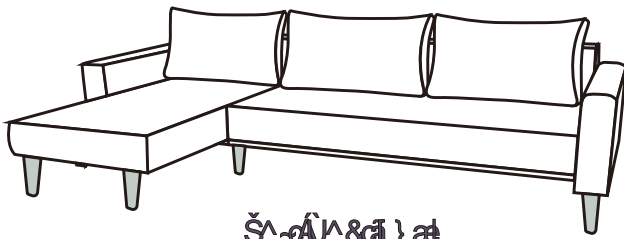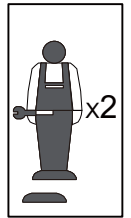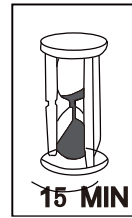



Š-Ů^&ā } æ

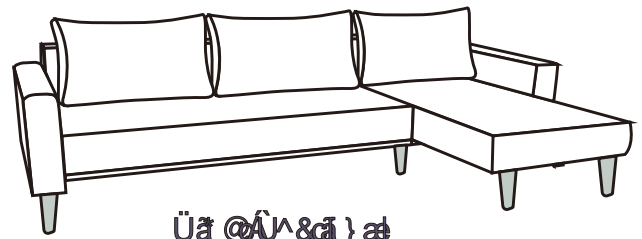



Üä @Ů^&ā } æ

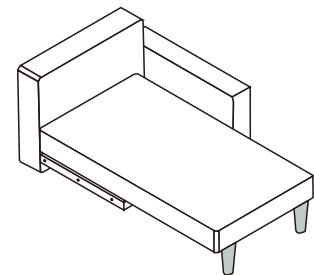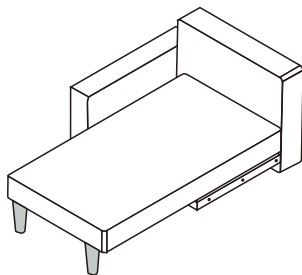



Step 4

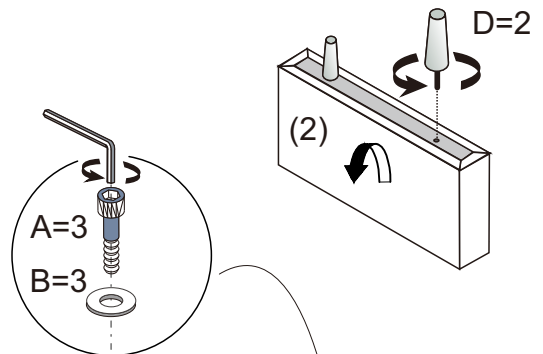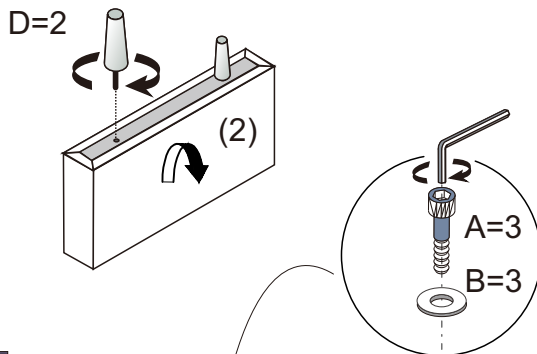




Step 5

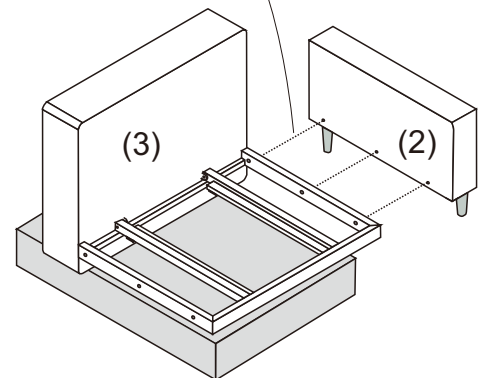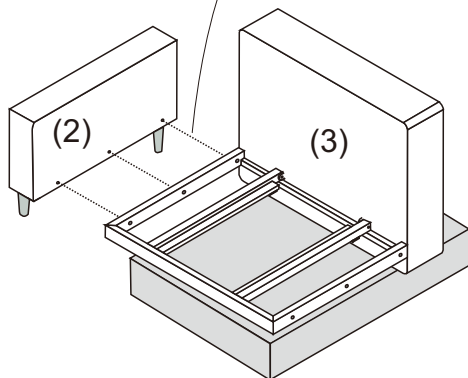



Step 6

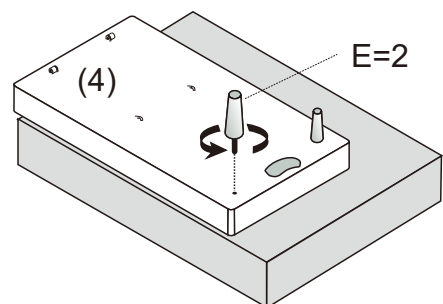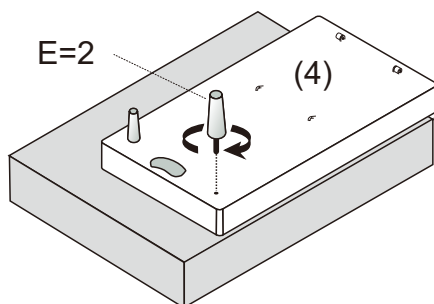



Assembly Instruction

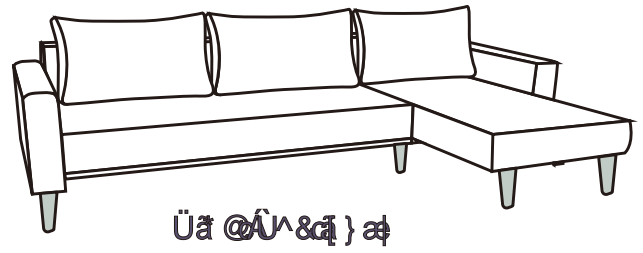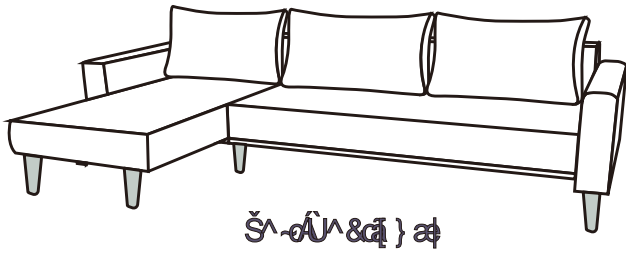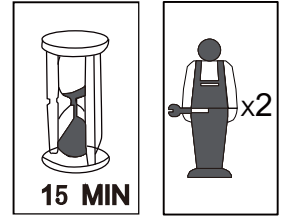



Step 7

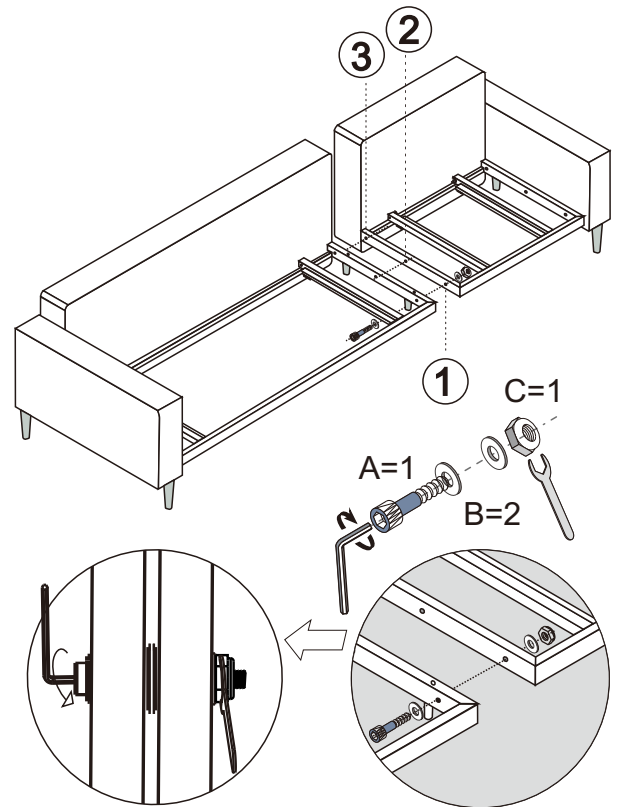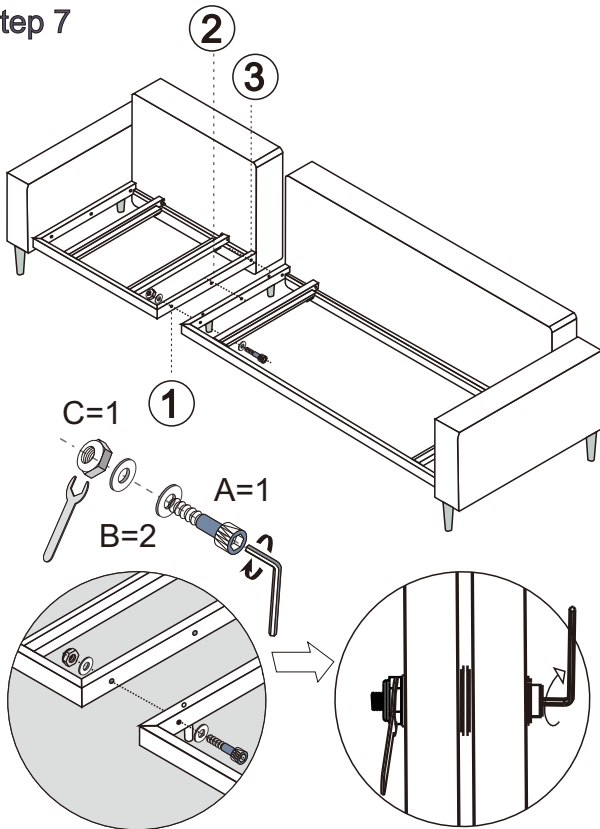


Step 8

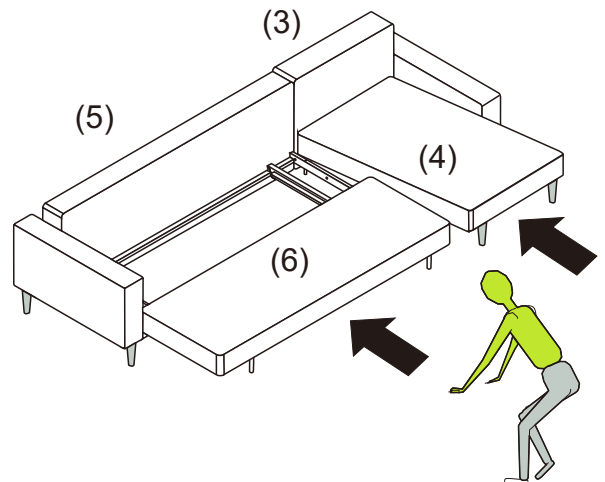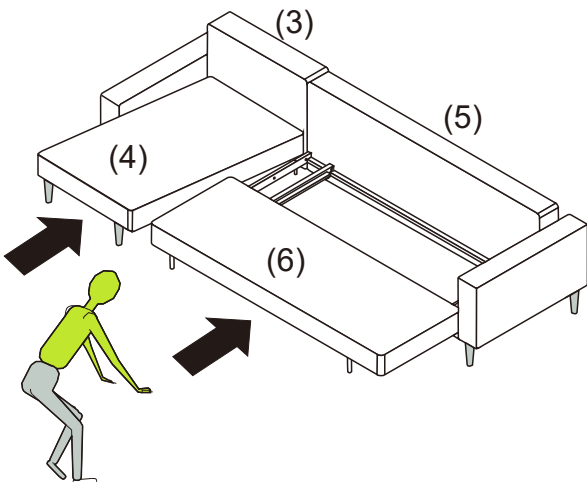


Operation Manual

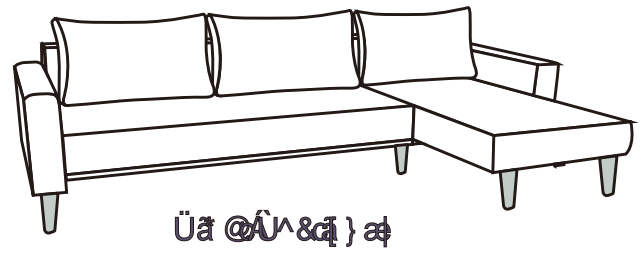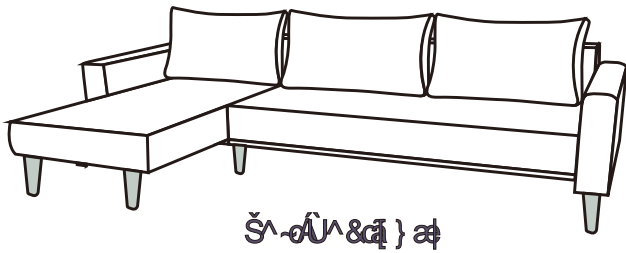


Step 1

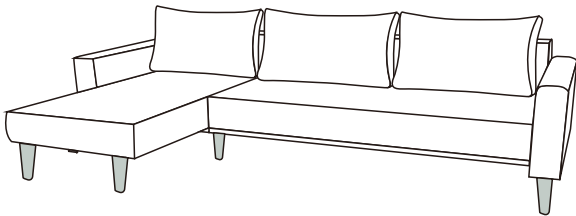


Step 2

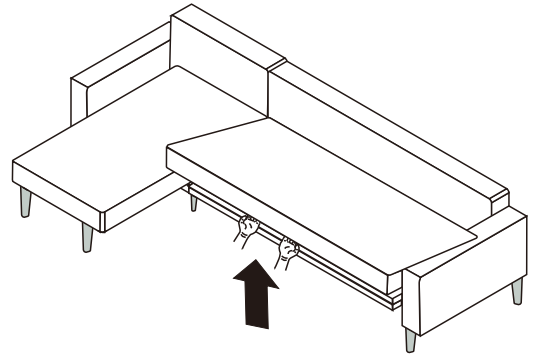


Step 3

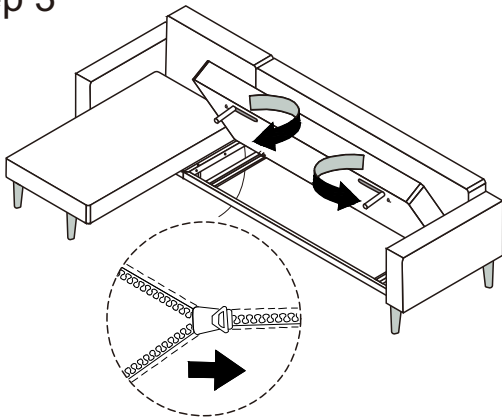

Step 4

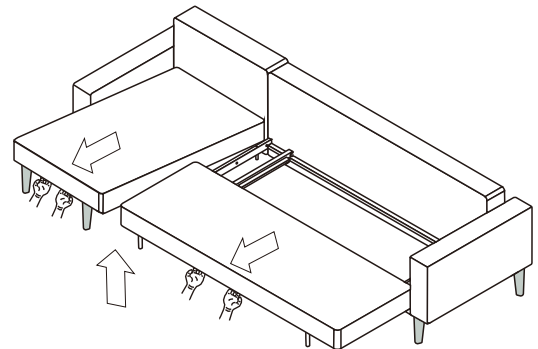

Step 5

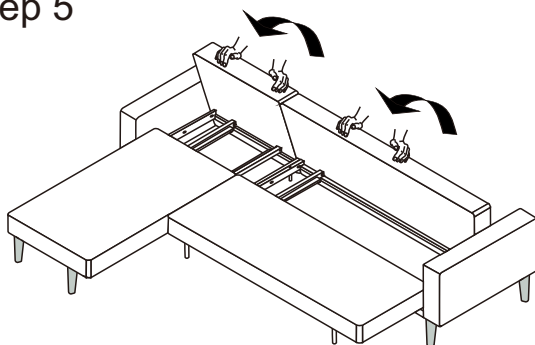

Step 6

