



ADULT ASSEMBLY REQUIRED

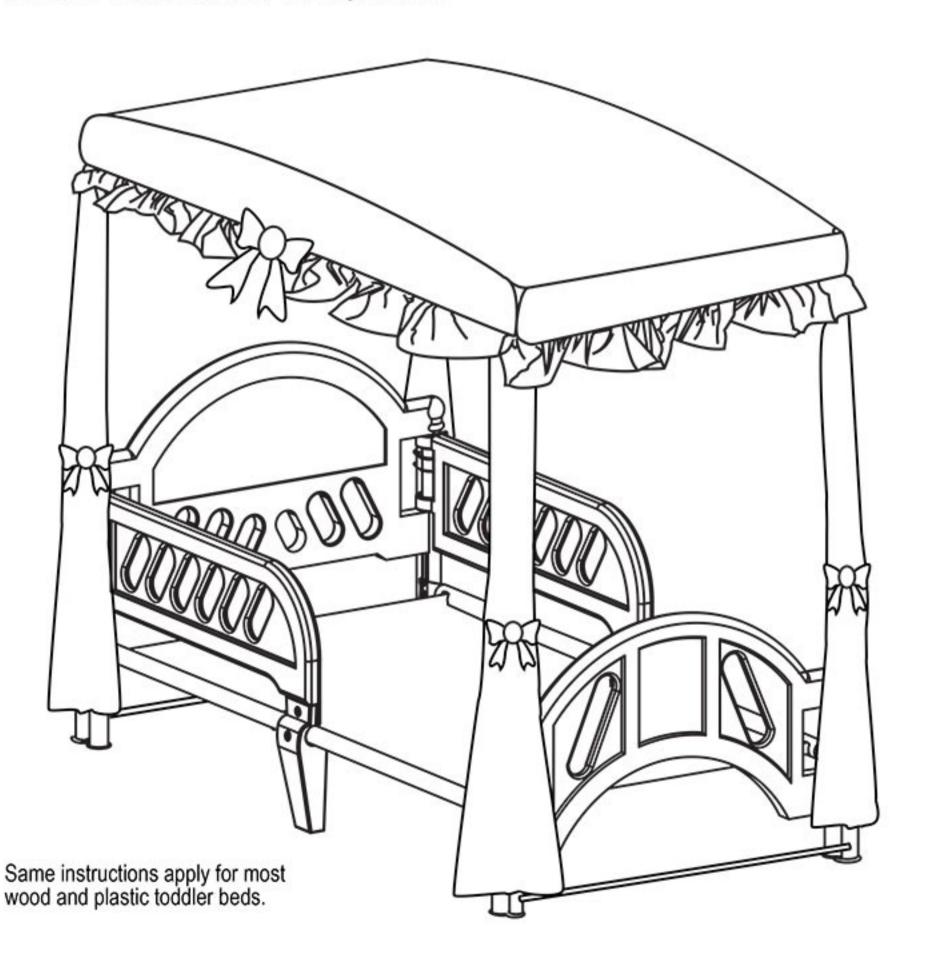

Canopy Parts

IMPORTANT! Please remove all parts from the package and identify them before assembly.

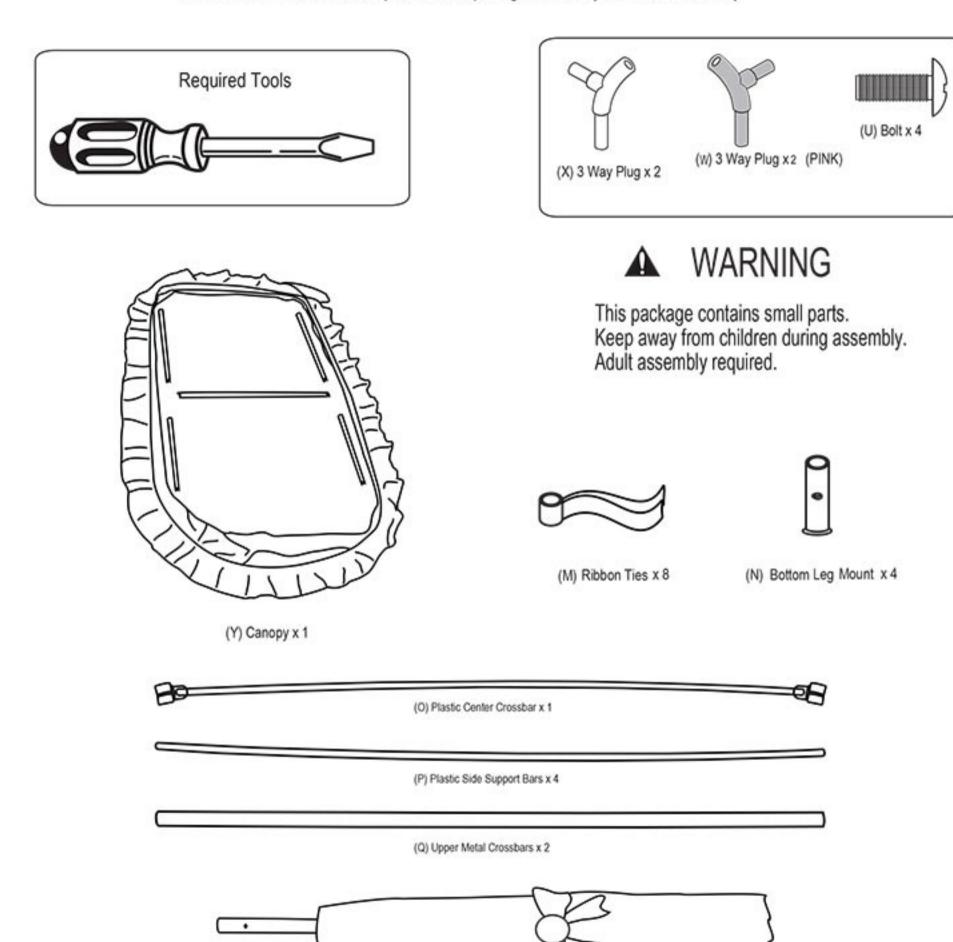


(T) Lower Metal Crossbars x 2


(R) Upper Metal Uprights x 4

(S) Lower Metal Uprights x 4


0




- · Connect upper upright (R) and lower (S) upright poles.
- · Repeat on other uprights.

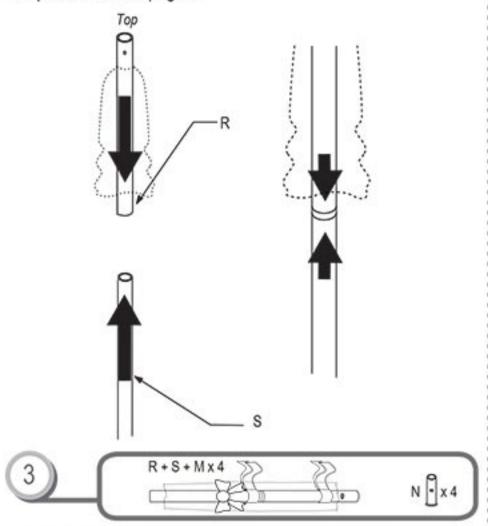


- . Insert uprights (R+S) to the bottom leg mount (N).
- · Repeat on other uprights.

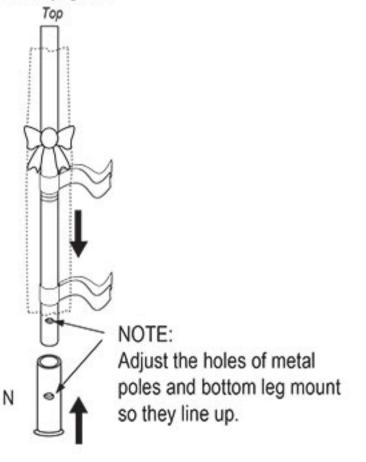




- · Insert uprights (R+S) to the ribbon ties (M).
- · Repeat on other uprights.

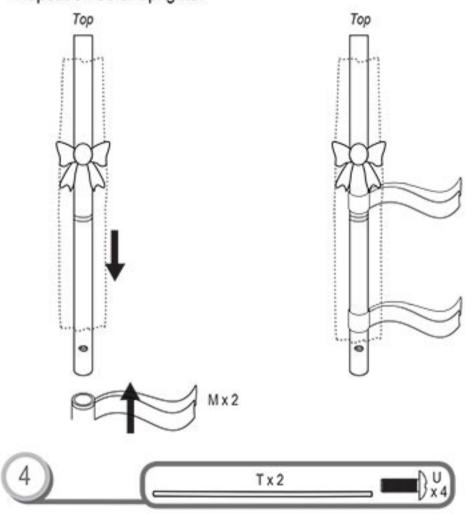


Connect uprights (R+S) and lower crossbars (T) using bolts (U). • Repeat on opposite side.

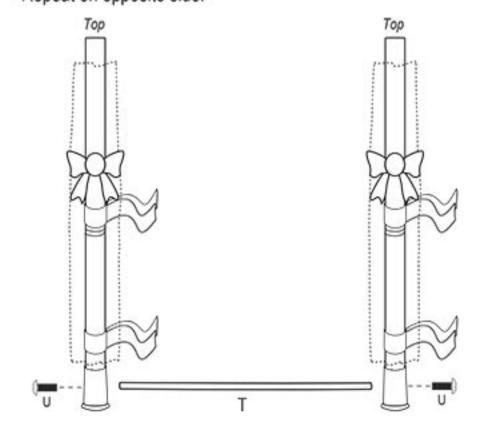




· Tighten on all 8 ribbon ties to secure legs to canopy uprights.

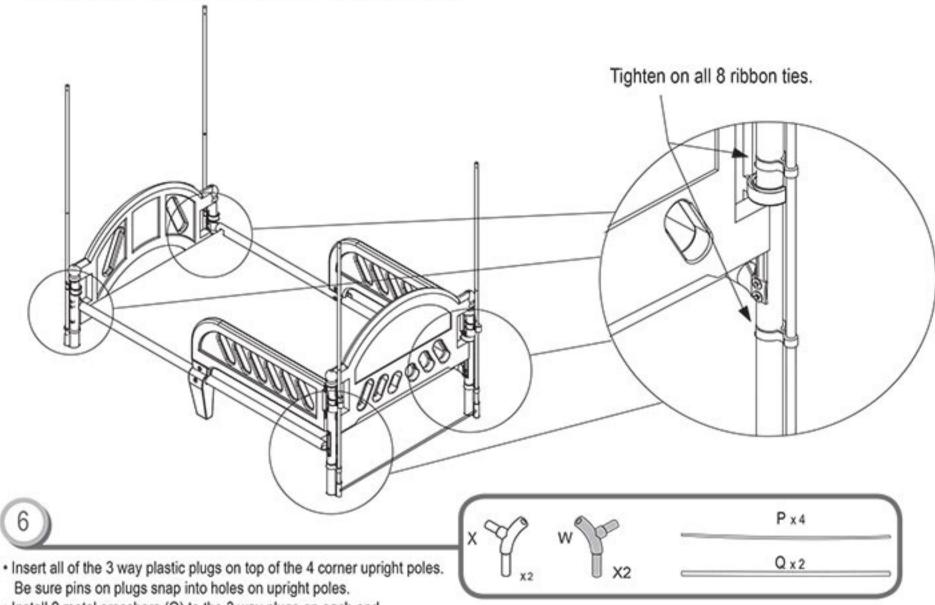


- · Install 2 metal crossbars (Q) to the 3 way plugs on each end.
- · Install plastic side support bars (P) to the 3 way plugs.

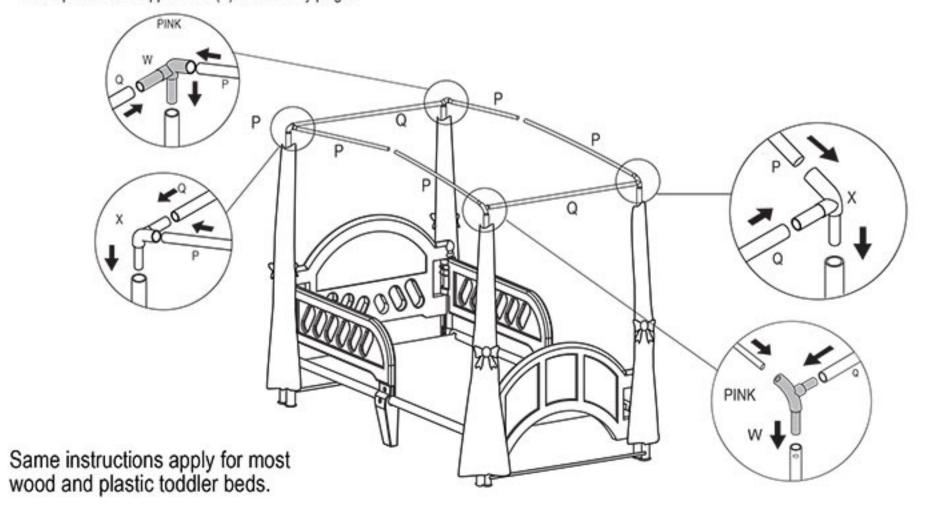




- 0x1
- Thread each plastic side support bar through the loop stitched on each side of underside of canopy.
- After all 4 side support bars are inserted through the 4 loops, then insert center crossbar (O) through the 3 loops at middle of underside of canopy.
 Connect center crossbar to plastic side support bars using the T-connector at both ends of center crossbar.

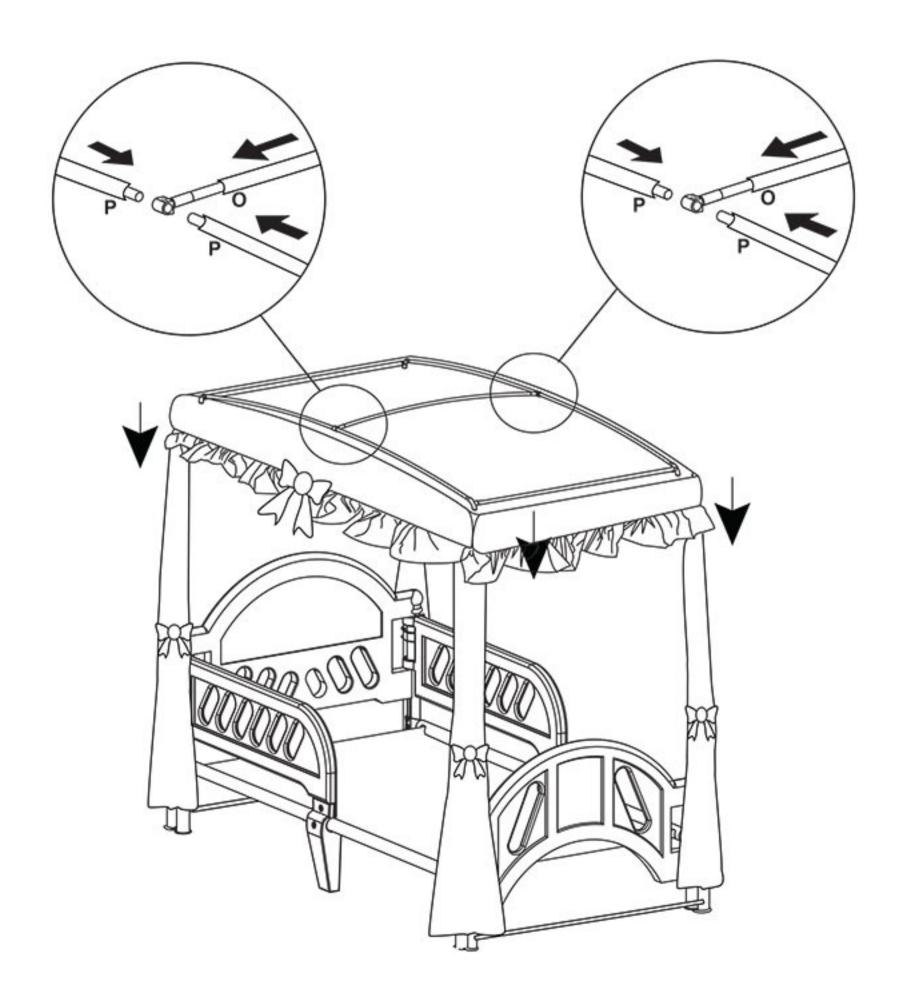

Tie down canopy

- Tie down canopy to the 4 corners of the frame.
 Recheck all connections.

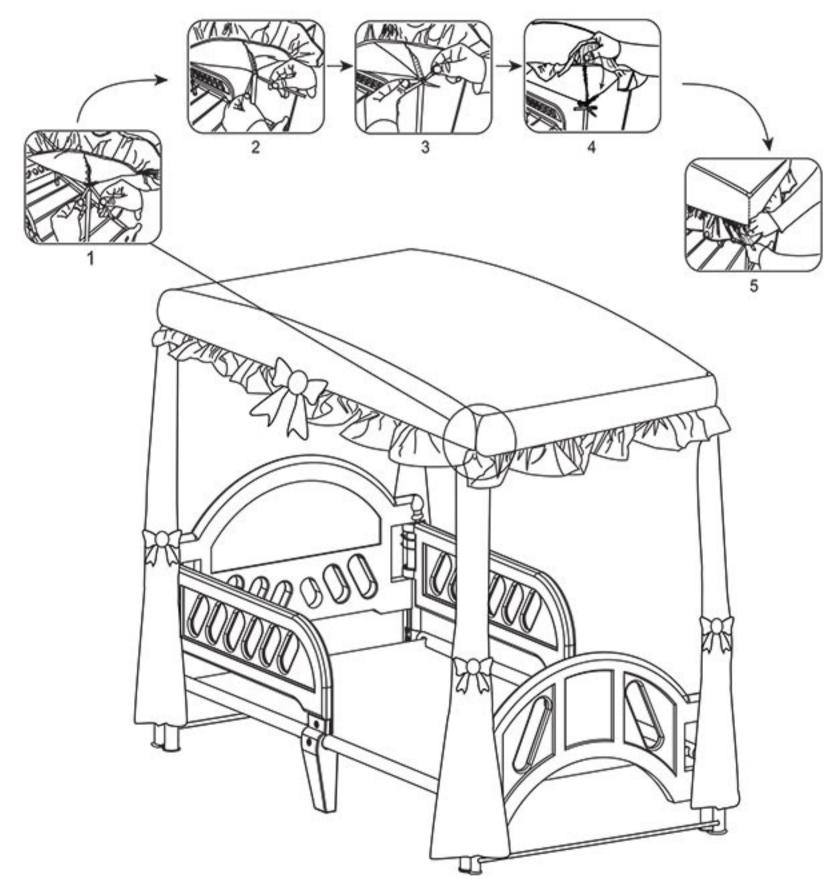



ENJOY YOUR NEW DELTA CANOPY!