


NPW2




W2S



1: Stand-Off Frame Contents

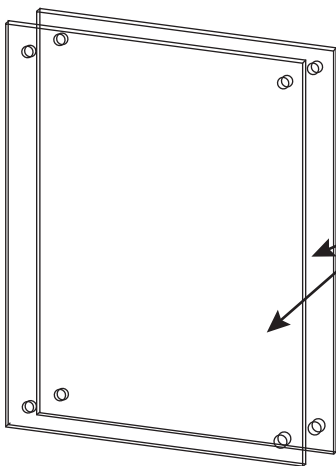


- A. Acrylic Frame (2)
- B. Stand-off Cap (2) or (4)
- C. Stand-off Barrel (2) or (4)
- D. Screw (2) or (4)
- E. Wall Anchor (2) or (4)

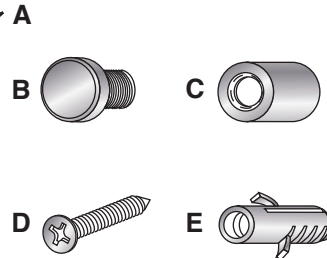



PLEASE READ INSTRUCTIONS BEFORE ASSEMBLING

Recommended - 2 Person assembly
 Power drill Recommended - Drill bit and phillips head screwdriver (not included)


2: Drill Mounting Holes

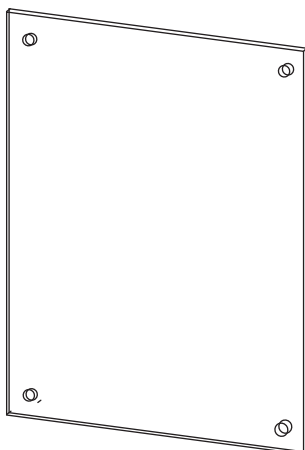


Using one the Acrylic Frame (A) panels as a template mark & drill (2) or (4) 5/16" holes in the wall.

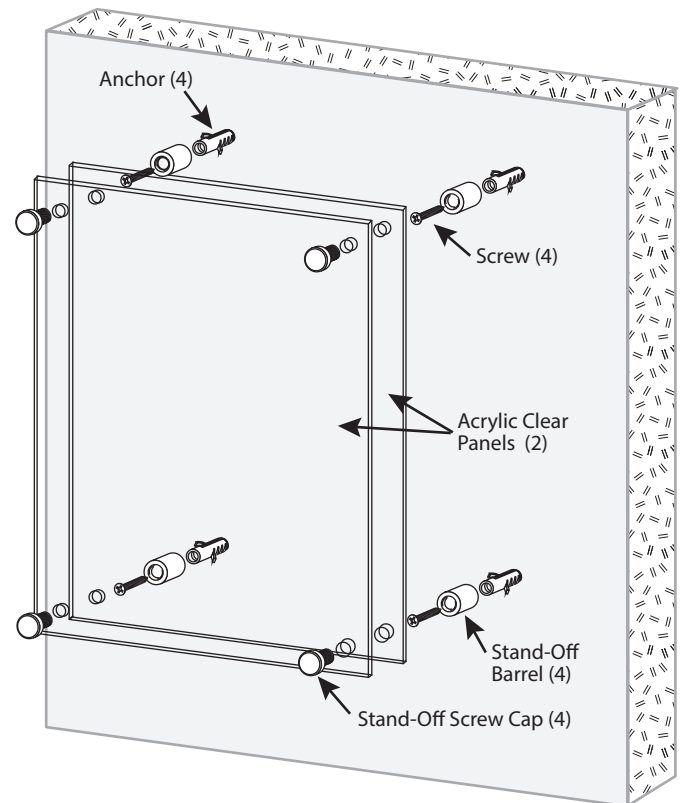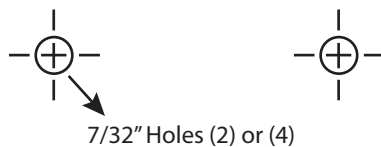

3: Insert Anchors Into the Wall

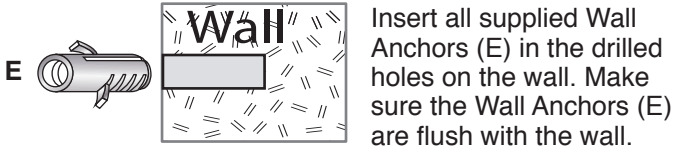


4: Screw Stand-Off Barrel

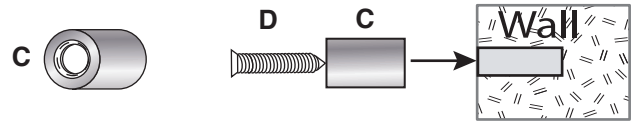


Using the supplied Screws (D) mount all the Stand-Off Barrels (C) onto the installed Wall Anchors (E) on the wall.

5: Removing Protective Acrylic Frame Film

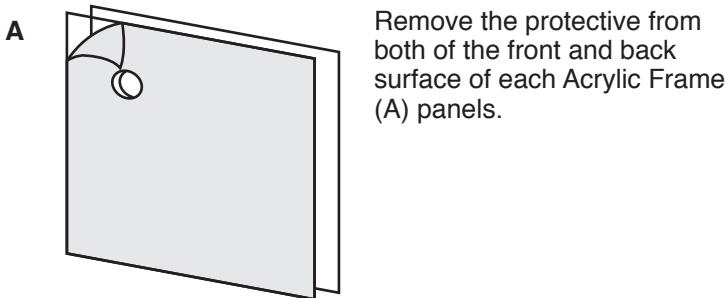

6: Adding Graphic

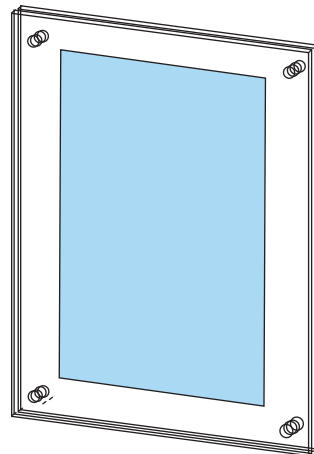

On a flat surface align and center the graphic onto one of the Acrylic Frame (A) panels and sandwich the second Acrylic Frame (A) panel over the graphic.

Note: the two frames are now assembled.

7: Mounting the Acrylic Frames



Insert and hand tighten the Stand-Off Caps (B)

