


# MEMBRANE OVER GYPSUM

## NAC SHEET MEMBRANE

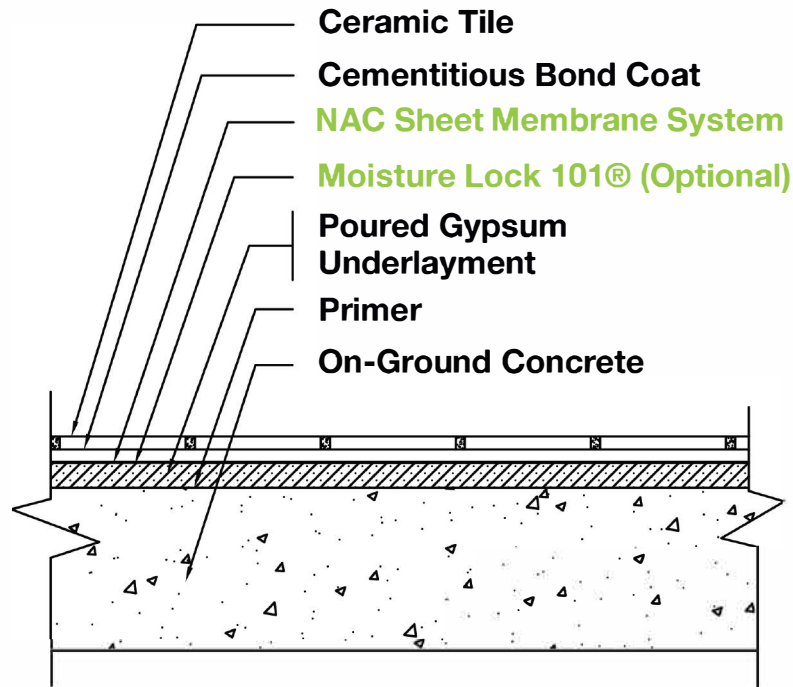

All NAC sheet membranes (ECB®, ECB® 75, Strataflex®, SAM® 3 and Super SAM® 125) may be used in this type of application with a poured gypsum underlayment.

Apply one coat of Moisture Lock 101 to fully cured gypsum underlayment.

Allow 24 hours after Moisture Lock application before installing primer and membrane.

For specification purposes, the NAC products used in this system are:

- NAC Sheet Membranes
- NAC Primer
- Moisture Lock 101

Detail refers to F200 for installing a membrane over gypsum. See current edition of the TCNA Handbook for additional guidelines.

Visit [NACproducts.com](http://NACproducts.com) or call 800-633-4622 for more information.



[www.nacproducts.com](http://www.nacproducts.com)