


Bathroom Waterproofing System

Strataflex Sheet Membrane/SubSeal® Liquid Membrane

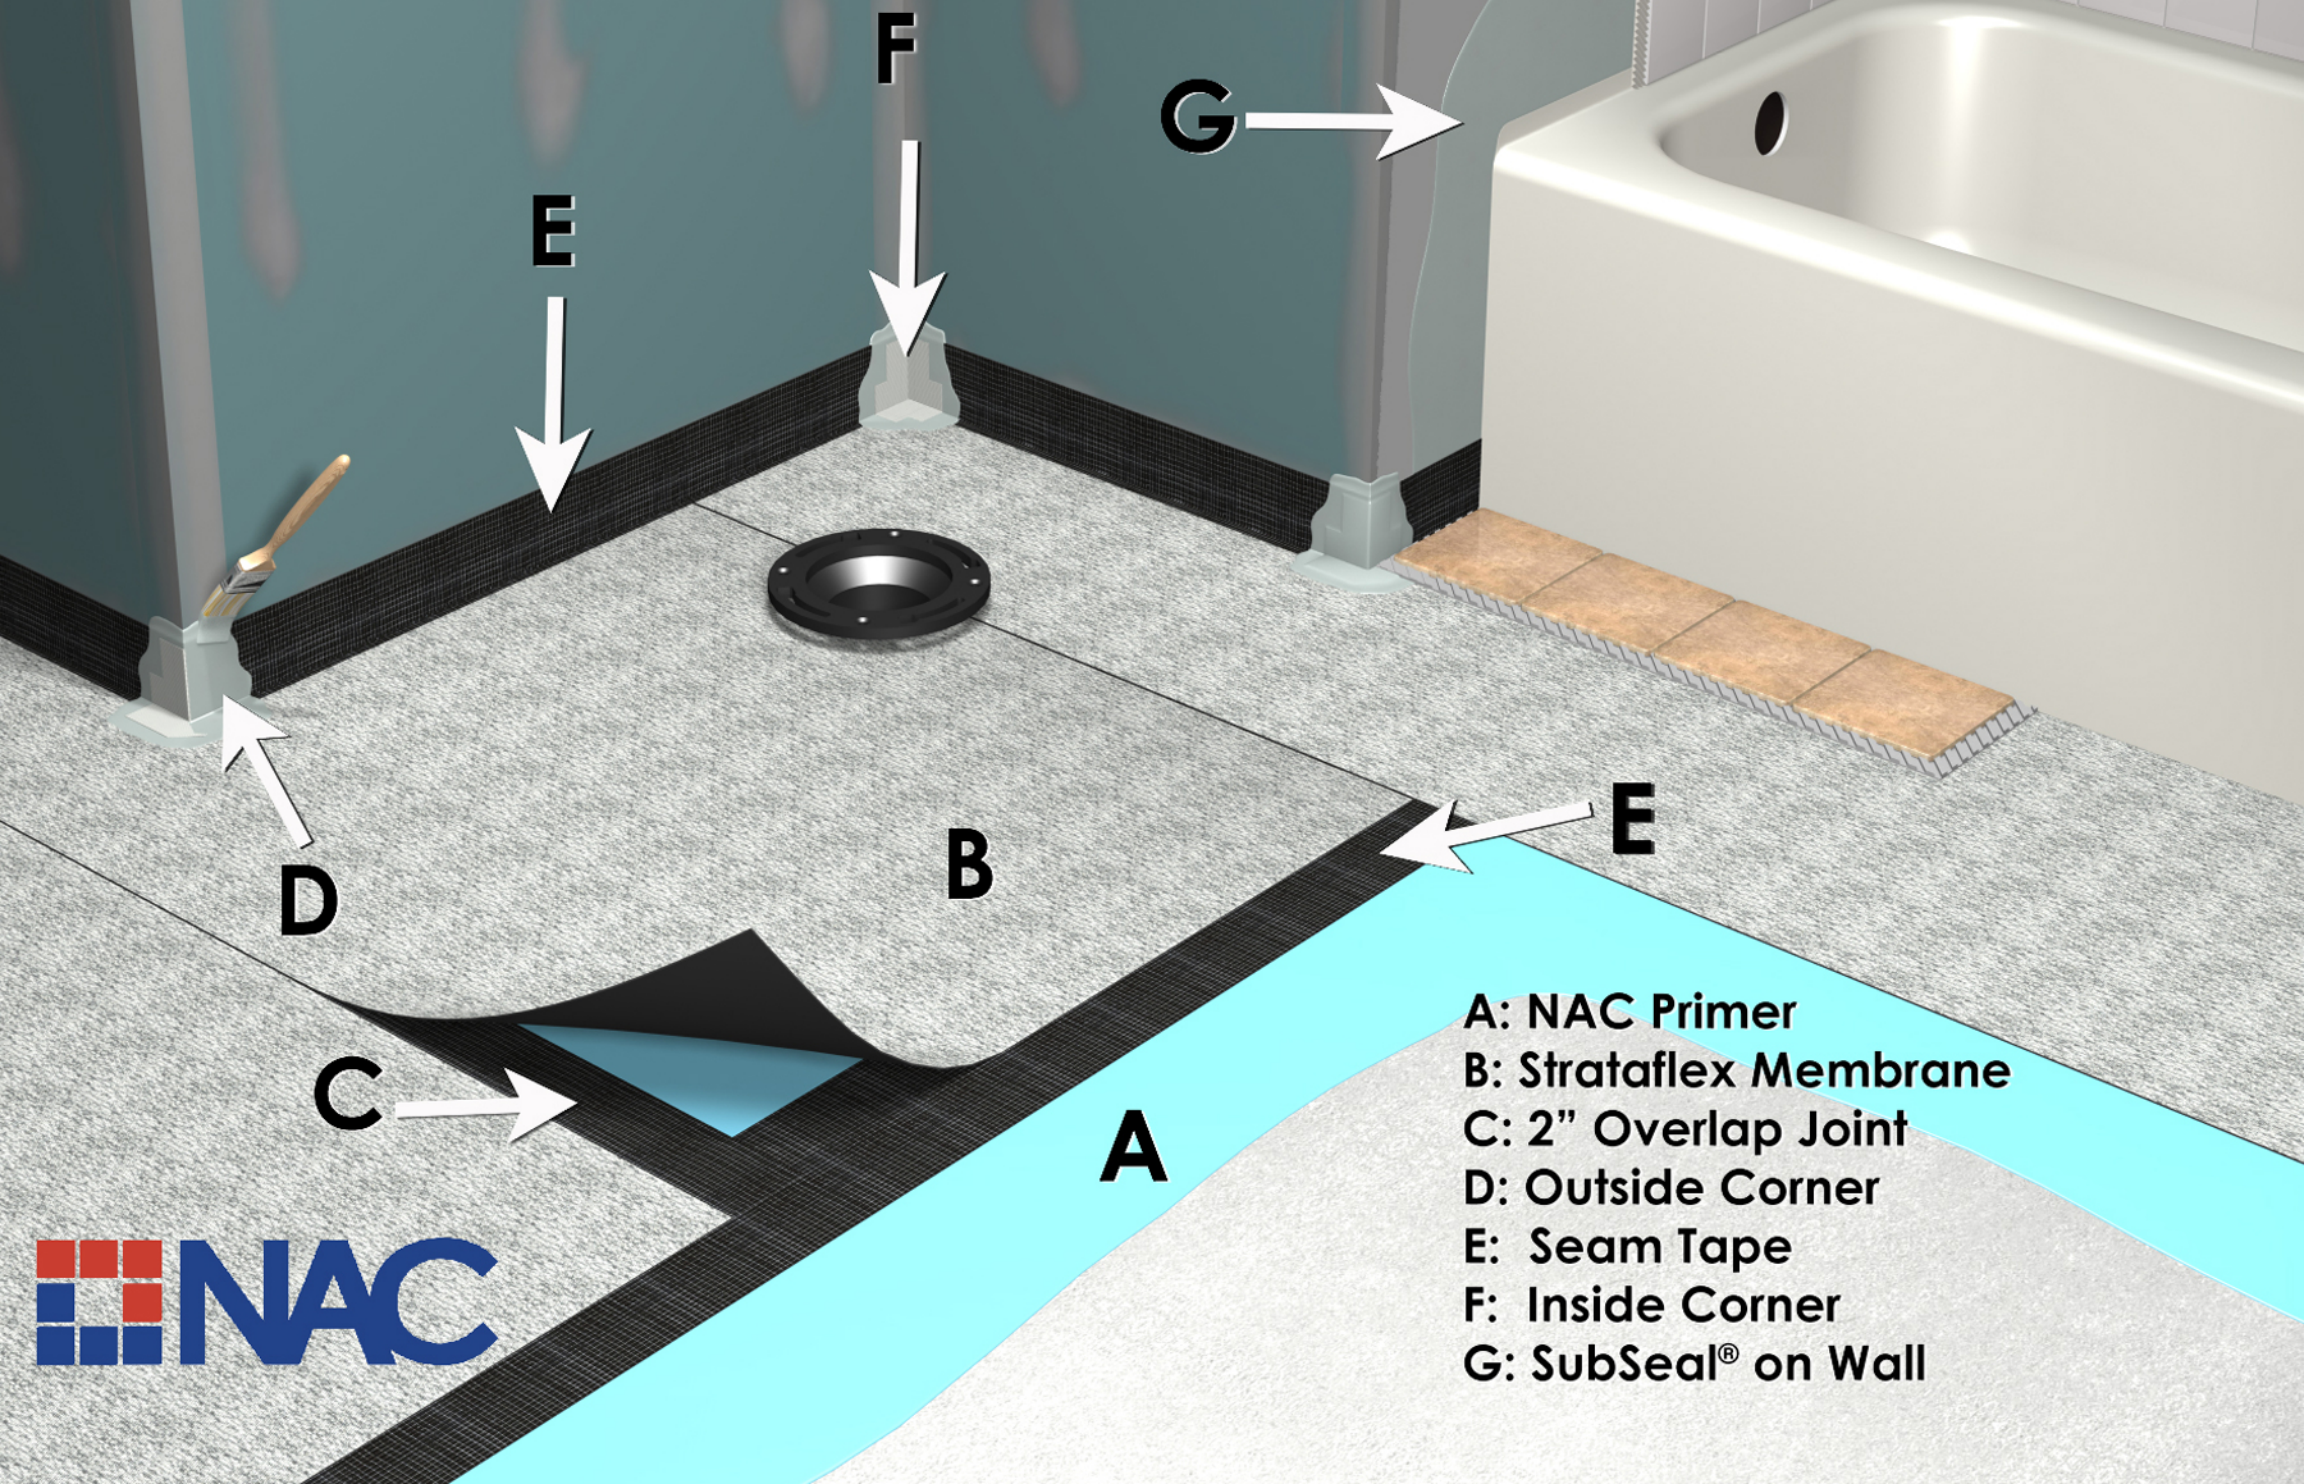

- A: NAC Primer
- B: Strataflex Membrane
- C: 2" Overlap Joint
- D: Outside Corner
- E: Seam Tape
- F: Inside Corner
- G: SubSeal® on Wall