

# Bau 28 and 36 Pendant

700BAU28, 700BAU36 | 1.0



PENDANTS

### GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.


This product can be dimmed with a standard electronic dimmer.

This instruction shows a typical installation.

**SAVE THESE INSTRUCTIONS!**

**CAUTION - RISK OF FIRE**  
 This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.  
**Use minimum 90°C supply conductors.**


**DANGER**  
 The complete fixture exceeds 200 lbs., it must be supported independently of the outlet box unless the outlet box is listed for the weight to be supported.

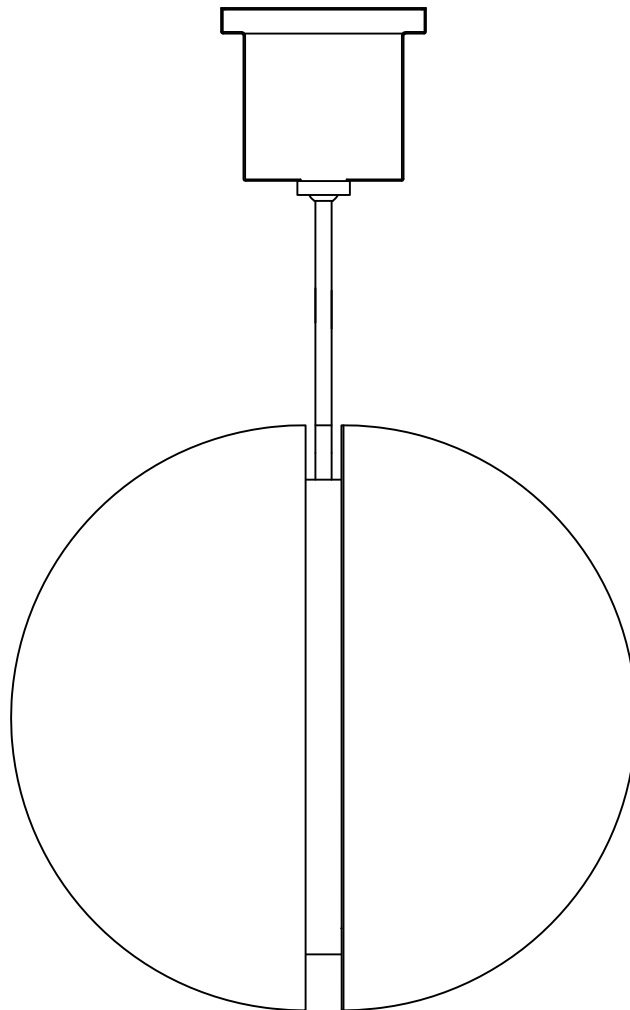

7400 Linder Ave., Skokie, IL 60077  
T 847.410.4400 | F 847.410.4500  
www.techlighting.com

# Install the Fixture

1A

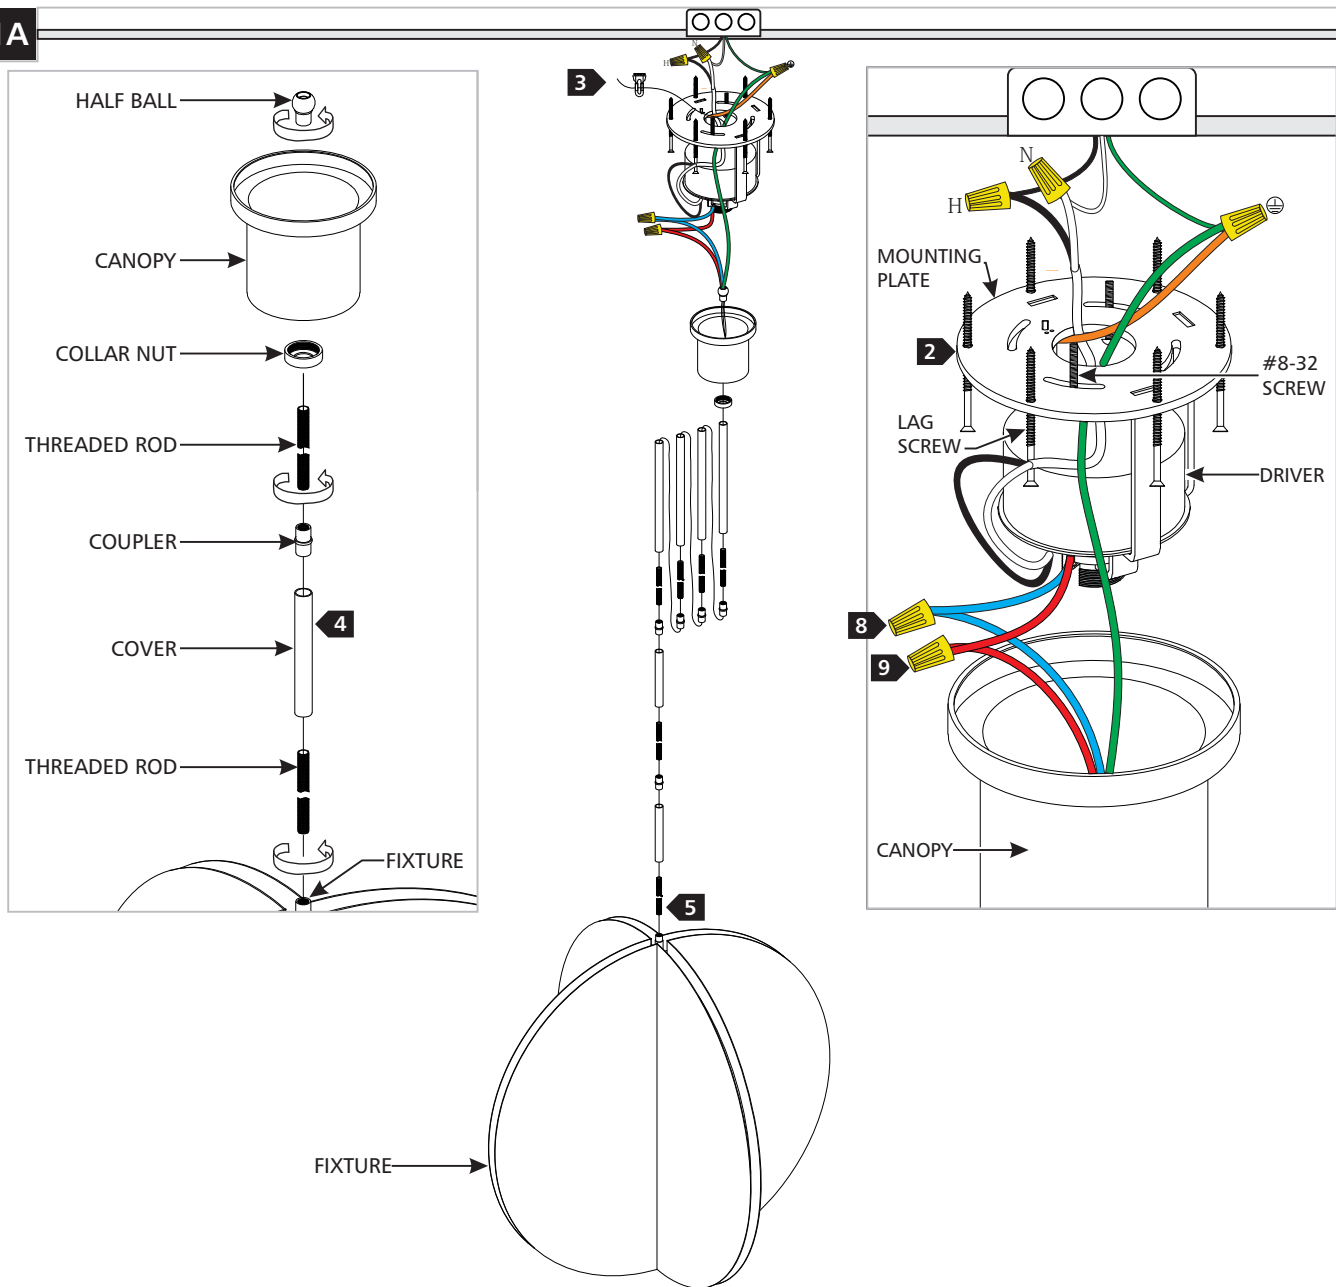

- 1** Remove the mounting plate and driver from the canopy.
- 2** Secure the mounting plate to the junction box with the provided #8-32 screws. **DANGER: If using the Bau 28, the junction box must be rated for 150 lbs., or more. If using the Bau 36, the junction box must be rated for 200 lbs., or more. If the junction box is not rated for the minimum weight, then the mounting plate must be supported independently of the junction box.**
- 3** Secure the safety cable to a secure solid structure in accordance with local building code.
- 4** Determine the desired height of the fixture using the provided threaded rods, covers and couplers, then assemble them by sliding a cover over each rod and screwing the rods to a coupler.
- 5** Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture.
- 6** Slide the collar nut and canopy over the rod assembly then screw the half ball to the top of the stem assembly.
- 7** Seat the half ball into the mounting plate. **WARNING: Make sure to avoid pinching the wires.**
- 8** Connect the blue driver wire to the blue fixture wire with a wire nut.
- 9** Connect the red driver wire to the red fixture wire with a wire nut.
- 10** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11** Connect the white driver wires to the neutral power line wire with a wire nut.
- 12** Connect the black driver wires to the hot power line wire with a wire nut.
- 13** Neatly place the drivers, all wires, and wire nut connections inside the canopy, slide the canopy up to over the mounting bracket and secure in place with the collar nut.