
CTQLIGHTING

TREVI 6 PENDANT

Installation Guide

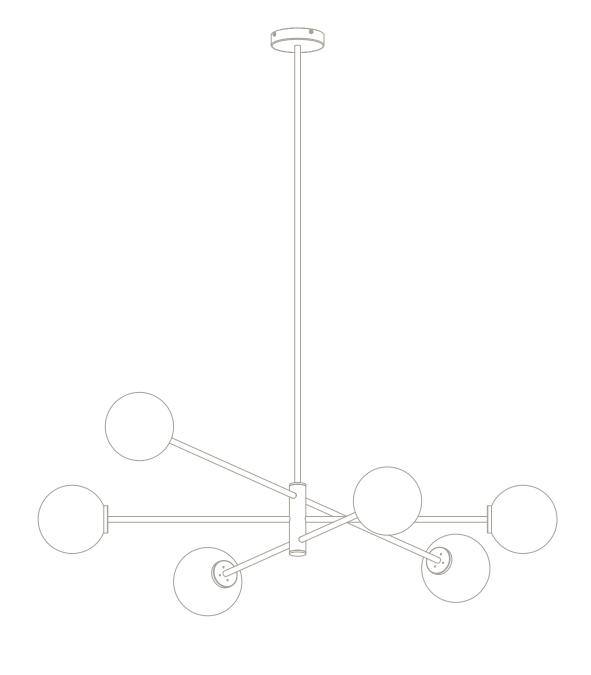

Please handle with care and wear gloves at all times during assembly and installation to avoid damaging components.

+44 (0) 20 7686 8700 ctolighting.co.uk sales@ctolighting.co.uk

СТО


TECHNICAL

Bulb Holder

240v - 6 x E14 120v - 6 x E12 (bulbs not supplied) Wattage 25w max (or 2.5w LED 2700k) **Weight** 10kg (22lbs)

PARTS & COMPONENTS

A. 1 x Mounting plate, 4 x M4x12 screws B. 1 x Ceiling rose and drop rod C. 6 x 150mm glass shade D. 1 x Trevi 6 body

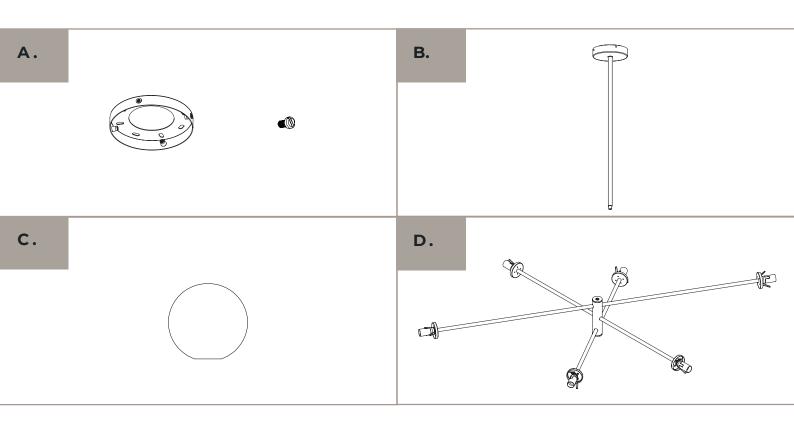


BEFORE INSTALLATION

ļ

СТО

Check that you have all components before starting the installation.
Installation must be carried out by a qualified electrician.
A minimum of two people is required to install a pendant light.
Check that the ceiling or wall fixings are suitable and strong enough to support the weight of the light fixture.
You will need the below specific tools for a successful installation.

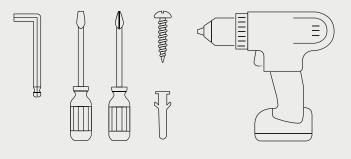




HEIGHT ADJUSTMENT INSTRUCTIONS

Before attaching the drop rod to the body of the light, calculate the required total drop from ceiling to bottom of pendant. If any height adjustment is required, follow the steps below:

1. Separate the brass tube and the internal threaded tube from the ceiling rose cover by unscrewing the bolt.

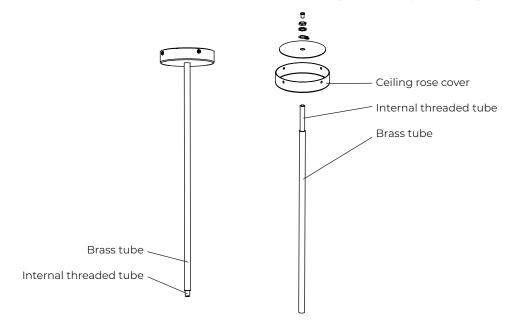

2. Measure the length the drop rod needs to be.


3. Cut the brass tube to this length using a hacksaw or similar tool.


4. Cut the same length from the internal threaded tube.

NOTE: Internal threaded tube must always be longer than the brass tube.

5. Once the brass tube and internal threaded tube are cut to correct lengths, slide the brass tube over the internal threaded tube and attach them back to the ceiling rose cover by using components provided.

6. Once satisfied with the fit, secure bolts and all-thread with Loc-tite or similar adhesive.

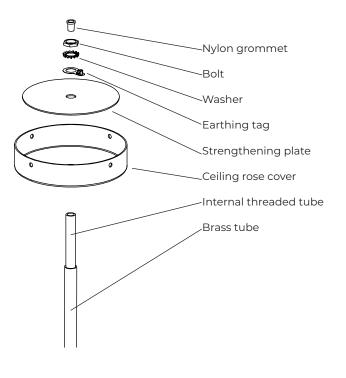

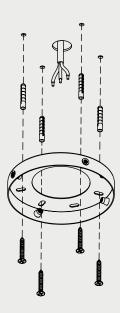


1. ¹²⁰v

US Fix the mounting plate to the junction box using suitable screws (not supplied).



2. Feed the power cable from the drop rod into the ceiling rose cover.


Screw the drop rod to the central hub of the pendant.

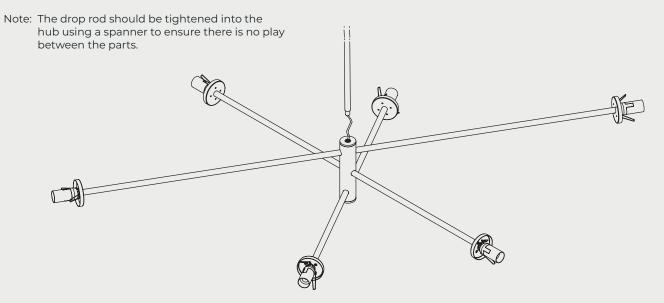

Raise the pendant and make the electrical 3. connections ensuring all wires are colour matched and the pendant is earthed correctly.

> Bring the ceiling rose up to the mounted plate and secure using provided screws.

Note: Ensure that the weight of the pendant is fully supported during the electrical installation.

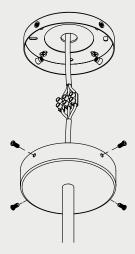




Note: Ensure that the weight of the pendant is fully supported during the electrical installation.

120V

correctly.


3.


4. A. Fit the bulbs (not supplied) to the lamp-holder.

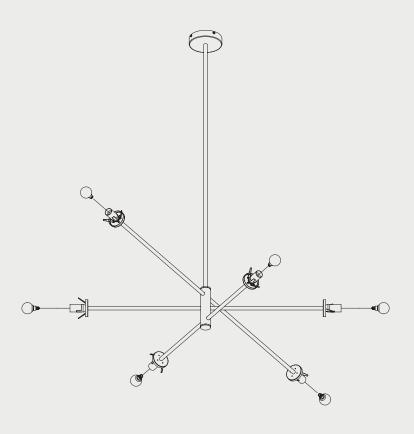

5. B. Fit the glass shades to the pendant body.

Pinch the spring clips inwards and hold, slowly feeding the glass shade over the spring clips. Do not release the glass shades too quickly.

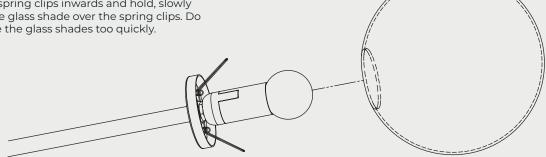

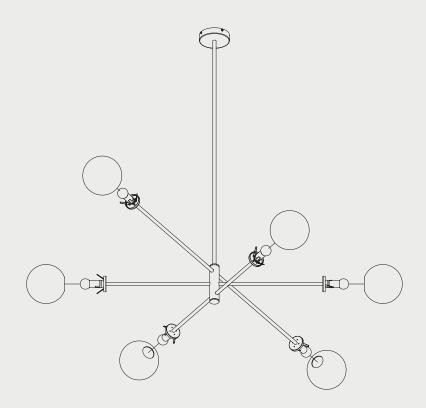

MAINTENANCE

Cleaning Dust using a dry lint-free cloth weekly or as required

Repairs Contact CTO Lighting

Warranty Please visit www.ctolighting.co.uk/ pages/f-a-q for CTO warranty policy



+44 (0) 20 7686 8700

sales@ctolighting.co.uk