

# Cosmo Chandelier

AEC1094, AEC1104, AEC1114 | 1.0

## GENERATION LIGHTING CHANDELIER

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

**SAVE THESE INSTRUCTIONS!**

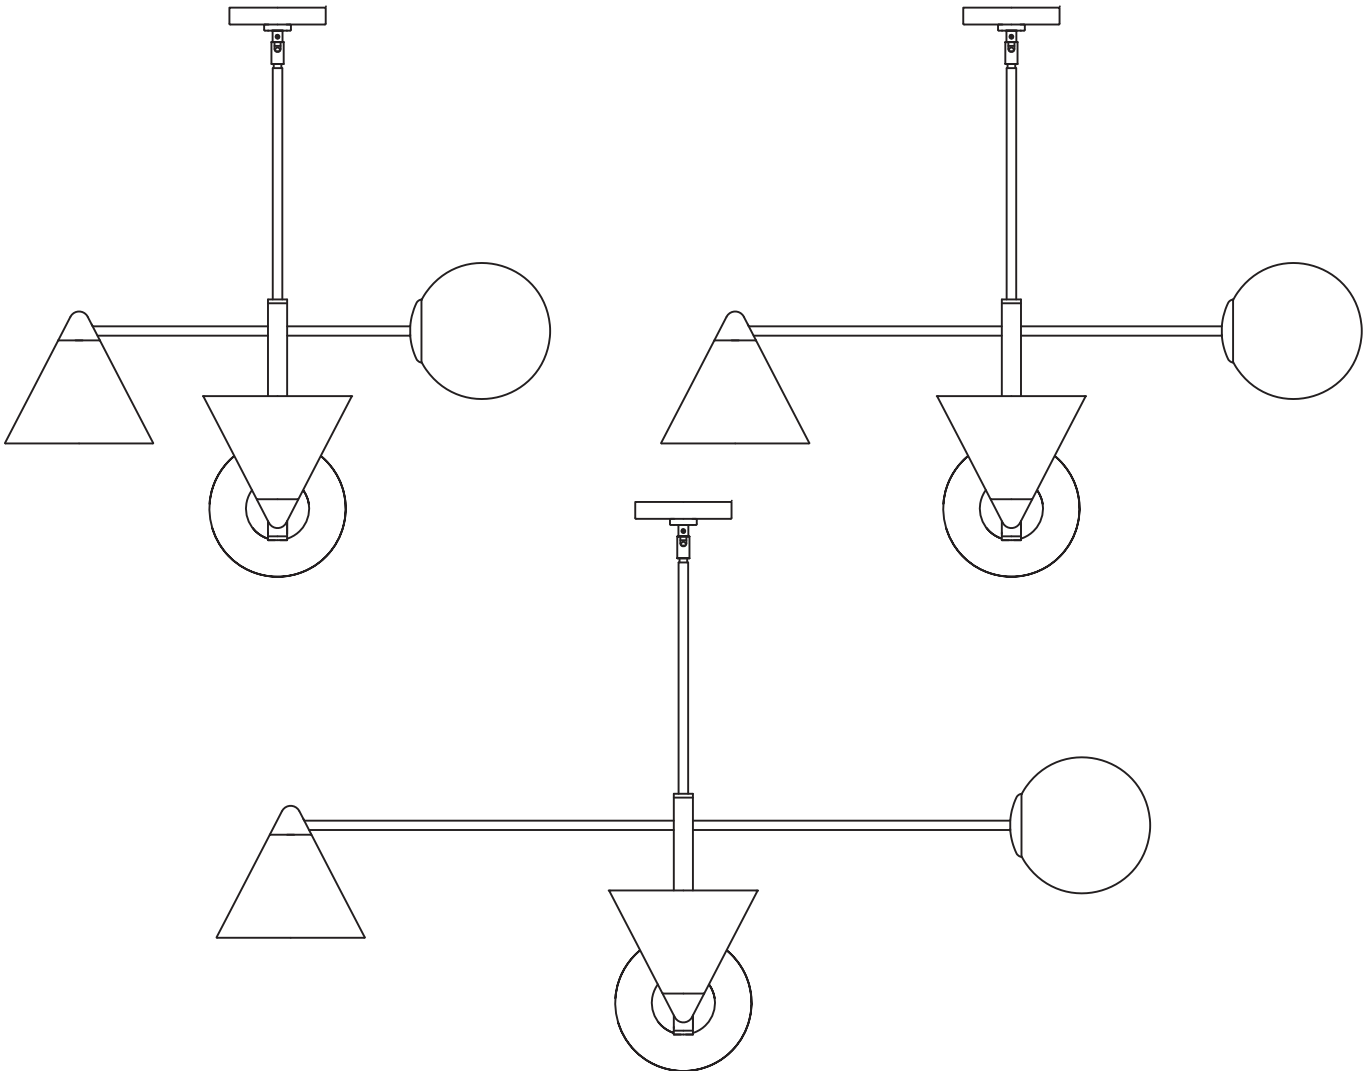

GENERATION LIGHTING  
7400 Linder Ave., Skokie, IL 60077  
T 847.410.4400 | F 847.410.4500  
www.generationlighting.com

# Install the Fixture

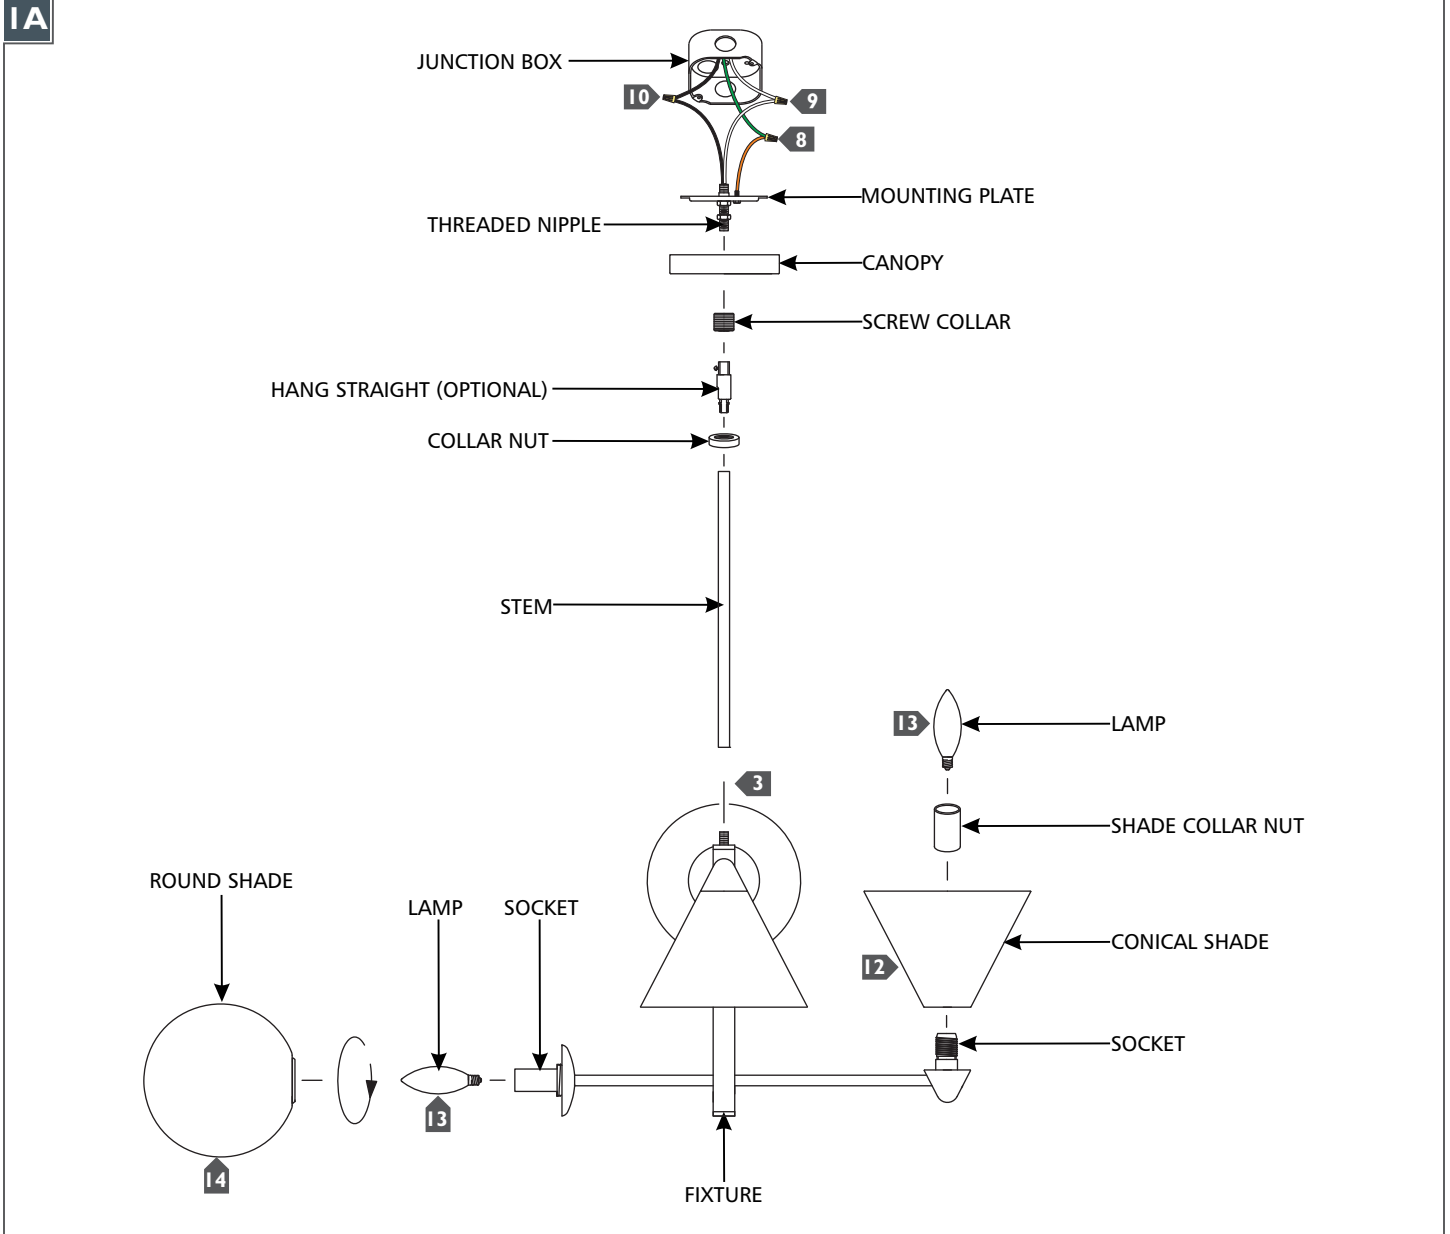

- 1** If necessary, screw the short end of the threaded nipple to the mounting plate.
- 2** Determine the wanted height or look of the fixture with the provided stems and hang straight (optional, for sloped or uneven ceilings) and assemble them by screwing them together.
- 3** Feed the fixture wires through the stem/hang straight assembly and screw the assembly to the fixture.
- 4** Unscrew the collar nut off the screw collar and place it onto the stem/hang straight assembly followed by the canopy.
- 5** Screw the screw collar onto the threaded nipple.
- 6** Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/hang straight assembly.
- 7** Align and secure the mounting plate to the junction box.
- 8** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 9** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 10** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 11** Neatly place all the wires into the junction box, place the canopy onto the ceiling and secure it in place with the collar nut.
- 12** Place the conical shade onto the socket and secure it in place by screwing the shade collar nut onto the socket. Do not over tighten. Repeat for remaining conical shades.
- 13** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 14** Place the round shade over the lamp and secure it in place by screwing the round shade to the socket. Do not over tighten. Repeat for remaining round shades.