

# Monroe Vanity

KSW1051, KSW1061, KSW1071 | 1.0

## GENERATION LIGHTING WALL

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

**SAVE THESE INSTRUCTIONS!**

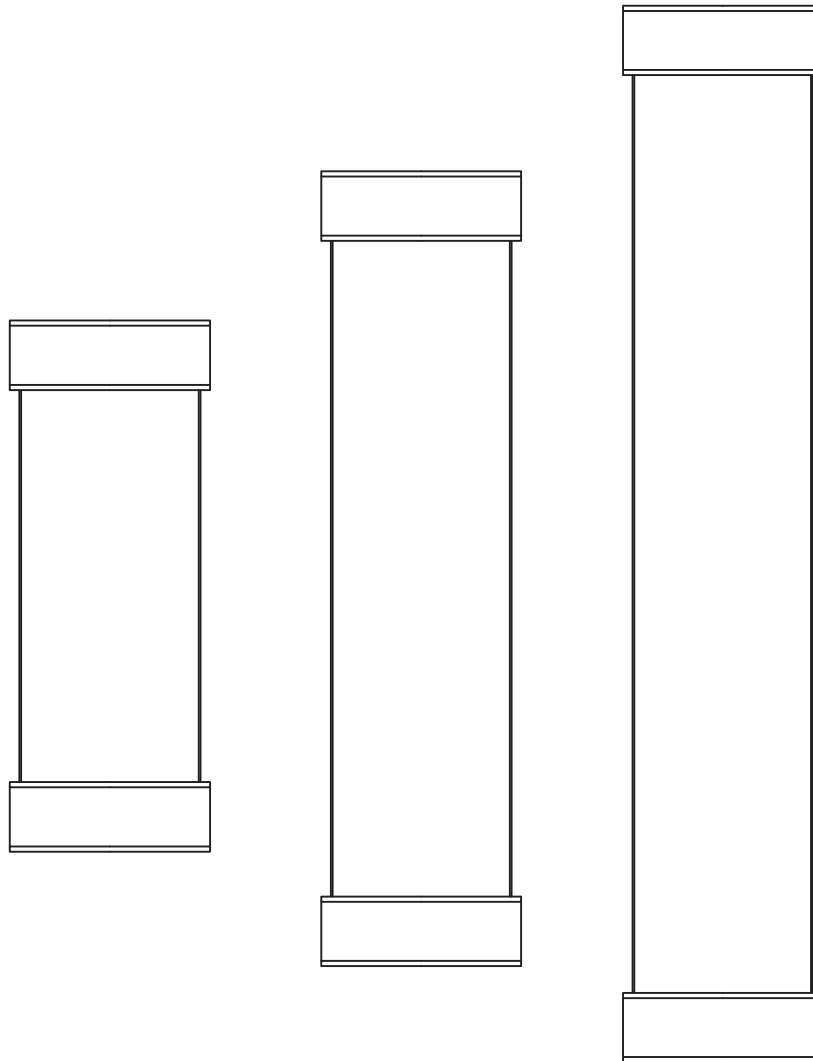

GENERATION LIGHTING  
7400 Linder Ave., Skokie, IL 60077  
T 847.410.4400 | F 847.410.4500  
www.generationlighting.com

# Install the Fixture

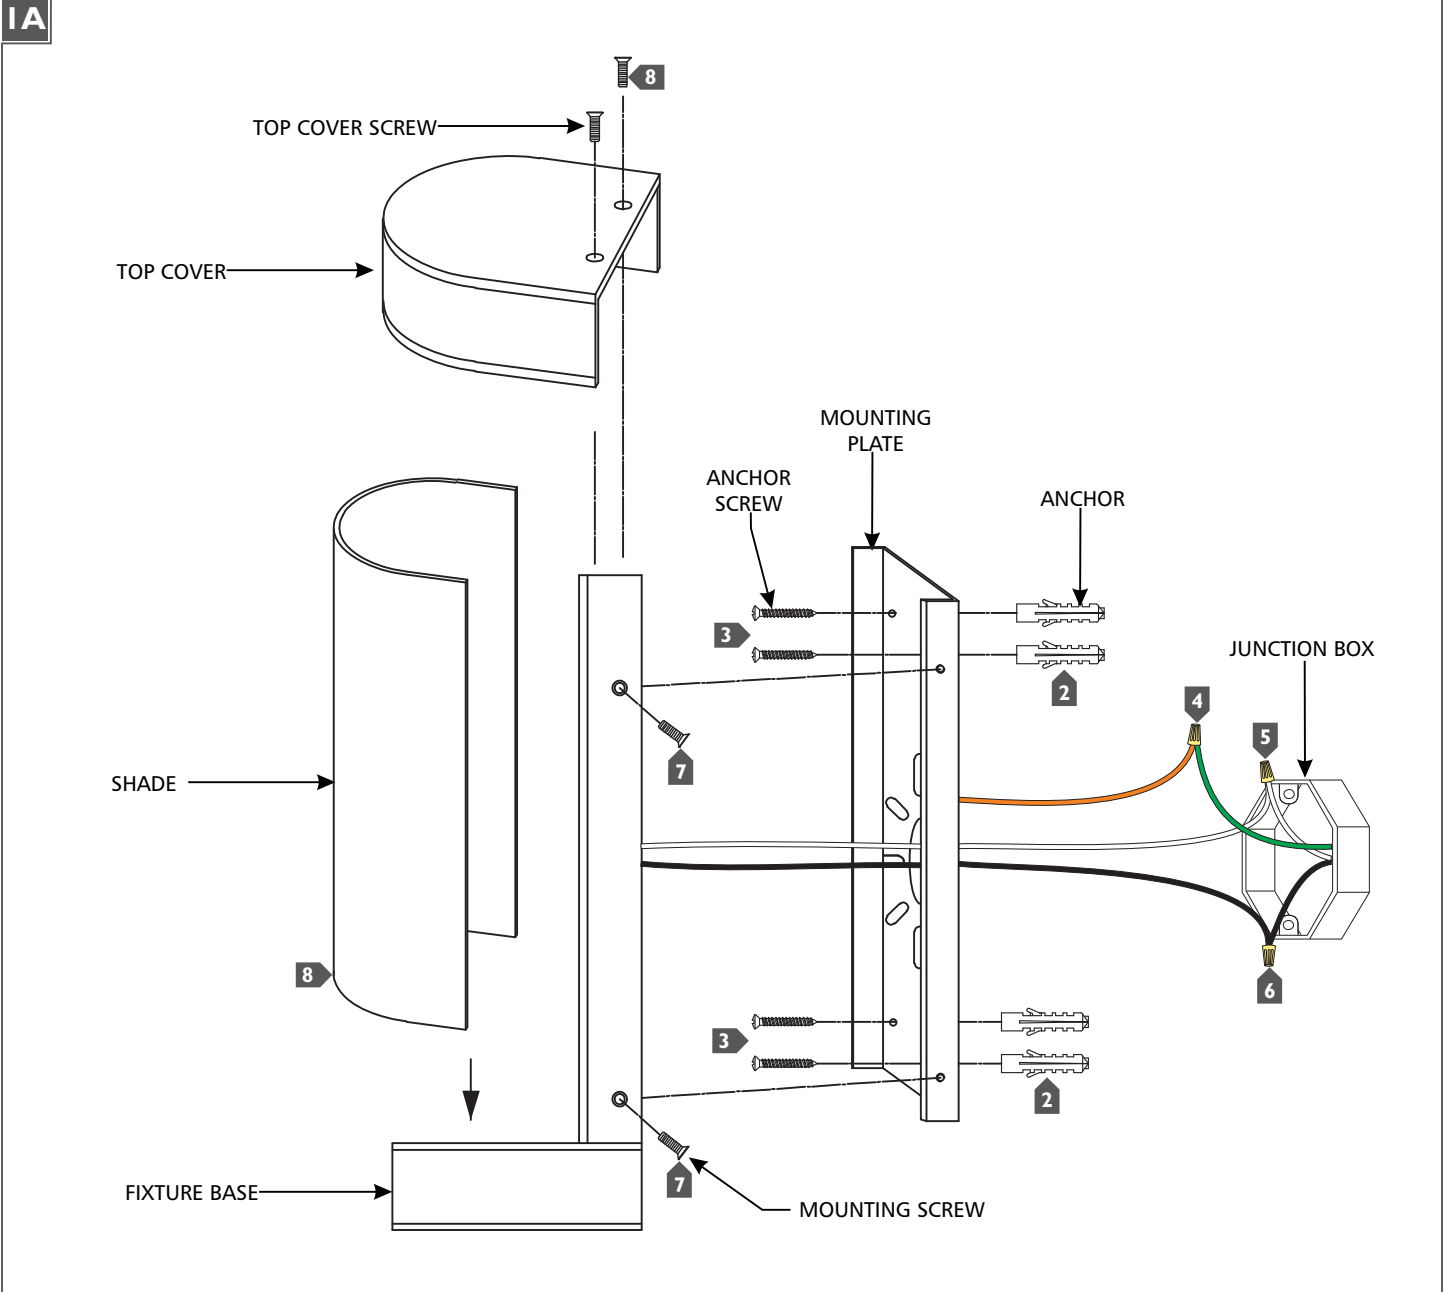

- 1** Temporarily secure the mounting plate to the junction box and mark the location of the anchors, then remove the mounting plate.
- 2** Drill appropriate sized holes at the marked locations and install the anchors.
- 3** Secure the mounting plate to the junction box and screw the anchor screws through the anchors.
- 4** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 5** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 6** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 7** Neatly place all the wires into the junction box, place the fixture base onto the mounting plate, and secure it in place using the mounting screws.
- 8** Install the shade into the fixture base, install the top cover and secure them in place with the top cover screws.