

# LED Chandelier

**CH19234**  
INSTALLATION SHEET

## START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in a clear area.
- Wear gloves at all times during this installation.
- Read instructions carefully before you start assembly.
- Keep this instruction sheet for future reference.

**Technical Support:** 1-855-855-8926

### Please Note:

- For dimming, a TRIAC or ELV type of dimmer is required.

- 1.** Remove the fixture from its original packaging. Next, remove the mounting plate **(2c)** from the canopy **(3b)** by removing the screws **(3a)**. Attach the mounting plate **(2c)** to the electrical junction box **(2a)** using the two screws **(2d)** provided in the hardware package.
- 2.** Before you mount the canopy to the mounting plate, select the hanging height of the fixture. To decrease the hanging height, first disconnect the wires **(4e)** coming from the hub **(1b)** and the wires **(4a)** from DC Driver and then, remove the extension rods **(1a)** within the connector **(1c)** and the fixture hub **(1b)**.
- 3.** Once the rods are fully connected and wires **(4e)** are pulled into the canopy, connect the wires **(4e)** to the DC Driver by using the wire connector **(4b)** provided (Black to black and white to white).
- 4.** You are now ready to mount the canopy **(3b)** to the mounting plate **(2c)**. First connect all wires from the driver to the wires from the junction box correctly G ground to ground, N neutral wire (white to white), L live wire (black to black) with provided marrettes **(2b)** from the hardware package. Push the canopy **(3b)** up towards the ceiling and secure with the screws **(3a)**.
- 5.** You have now completed the installation of your fixture, enjoy.

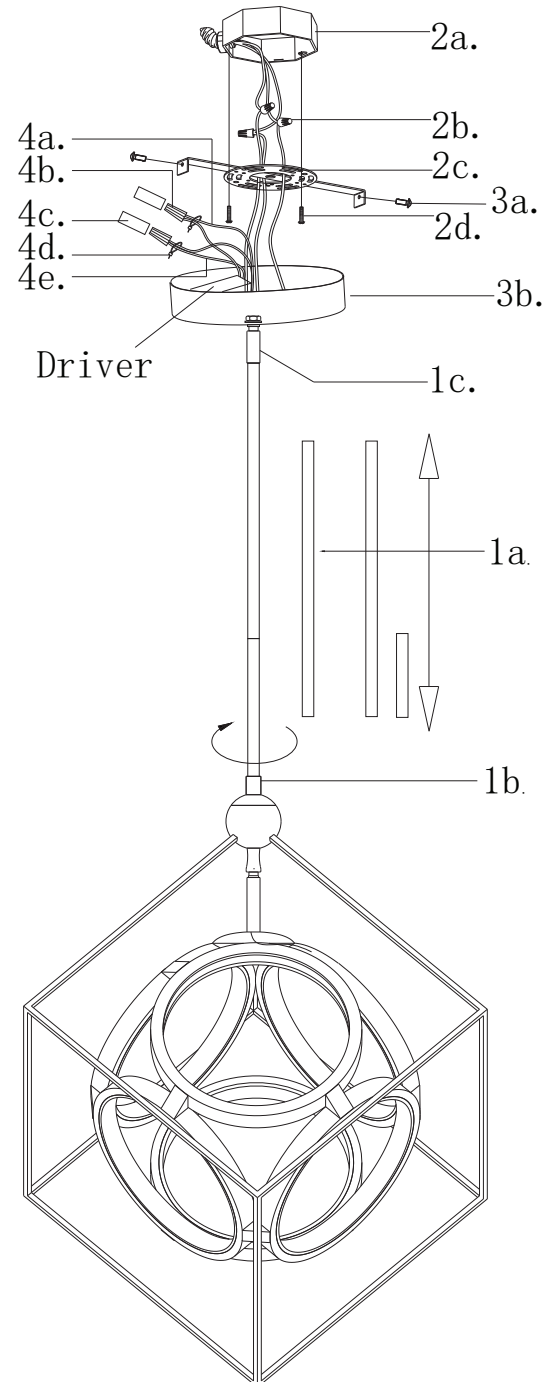

KUZCO

19054 28th Avenue Surrey, BC Canada V3Z 6M3  
T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196  
W: kuzcolighting.com  
20190104