

ASSEMBLY INSTRUCTIONS FOR YOUR RICO ESPINET RACER CHANDELIER


IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *Turn off power at switch before replacing bulbs.
- *If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
- *We strongly recommend installation by a licensed electrician.
- *This fixture is UL rated for dry locations.

ASSEMBLY INSTRUCTIONS

****SHUT OFF ELECTRICAL SUPPLY AT CIRCUIT BREAKER****

1. Remove all parts from carton. Do not throw away any parts. Move arms (N) into desired position by rotating each one at arm housing (K).
2. Remove quick link (G) from hang straight (F). Keep quick link (G) attached to loop (H).
3. Remove cross bar (A) (with threaded tube (C) and hang straight (F) attached) from canopy (D). Do this by unthreading collar (E) from hang straight (F). Canopy (D) will slip over hang straight (F). Set the canopy (D) and collar (E) aside.
4. Affix cross bar (A) (with threaded tube (C) and hang straight (F) attached) to ceiling outlet box using screws (B) provided.
5. Measure desired drop for fixture to hang and add/remove extension tubes (I) as needed. Guide wiring through extension tubes before threading tubes together.
 - **TO ADD/REMOVE EXTENSIONS: (Un)Thread the threaded tube of one extension into/out of the threaded opening of the next extension. Make sure electrical cord is pulled tight when threading extensions together to prevent damage to the wiring.**
6. Pull cord taut from above and thread bottom extension (I) onto threaded tube exiting housing (J).
7. Slip collar (E) over extensions (I) so it rests on housing (J). Slip canopy (D) over extensions (I) so it also rests on housing (J).
8. Lift fixture to ceiling and secure quick link (G) to hang straight (F). Guide wire exiting top extension (I) through the center of the hang straight (F) and threaded tube (C).
9. Make proper electrical connections described in steps 10 - 12. A LICENSED ELECTRICIAN IS RECOMMENDED.
10. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (O) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (O) and tightly wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (O) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into ceiling outlet box.
14. Slide canopy (D) up extensions (I) and hold flush against ceiling. To secure position of canopy (D), slide collar (E) up the extensions and thread it onto hang straight (F). Turn until hand tight.
15. Install five 100W MAX. Type A, medium base bulbs into the sockets located inside of shades (L).
16. Move shade (L) into desired position by rotating at joint (M). Repeat for remaining shades.
17. Reconnect main electrical supply at fuse box/ circuit breaker and test the fixture.

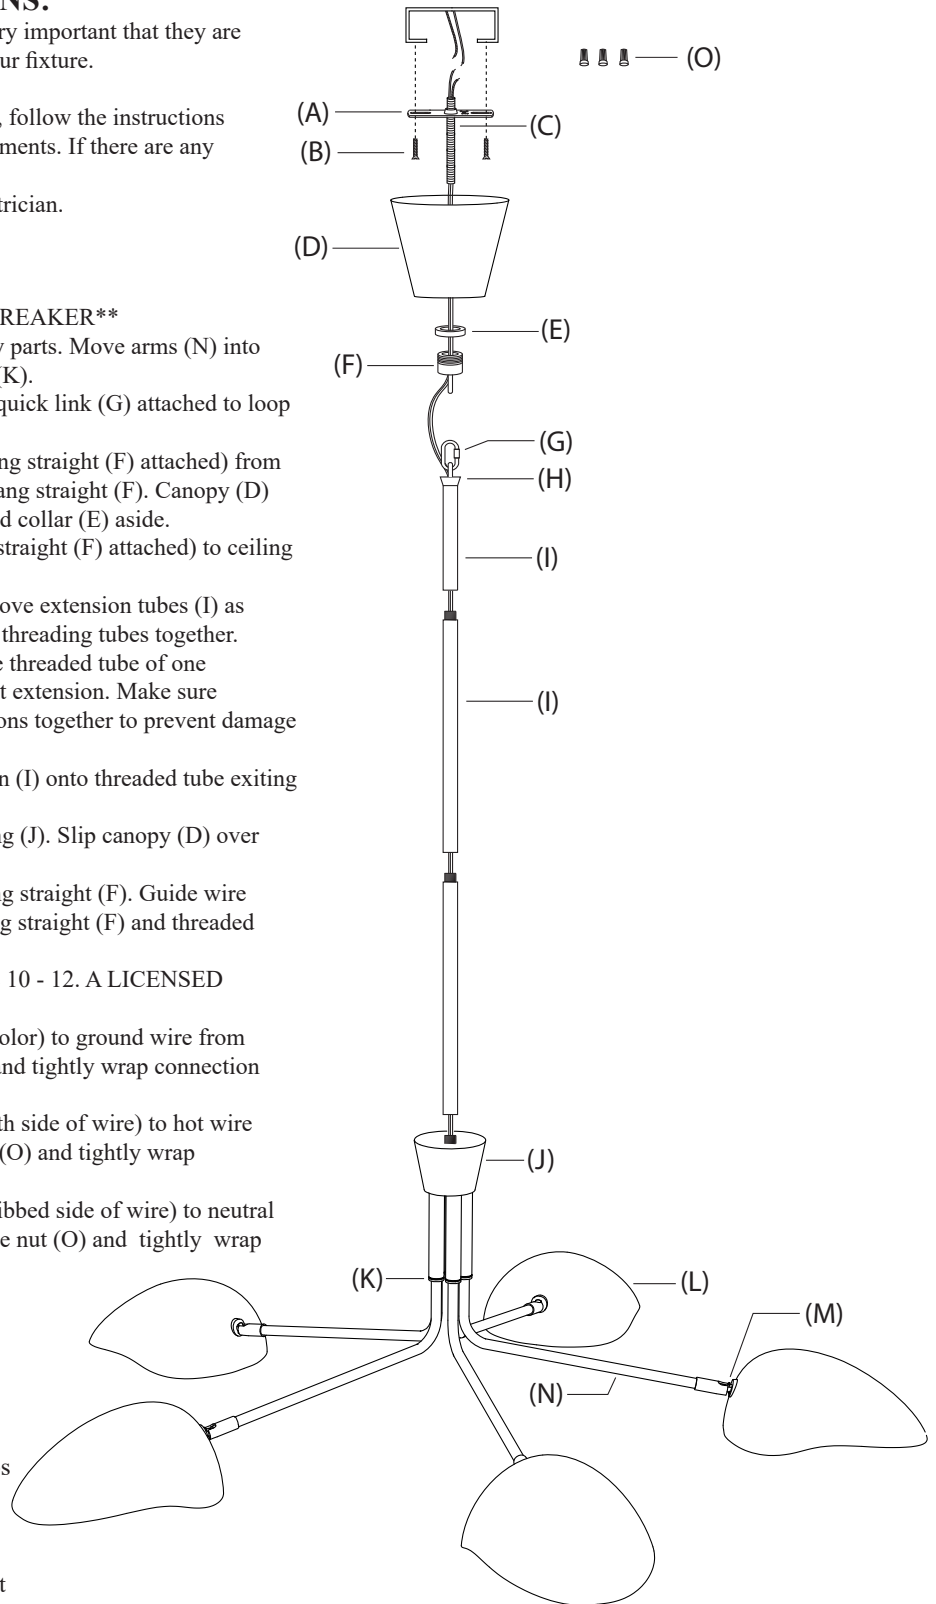

*****To clean, use sot cloth only. Do not use any chemical or abraasive cleaners.*****