


FOREVER  
SCHONBEK

SEDUCTION  
SJ4312RE



THIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
W SCHONBEK LLC.



FOREVER  
SCHONBEK

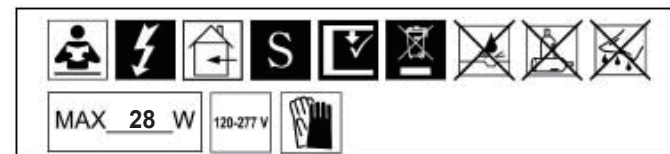

WWW.SCHONBEK.COM/INSTALLATIONMANUAL

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.


Fixture must be assembled per the provided instructions. Altering number of crystal modules may cause product failure and will void warranty.

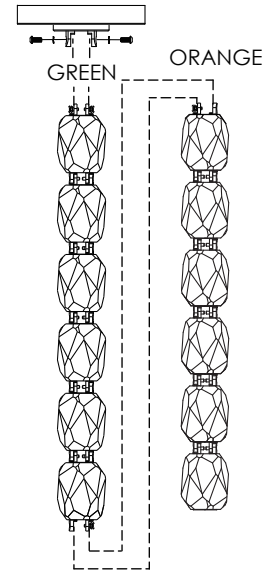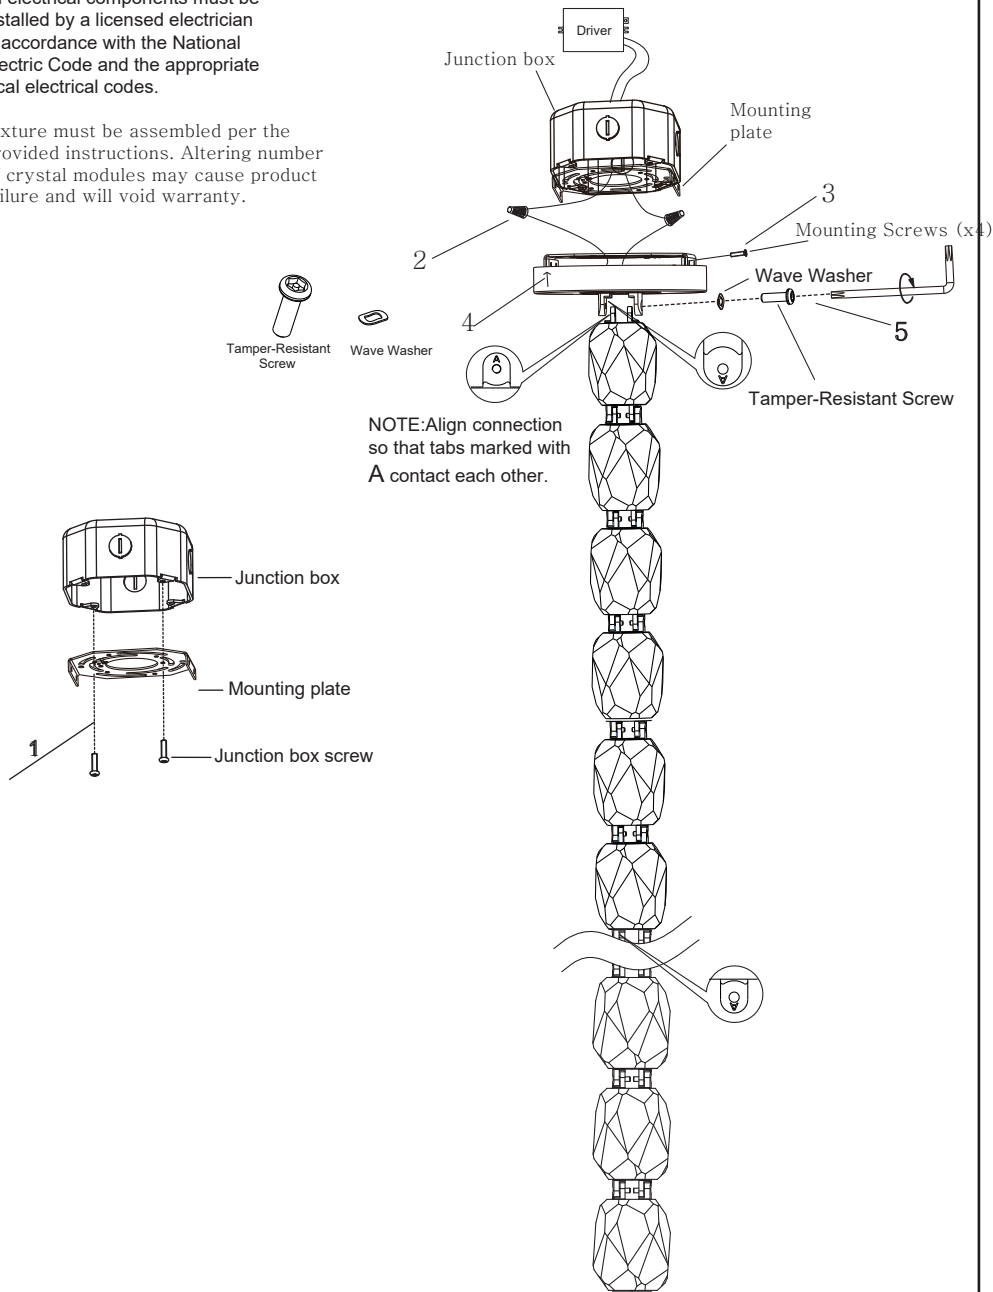

Each string of lights is identified by colored straps. Remove straps before installing. Connect sections as shown in the figure above. First, connect Green section to canopy, then attach Orange end section.

FULLY ASSEMBLE FIXTURE BEFORE TURNING ON POWER. TO ADJUST 3CCT SETTING, TURN OFF BEFORE ADJUSTING SWITCH.

NOTE: AT ALL JOINTS, TABS MARKED 'A' MUST CONTACT EACH OTHER

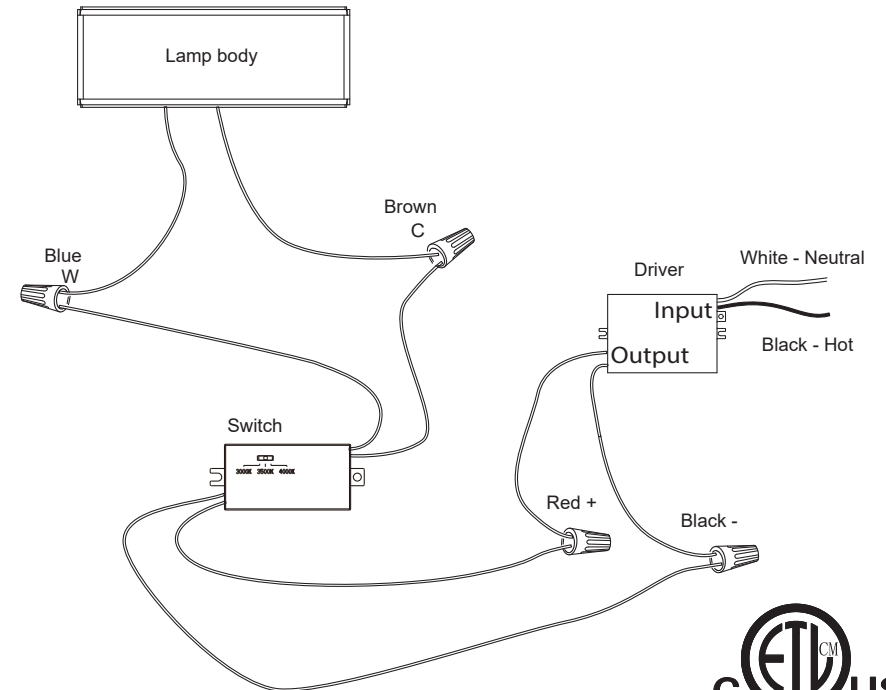


FOREVER  
SCHONBEK

SEDUCTION  
SJ4312IC




THIS DESIGN IS THE PROPRIETARY  
TRADE DRESS/TRADEMARK OF  
W. SCHONBEK LLC.

FOREVER  
SCHONBEK


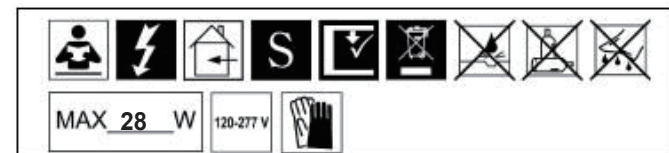


All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.


Fixture must be assembled per the provided instructions. Altering number of crystal modules may cause product failure and will void warranty.

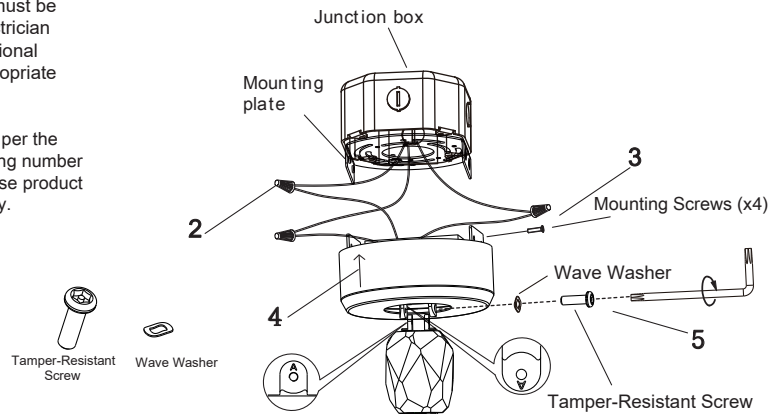

NOTE: Align connection so that tabs marked with A contact each other.

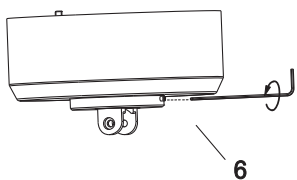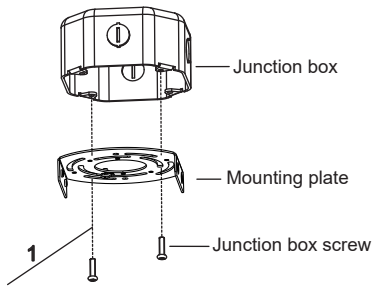

Use an Allen wrench to unscrew the set screw for 3-4 turns, about 2-3mm

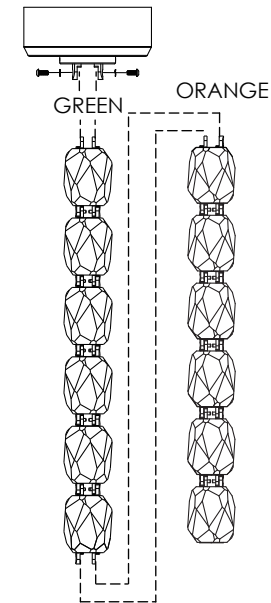

Each string of lights is identified by colored straps. Remove straps before installing. Connect sections as shown in the figure above. First, connect Green section to canopy, then attach Orange end section.

FULLY ASSEMBLE FIXTURE BEFORE TURNING ON POWER. TO ADJUST 3CCT SETTING, TURN OFF BEFORE ADJUSTING SWITCH.

**NOTE: AT ALL JOINTS, TABS MARKED 'A' MUST CONTACT EACH OTHER**

