



SEDUCTION SJ4333RE










WWW.SCHONBEK.COM/INSTALLATIONMANUAL

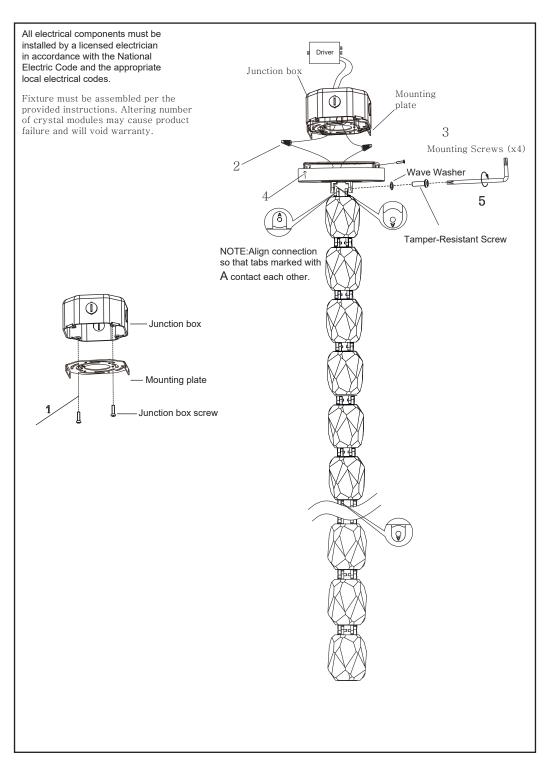

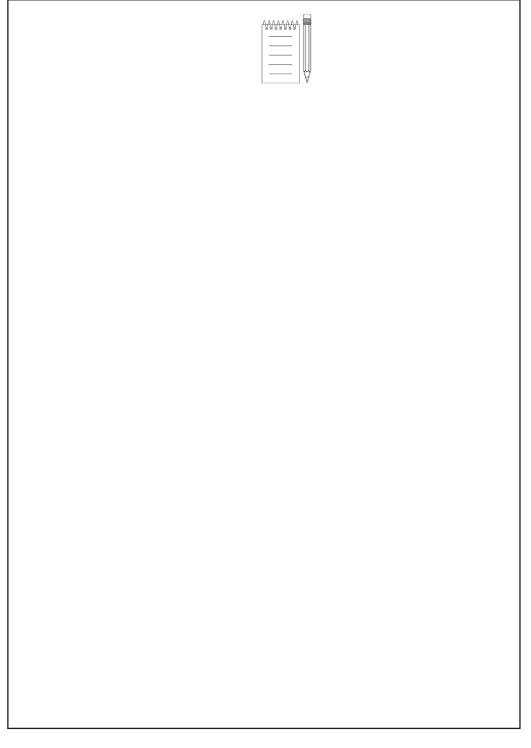

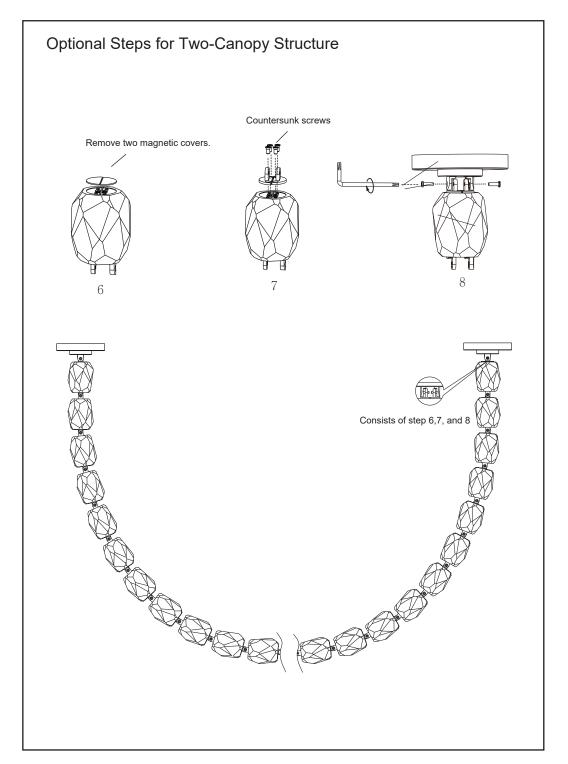


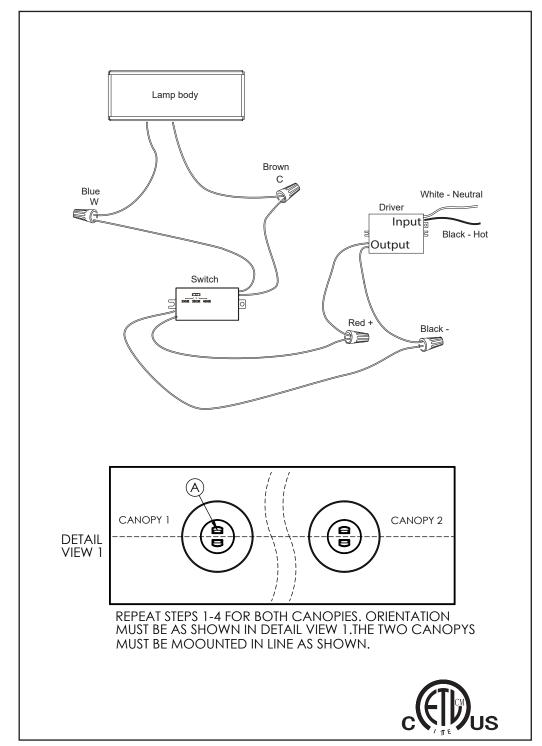


SJ4333RE

PAGE 6

DETAIL VIEW 2

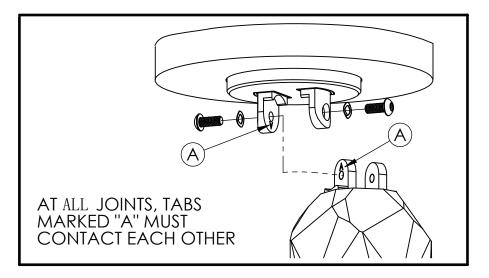

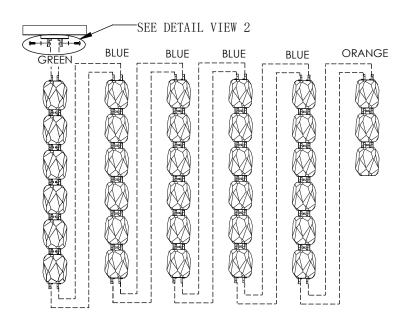

Each string of lights is identified by colored straps. Remove straps before installing. Connect sections as shown in the figure above. First, connect Green section to canopy, then attach Blue middle sections. At the end, attach Orange end section.

FULLY ASSEMBLE FIXTURE BEFORE TURNING ON POWER. TO ADJUST 3CCT SETTING, TURN OFF BEFORE ADJUSTING SWITCH.

NOTE: AT ALL JOINTS, TABS MARKED 'A'
MUST CONTACT EACH OTHER

\$J4333RE PAGE 4 \$J4333RE PAGE 5




SEDUCTION SJ4333IC





THIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF W SCHONBEK LLC.






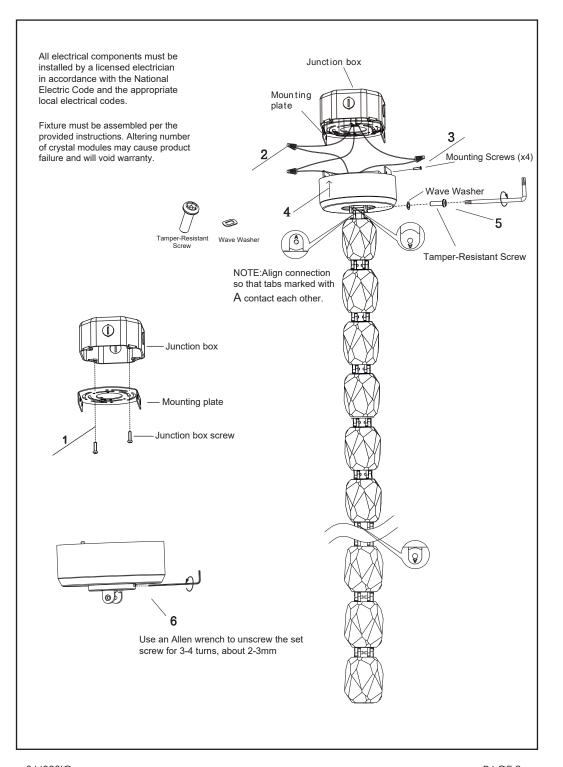


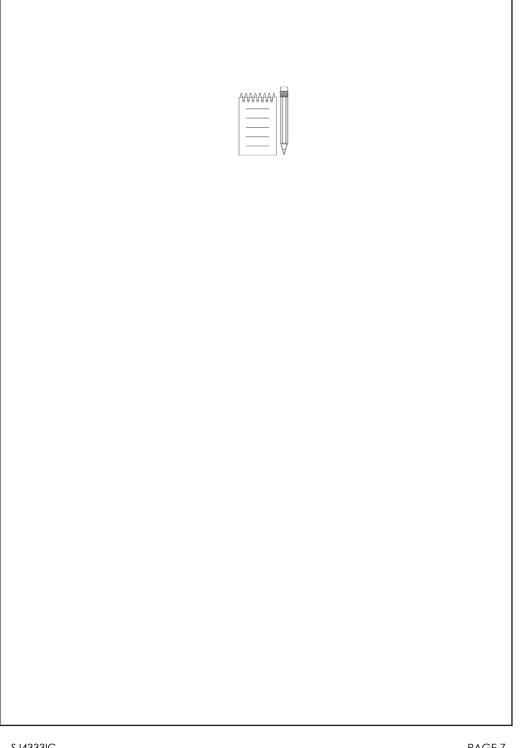


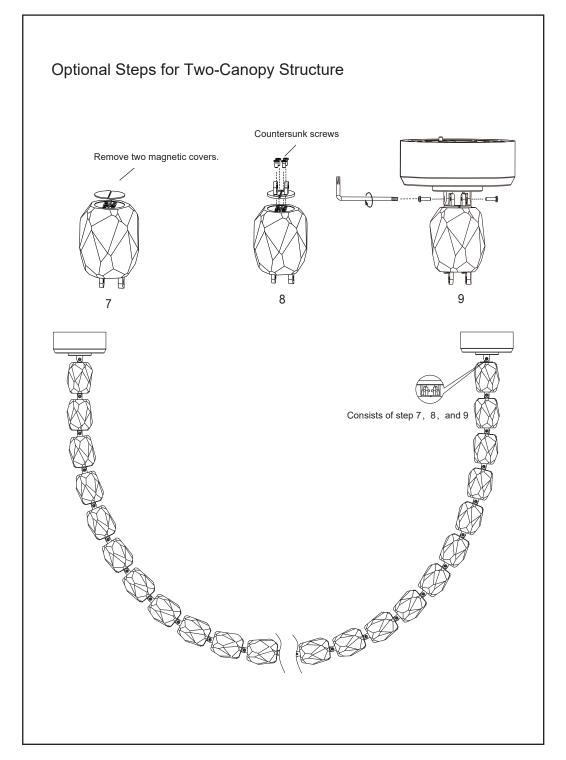

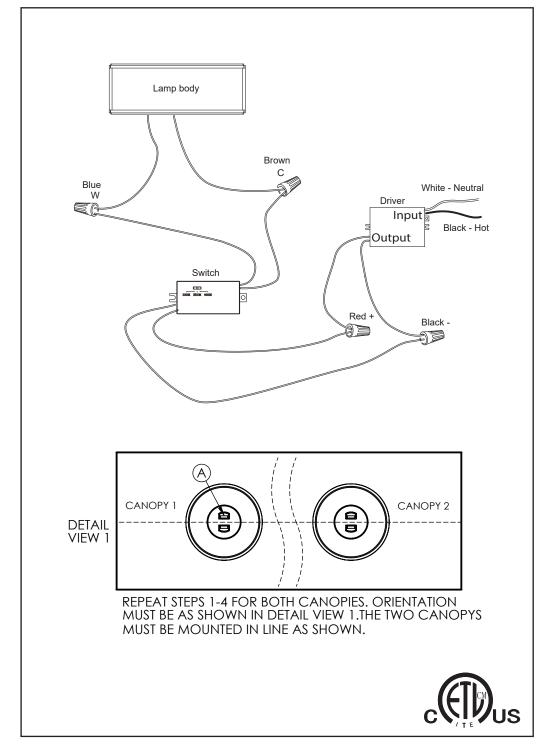

DETAIL VIEW 2

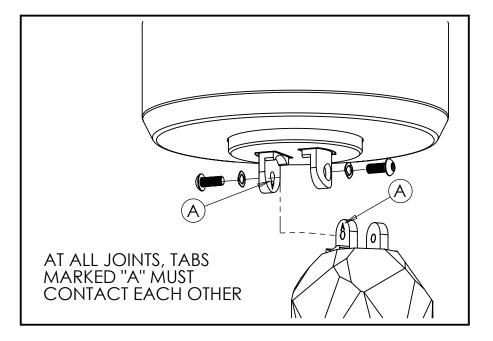

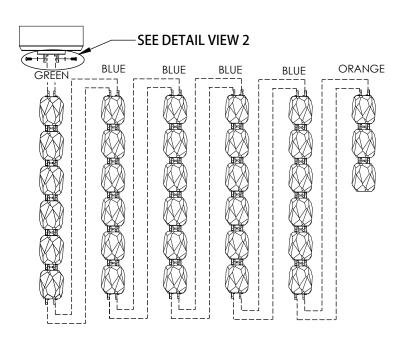

Each string of lights is identified by colored straps. Remove straps before installing. Connect sections as shown in the figure above. First, connect Green section to canopy, then attach Blue middle sections. At the end, attach Orange end section.

FULLY ASSEMBLE FIXTURE BEFORE TURNING ON POWER. TO ADJUST 3CCT SETTING, TURN OFF BEFORE ADJUSTING SWITCH.

NOTE: AT ALL JOINTS, TABS MARKED 'A'
MUST CONTACT EACH OTHER

\$J4333IC PAGE 4 \$J4333IC PAGE 5