




GENERAL PRODUCT INFORMATION:





This product is suitable for indoor dry locations only.

This product should be used with Tech Lighting Kable Lite system only.

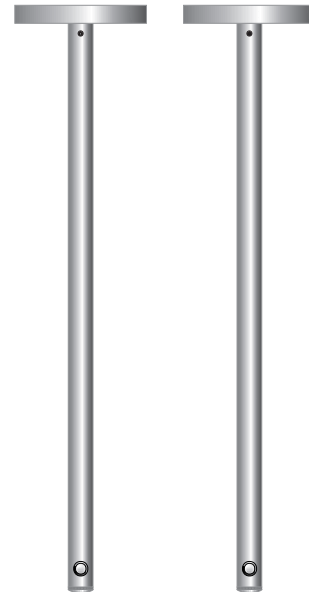


Install the Heavy Duty Standoff Post

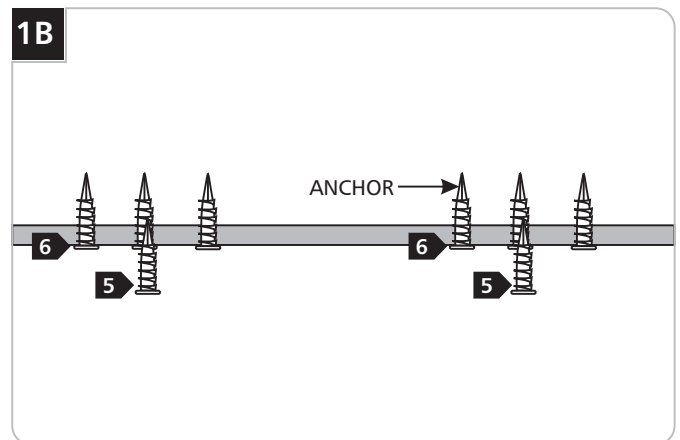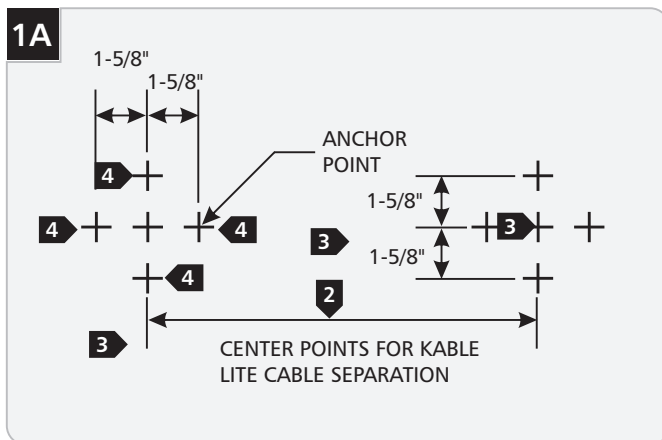


- 1 Determine the location for the standoffs.
- 2 Determine the Kable Lite cable separation.
- 3 Mark two center points for the desired Kable Lite cable separation.
- 4 From each center point, mark four other points 1-5/8" in four directions.


- 5 With a hammer tap the eight anchors at the outside marked points (exclude the center points) up to the threaded portion into the ceiling.
- 6 Screw the anchors in the rest of the way with a Phillips screwdriver.

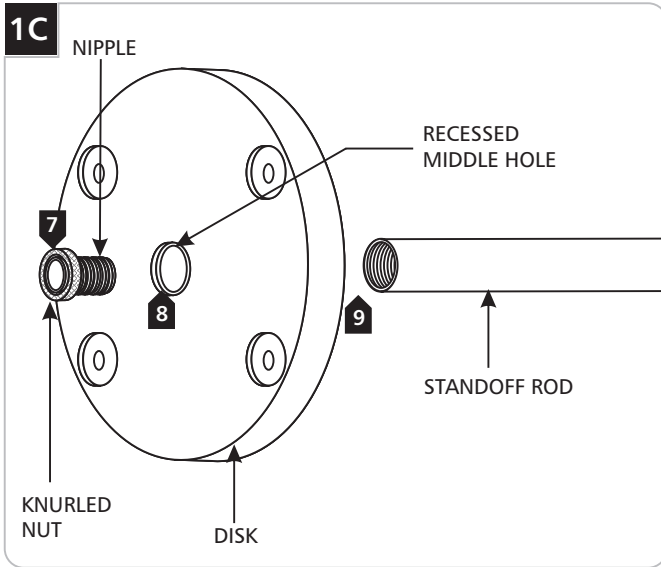

- 7** Screw the knurled nut to the nipple so that the nipple is flush with the edge of the nut.
- 8** Place the nipple with the knurled nut through the recessed side of disk.
- 9** Screw the standoff rod completely onto the nipple.

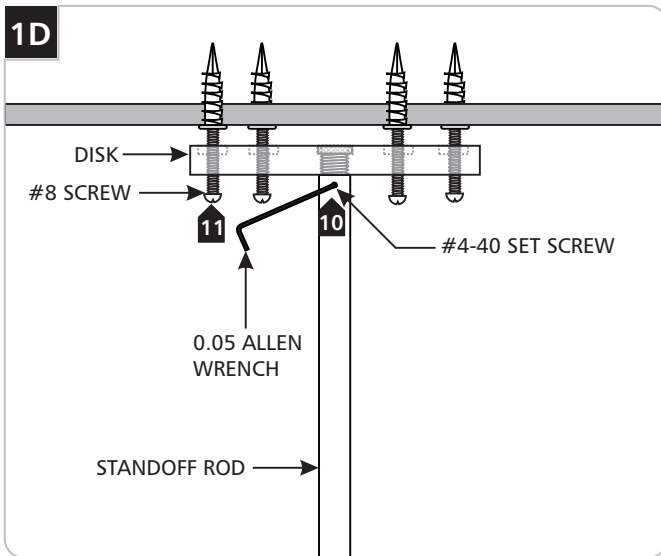

- 10** Make sure that the standoff rod holes are in the desired direction and tighten the #4-40 set screw with the 0.05 Allen wrench.
- 11** Mount the disk washer to the anchors with four #8 screws.
- 12** Repeat steps 7 through 11 for the other disk.

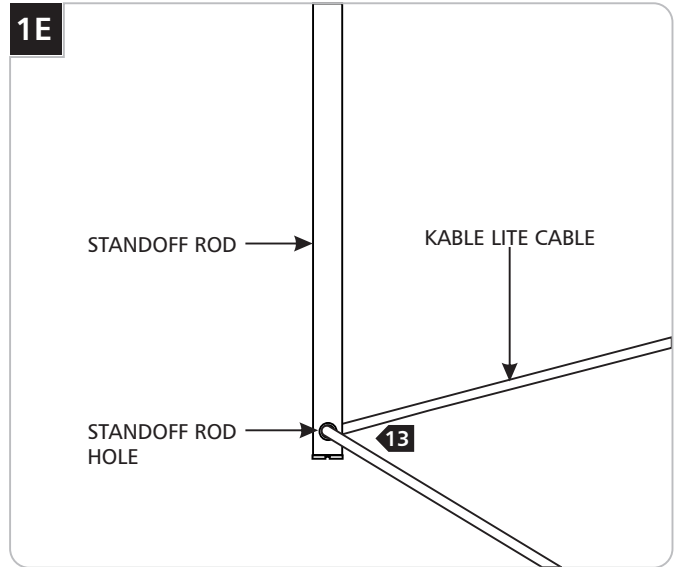

- 13** For each standoff rod, feed the Kable Lite cable coming from a turnbuckle through the insulated standoff rod hole into the other turnbuckle.

**SAVE THESE INSTRUCTIONS!**



**TECH LIGHTING®**

7400 Linder Ave, Skokie, IL 60077  
847.410.4400

[www.techlighting.com](http://www.techlighting.com)

© 2008 Tech Lighting, L.L.C. All rights reserved. The "Tech Lighting" graphic is a registered trademark of Tech Lighting, L.L.C. Tech Lighting reserves the right to change specifications for product improvements without notification.  
A Generation Brands Company