


Instructions



Blown SW3
Samuel Wilkinson
2014


Congratulations with your new Blown lamp, designed in 2014 by Samuel Wilkinson. We hope you will enjoy using this product and follow these instructions to ensure correct installation. If you have any questions or comments, please do not hesitate to contact us by mail on:

info@andtradition.com

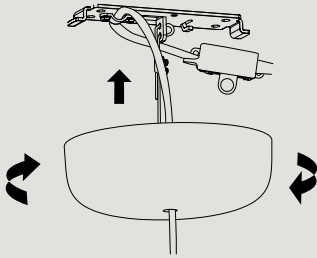


Step 4

Close the connection box, and install the plastic canopy onto the metal plate.

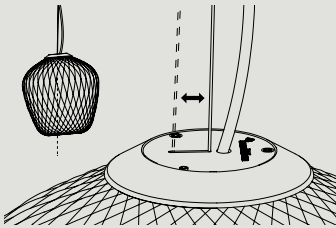

Step 5


In case the lamp (A) is not hanging straight, the lamp can be balanced by sliding the safety wire to adjust the weight balance.

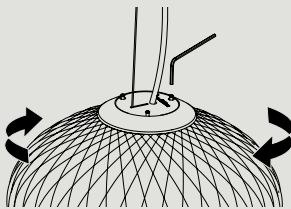

Step 6

If necessary, the metal fitting on the glass shade can be loosened slightly and turned so the weight can be adjusted in another direction.

Important: Only loosen the three screws enough to be able to turn the metal fitting on the glass - do not remove the fitting completely from the glass shade. Remember to tighten the screws again.

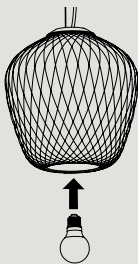

Step 7

Install the light bulb.

&Tradition®