

P1070-1

INSTALLATION INSTRUCTIONS SHEET

START FROM HERE


- Make sure power is completely off at the fuse box.
- Have your fixture installed by a qualified licensed electrician
- Prepare everything in clear area.
- Wear gloves always during this installation.
- Read instructions carefully before you start assembly.
- keep this instructionsheet for future reference.

Please Note:

- All Lighting fixtures come with pre-wired module(s)
- Unless instructed to do so, please do not touch any part of the module(s) as
- any unnecessary contact with the module could Cause permanent damage.

THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX

- **Ensure main supply is switched off**
- 2 Fit mounting bracket(1) onto mounting surface with self-taping screws(2)
- 3 connect wires(3) according to color(White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- 4 Fit ceiling plate(4) onto mounting bracket with Screw(5)
- 5 **Make wire (7) across rods(6), canopy(4) in order, and screw all rods down.**
- 6 Install the bulbs (8)(not included) firmly into lamp
- 7 Reconnect power.

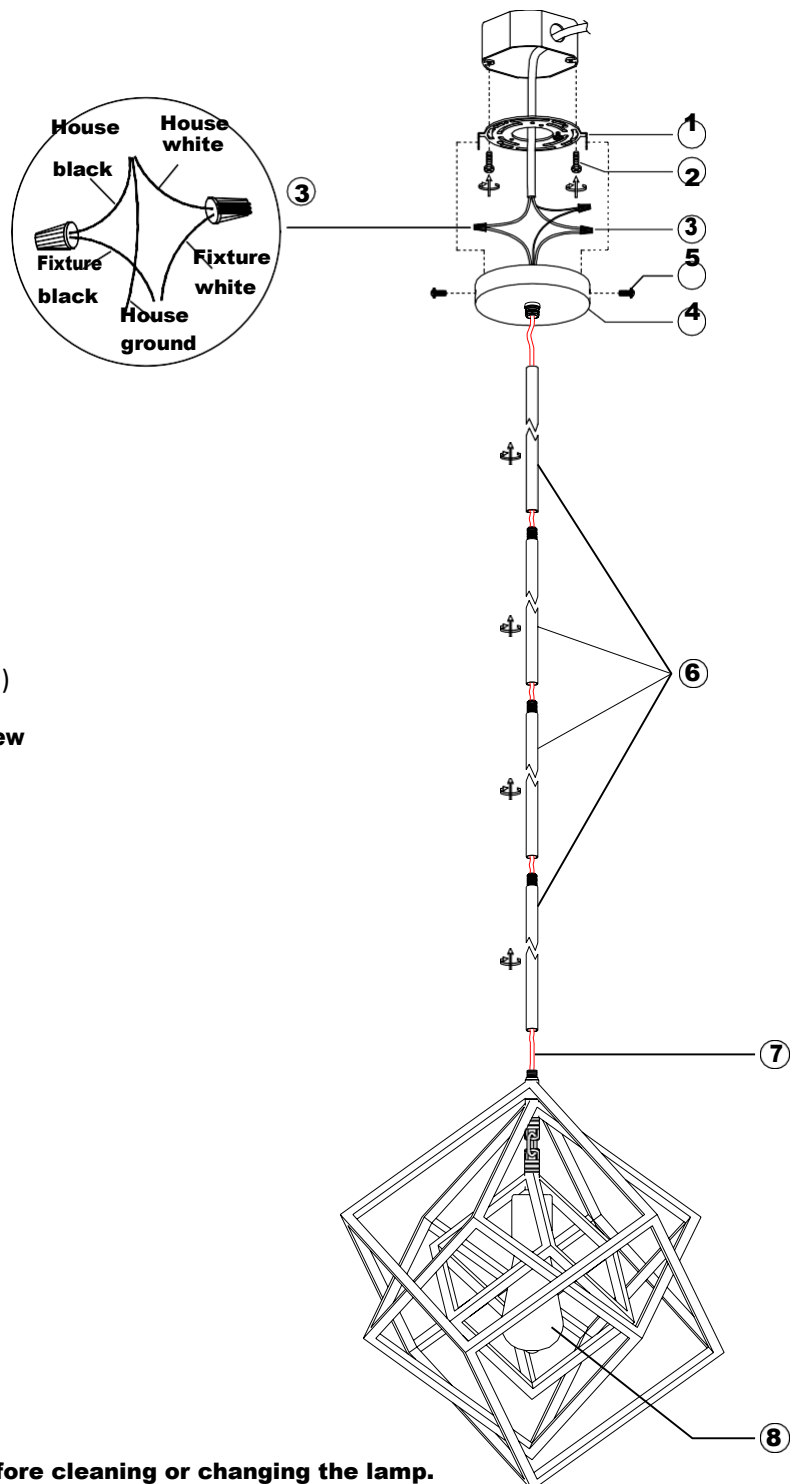

WARNING:

This fitting must be earthed.

Disconnect power and allow fitting to cool down before cleaning or changing the lamp.